



ASR Subframe Brace for RSX DC5 and Civic EP3




Brace
X 1

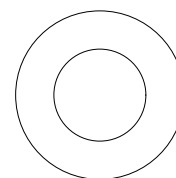

Brace Spacer
X 2



M8X30mm
Flange Bolt
X 4

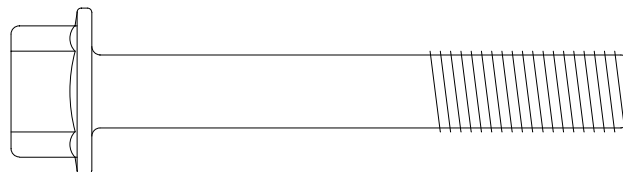

M12X100
Flange Bolt
X 2

Preparation

- Before you begin, ASR recommends that you work on a level ground. And any time you lift a vehicle with a jack or a hoist, be sure that it is always securely supported. Always use jack stands and wheel blocks. For your own safety and the safety of others, use your own good judgment.
- Be sure the exhaust muffler is cool before you begin.
- The ASR sub frame brace is designed to reuse some of the original equipment (OE) nuts and bolts. Therefore, as you remove them, keep them with their components. This will assure faster and easier installation.

Recommended Tools:

Basic Tools


Metric socket set
Metric combination wrench set
Rag or shop towel

Safety Tools


Safety goggles

Bolt Flange
22lbf-ft

OEM or Aftermarket
Anti-Roll Bar bushing bracket

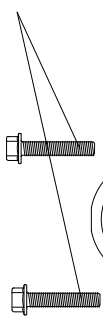

Bolt Flange
80lbf-ft



○ Brace Spacer

*Spacer goes between the subframe and brace

