




1673 W Blaylock Dr
 Phoenix, AZ 85085
 623.866.3590
 Phasehangar@gmail.com
 www.Phasehangarresin.com

Wash parts before use
 Use Cyanocrylate glue to install
 Wear Eye Protection when cutting parts from casting blocks
 Remove Parts in a Well Ventilated Area
 Copyright 2019, Phase Hangar Resin, LLC

Master Pattern by Gabe Pincelli

6. Remove the shaded portion aft of outer seal surrounding the clear portion of the canopy. It helps to run some acrylic paint into the engraved lines per the pictures. Last photo shows the final look.

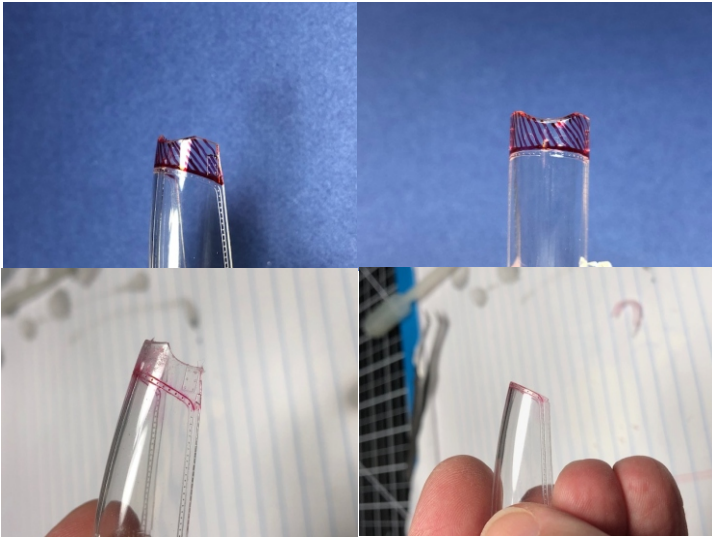

8. Final Assembly! Replace the kit intakes with the new resin set. Attach kit part F22 to the bottom of the resin nose as shown. Install resin aft ECM Antennas. Lastly attach the fin tip ALR-45 'Hot Dog' antenna to the fin tip. Once all that is complete add the kit brake chute parts D11 and E28.

48056

Instructions Continued

5. Assemble the fuselage per the kit instructions, then attach the hump and nose.



7. Install the canopy fairing per the photos.

