




1673 W Blaylock Dr
 Phoenix, AZ 85085
 623.866.3590
 Phasehangar@gmail.com
 www.Phasehangarresin.com

Wash parts before use
 Use Cyanocrylate glue to install
 Wear Eye Protection when cutting parts from casting blocks
 Remove Parts in a Well Ventilated Area
 Copyright 2019, Phase Hangar Resin, LLC


48056 OA-4M Skyhawk External Upgrade For Hasegawa

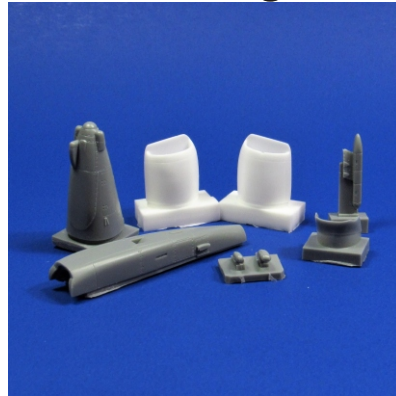

What you get:
 New radome, Avionics Hump, Canopy Fairing,
 Aft ECM Antennas, Fin Tip (Hot Dog) Antenna,
 Left Intake, Right Intake

Master Pattern by Gabe Pincelli


1. Fuselage Hump Preparation
 Remove the red hatched portion
 of the kit canopy fairing as shown.

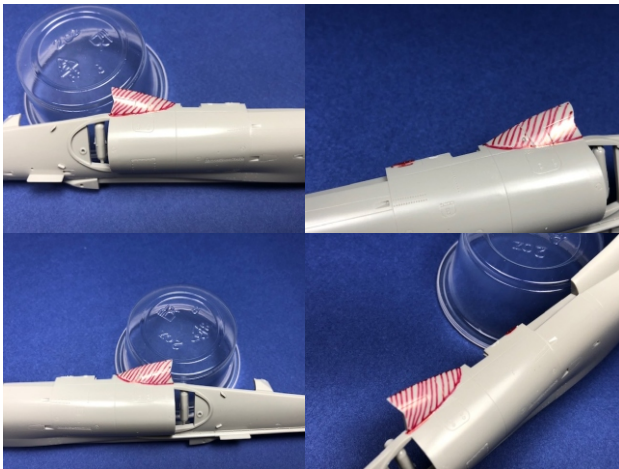

2. Remove the remnants
 of the canopy hinge slots
 shaded in red below.



3. Remove upper fuselage anti-collision
 light mount and flatten out the rounded
 upper fuselage profile in the red shaded areas.

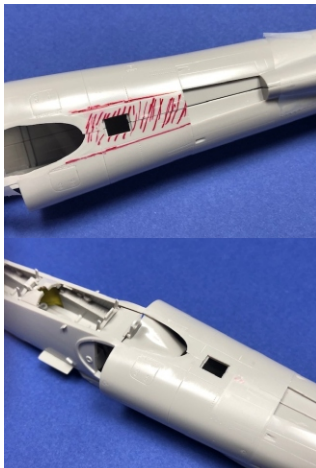

4. Radome prep: You can either remove
 the plastic from the forward fuselage or
 hollow out the aft end of the resin nose.
 If you are removing the plastic on the kit,
 remove the red shaded areas below. If hollowing
 out the resin nose, see the bottom right picture.

