



# Fire Pro 900

First you assemble 4 separated stands to a small ring and big ring then screw 4 bolts and 4 nuts for each stand.

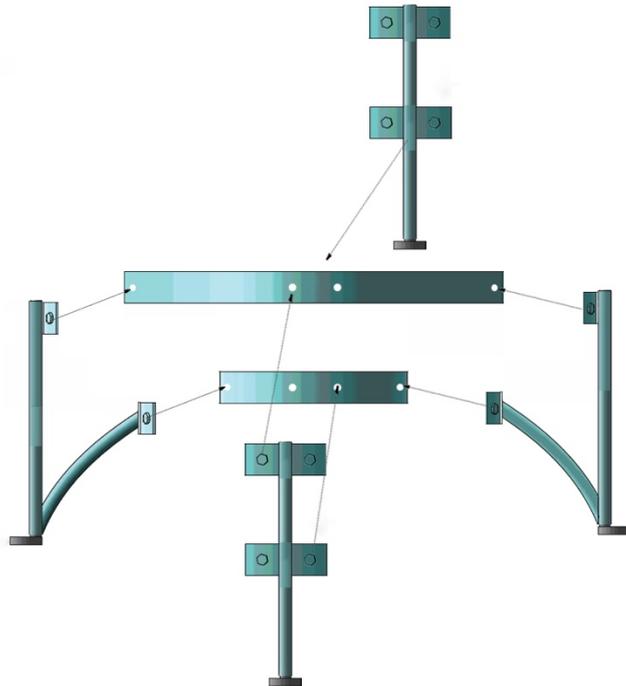

With Fire Pro 900 Stand => all completed when screwing 16 bolts and 16 nuts. Insert bowl into top ring.

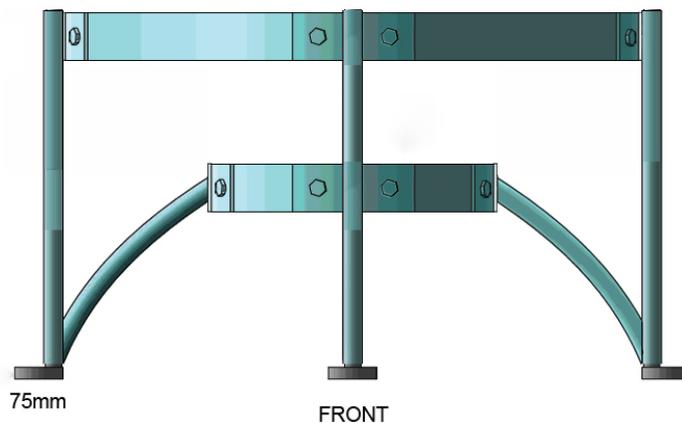

## Uprights