
KORBER MODELS

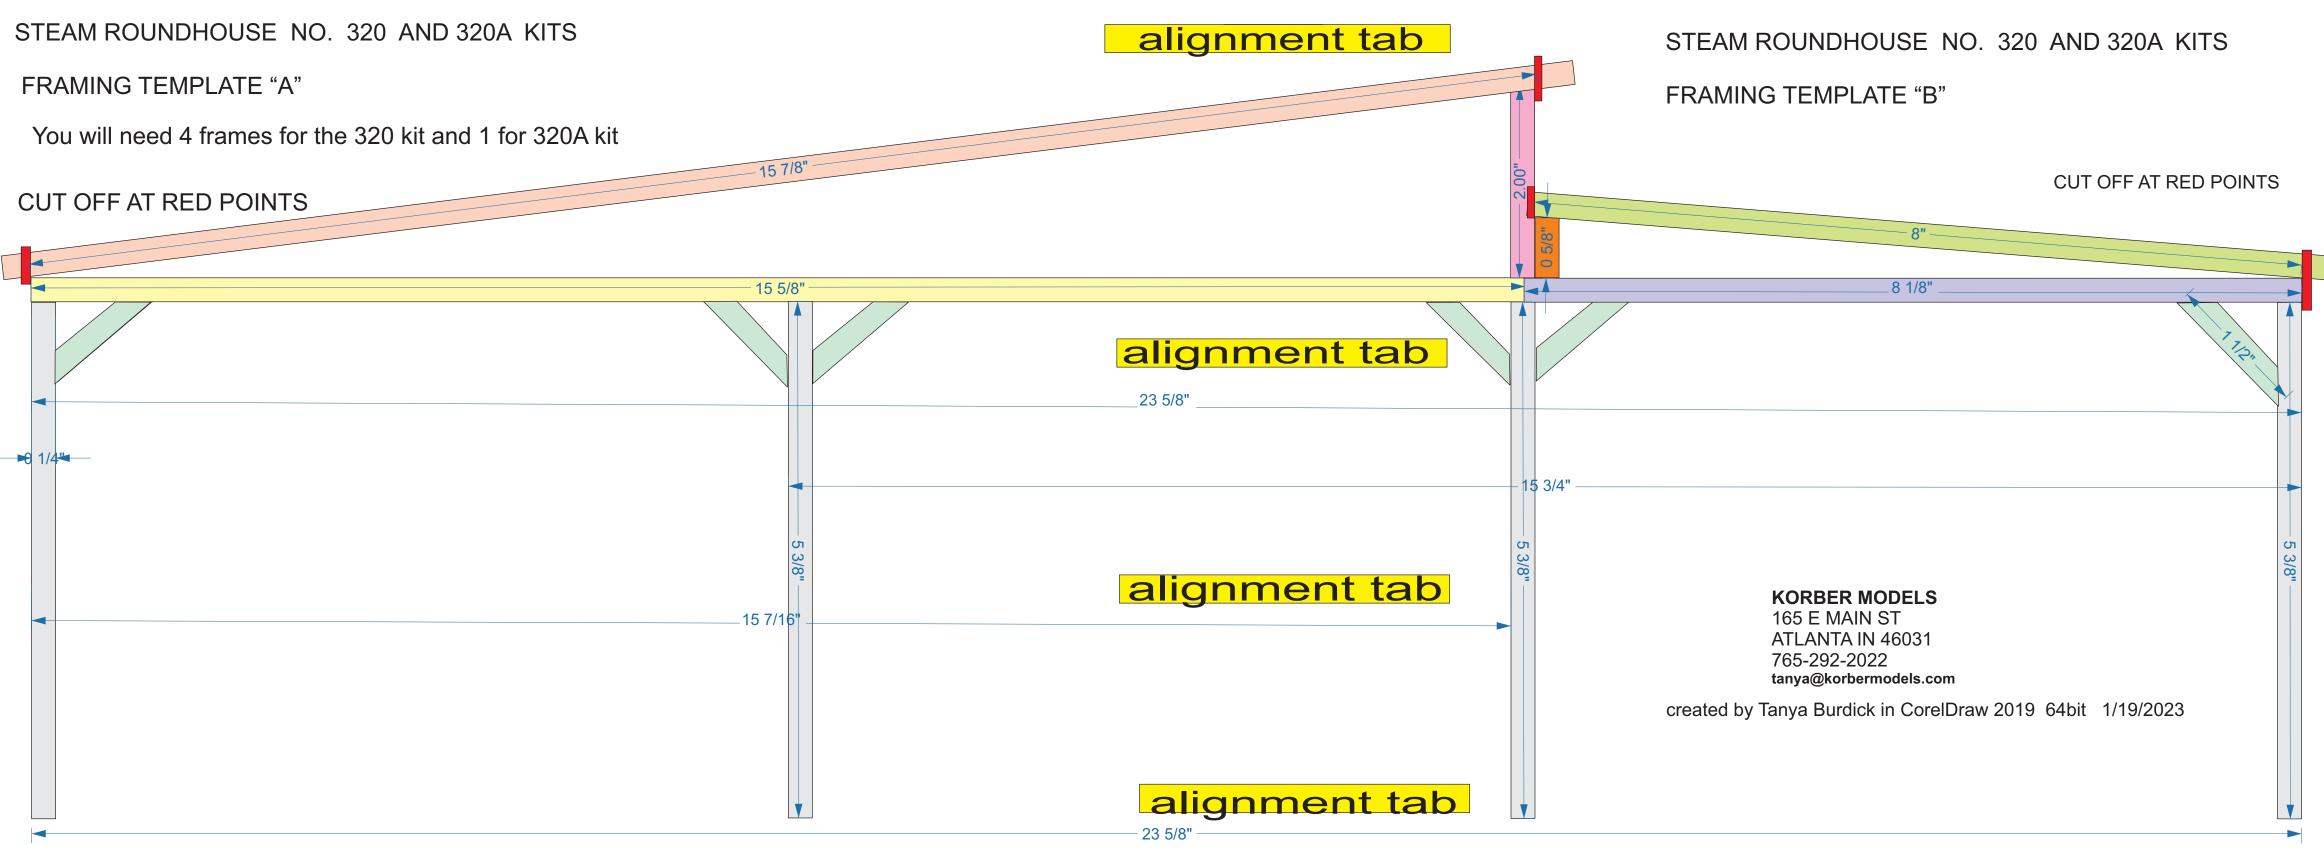

- 1. Align the 2 templates by cutting along template "B"left edge so you can match up the colored edges better. Also use a tape measure to make sure the length is 23 5/8" and square.
- 2. Cover templates with wax paper or contact paper once taped together. This is now your glueing jig for frames.
- 3. I recommend attaching this template to a piece of wood so you can add wood at bottom for square legs. Also add nails or small blocks of wood to hold the wood in place while glue dries.
- 4. You will need 4 frames for the 320 kit or just 1 for 320a.
- 5. The wood does not come the exact size, you will need to cut it down. The measurements are accurate.