

TUTORO Shark Fin Nozzle Anchor


Before you cable tie anything in place, offer the Shark Fin up to the swing arm and see how close you can get it to the position illustrated below - the aim is to have the shortest possible route from the Fin to the sprocket. Once you are happy with the location, cable tie the Shark Fin to the swing arm (using 2 x 4.8mm cable ties) ensuring you align the Shark Fin on the inner edge of the swing arm for the closest possible fit to the sprocket.

Insert the nozzle into the section of hose that contains the wire, push the nozzle in so that it is as close to the wire as you can get it.

Loosely secure the hose to the Fin with the 3 x 2.5mm cable ties as illustrated below, now test fit but do not tighten yet as you may need to adjust the set up. The gap between the tip of the Fin and the sprocket is bridged by bending the hose (with the wire inside) in towards the sprocket. If in doubt leave it a little long as the nozzle can be trimmed back if you have too much.

Once happy with the fit tighten all three 2.5mm cable ties to secure the hose to the Fin, the nozzle will move during this process but you can now make the final adjustments and align the nozzle by adjusting the bend in the hose so that the tip of the nozzle is lightly pressed against the side of the sprocket but inboard of the teeth.

Once you are happy with the nozzle installation route the hose back up to the Oiler following the instructions in the TUTORO Workshop Manual.

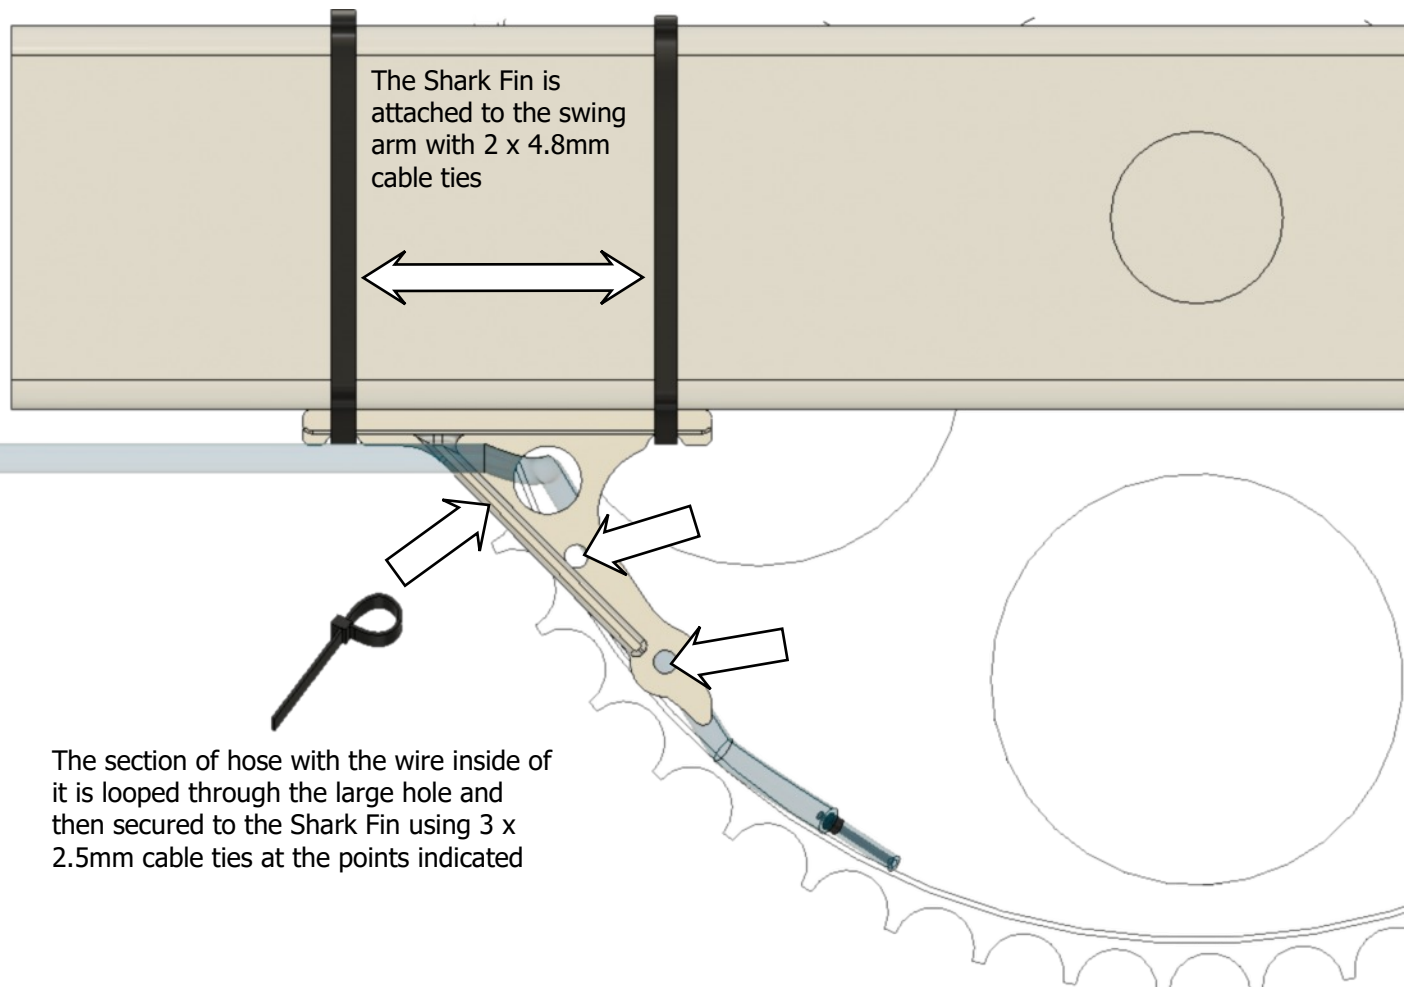

There is a video on installing the Shark Fin on the TUTORO website - please see "Shark Fin" in the Videos menu.
www.tutorochainoiler.com/pages/videos

PLEASE NOTE :

The TUTORO Shark Fin Nozzle Anchor is NOT a safety device. Its use is for securing the TUTORO Single feed Nozzle in position only. The Shark Fin is not intended as a replacement for a motorcycle manufacturers Toe or Chain guard and should not be treated as such.