


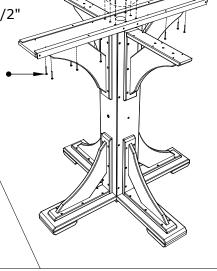


5. Align (C) Top Long Cross Piece with Pedestal Column & Braces, be sure umbrella holes are aligned, Attach using 8 - 2 1/2" Screws for Pedestal Column & 12 - 1 1/2" Screws for Braces

1 1/2" Screws

7. Lay (A) Top on a soft blanket to prevent scratches, Position base so all Numbers & or Letters match. Attach (A) Top using 16 - 2" Screws in predrilled holes.





6. Align (E) Top Short Crosspieces with Braces keeping back end flush with (C) Top Long Crosspiece Attach using 12 - 1 1/2" Screws. Make sure that Aluminum is on top side.

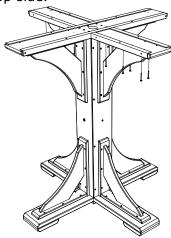

8. Tighten T Bolts to add stability to Umbrella

2 1/2" Screws

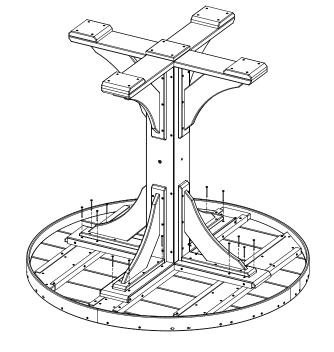

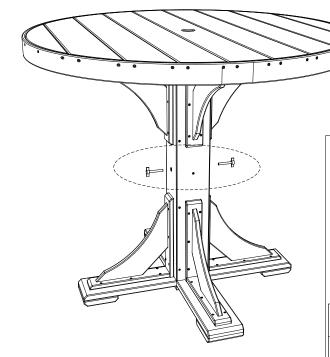



4' Round and 41" Square Poly Table Assembly Instructions

12/7/ 2017

R.M.