



Thank you for supporting our mission to create a greener planet through reforestation. Before starting, please make sure all pieces listed in this manual are complete. And save this manual for future reference.

When assembling, we recommend placing all wooden parts on a soft, clean and flat surface to avoid scratches and damage while assembling your brand new MasayaCo piece.

Need any assistance?

Feel free to contact our Customer Service Team.


(615) 953 - 9373,

customerservice@masayacompany.com

or using our chat on www.masayacompany.com


45 Min 2 people Wrench

ID	Description	Qty	Reference
(A)	Headboard	1	
(B)	Side Frame Right	1	
(C)	Side Frame Left	1	
(D)	Foodboard	1	
(E)	Slatted Mattress	2	
(F)	Slatted Mattress Holders A	2	
(G)	Slatted Mattress Holders B	2	
(H)	Hex Nut	8	
(I)	Flat Washer	8	

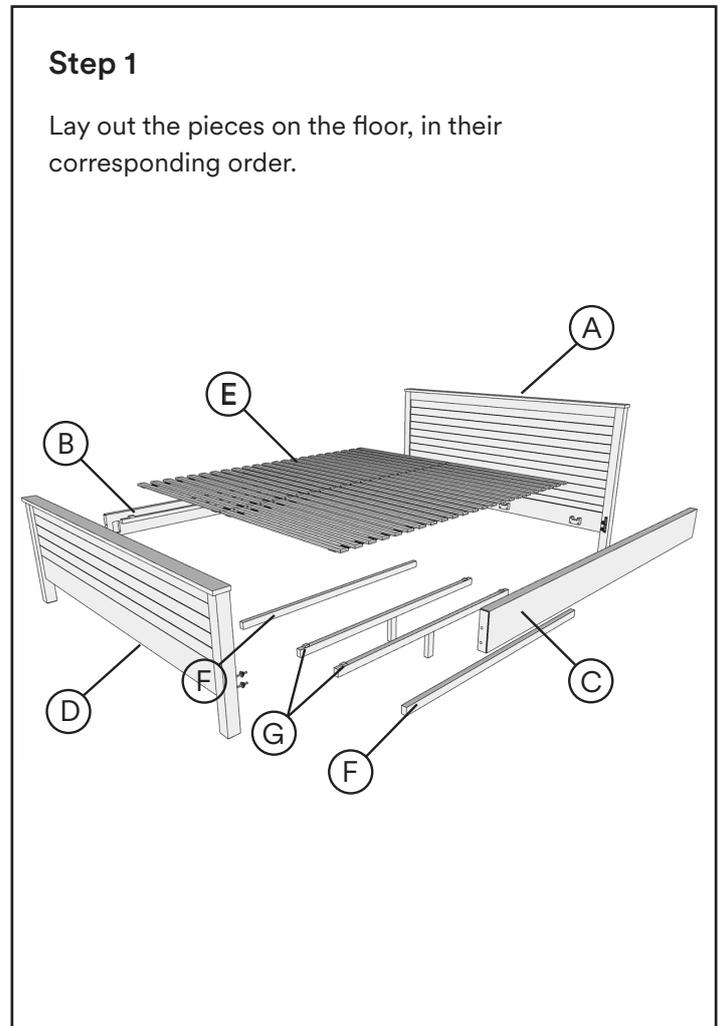


Step 2

Attach together the footboard (Piece D) with the left side frame (Piece C). Fix the frames with a Hex Nut and Flat Washer.

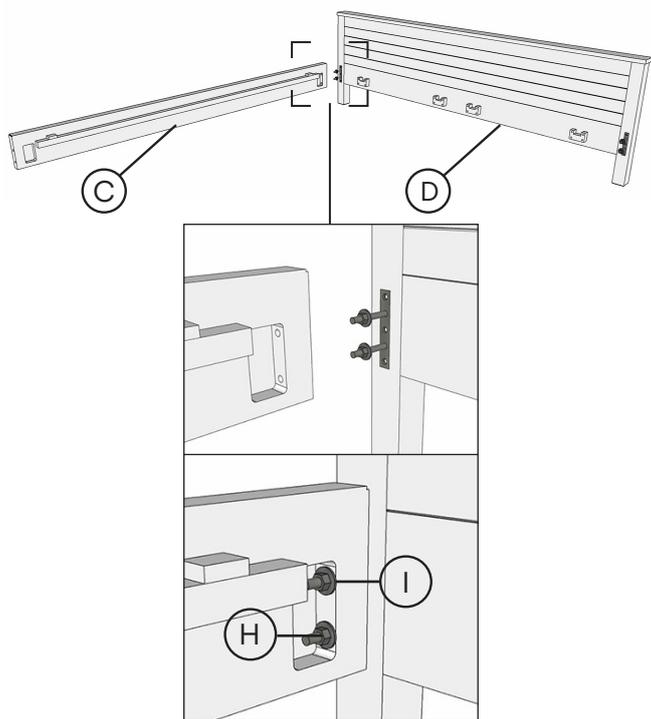


Step 3

Attach the right side frame (Piece B) to the footboard (Piece D).

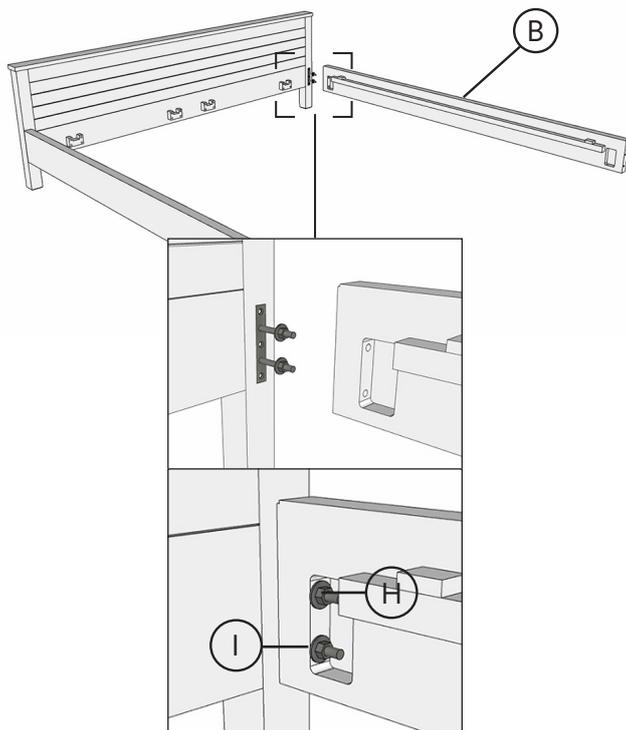


Step 4

Attach the frame pieces to the headboard (Piece A).

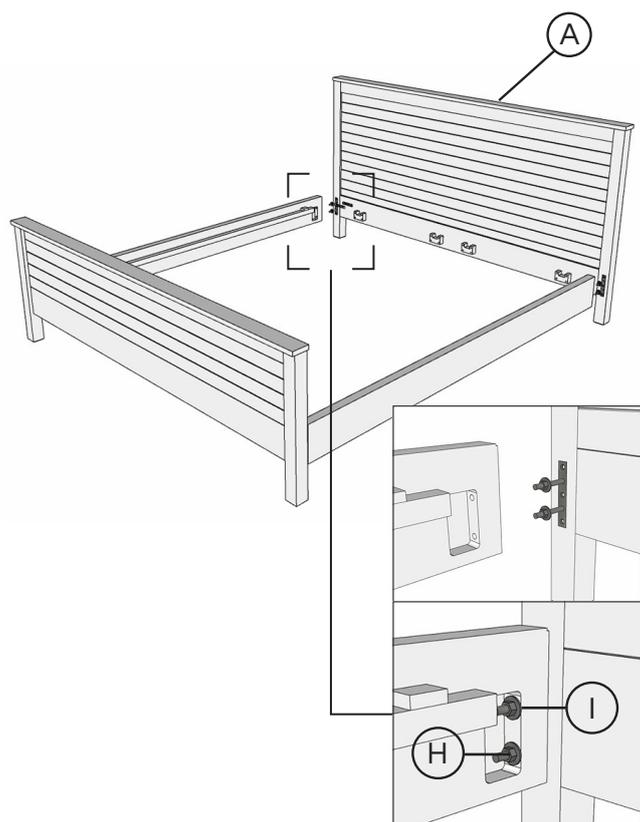


Step 5

Add the outer mattress holder (Piece F) and fix them in place with a Hex Nut and Flat Washer.

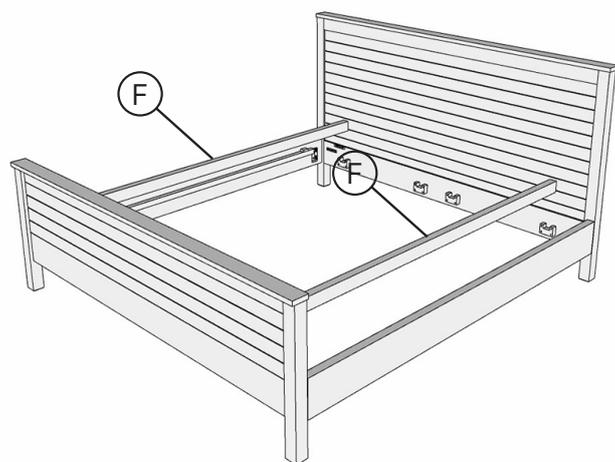


Step 6

Screw in place the remaining mattress holder (Piece G).

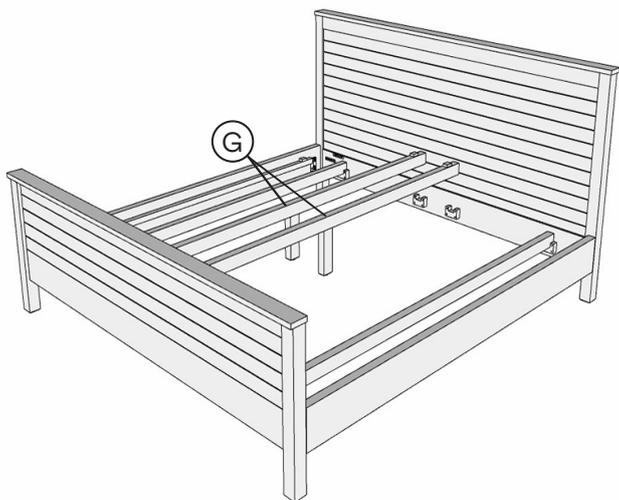

Step 7

Lastly, add the slatted mattress in place (Piece E).

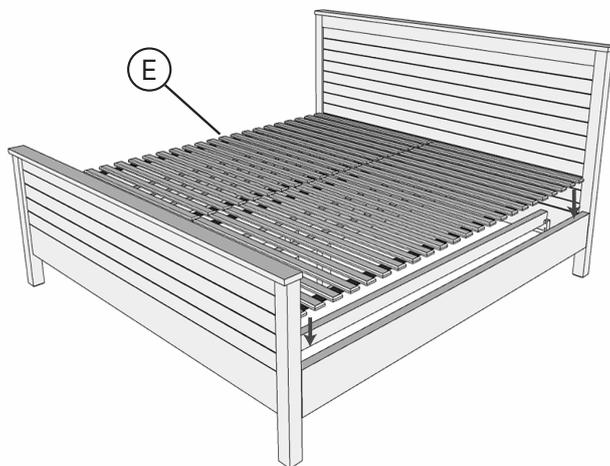



Thank you for supporting our mission to create a greener planet through reforestation. Before starting, please make sure all pieces listed in this manual are complete. And save this manual for future reference.

When assembling, we recommend placing all wooden parts on a soft, clean and flat surface to avoid scratches and damage while assembling your brand new MasayaCo piece.

Need any assistance?

Feel free to contact our Customer Service Team.


(615) 953 - 9373,
customerservice@masayacompany.com
 or using our chat on www.masayacompany.com

⌚ 45 Min 👤 2 people 🗝️ Wrench

ID	Description	Qty	Reference
(A)	Headboard	1	
(B)	Side Frame Right	1	
(C)	Side Frame Left	1	
(D)	Footboard	1	
(E)	Slatted Mattress	1	
(F)	Slatted Mattress Holders A	3	
(G)	Hex Nut	8	
(H)	Flat Washer	8	


Step 1

Lay out the pieces on the floor, in their corresponding order.

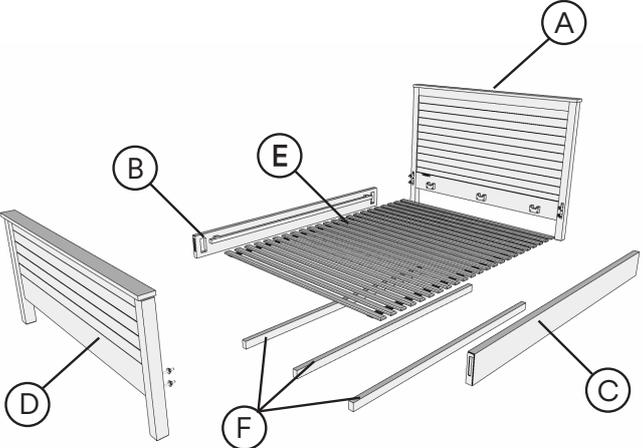


Step 2

Attach together the footboard (Piece D) with the left side frame (Piece C). Fix the frames with a Hex Nut and Flat Washer.

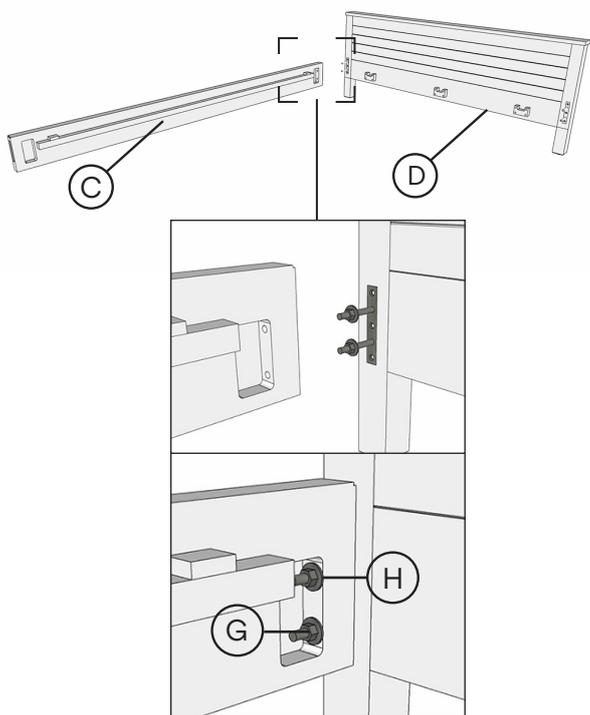


Step 3

Attach the right side frame (Piece B) to the footboard (Piece D).

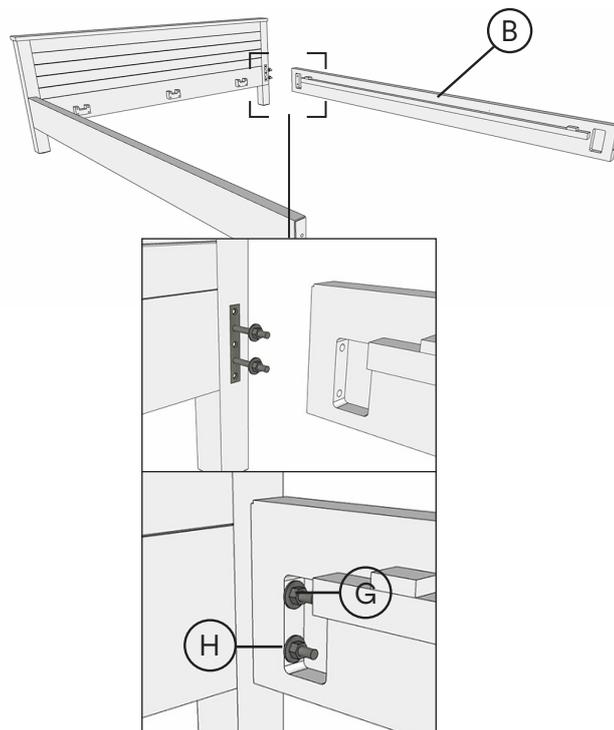


Step 4

Attach the frame pieces to the headboard (Piece A).

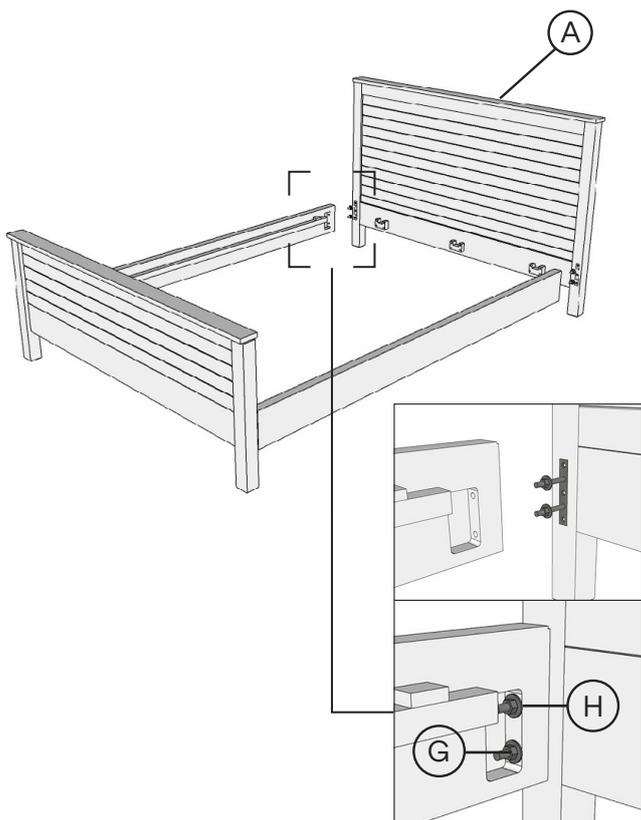


Step 5

Add the outer mattress holder (Piece F) and fix them in place with a Hex Nut and Flat Washer.

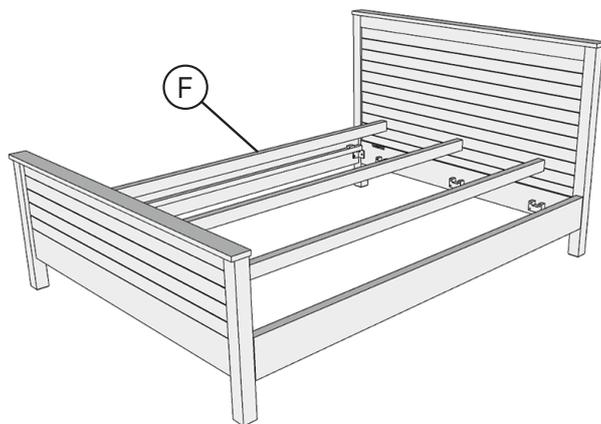

Step 6

Lastly, add the slatted mattress in place (Piece E).

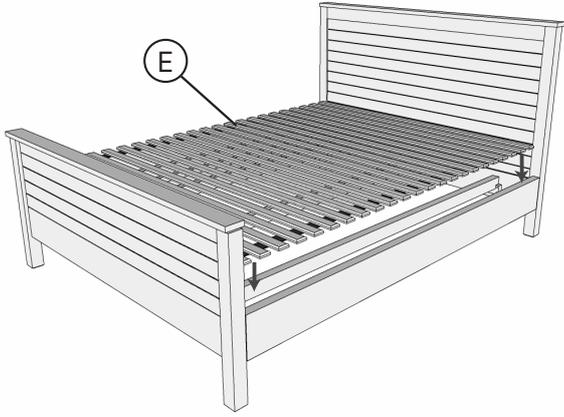



Thank you for supporting our mission to create a greener planet through reforestation. Before starting, please make sure all pieces listed in this manual are complete. And save this manual for future reference.

When assembling, we recommend placing all wooden parts on a soft, clean and flat surface to avoid scratches and damage while assembling your brand new MasayaCo piece.

Need any assistance?

Feel free to contact our Customer Service Team.

(615) 953 - 9373,

customerservice@masayacompany.com

or using our chat on www.masayacompany.com

⌚ 45 Min 👤 2 people 🛠️ Wrench


ID	Description	Qty	Reference
(A)	Headboard	1	
(B)	Side Frame Right	1	
(C)	Side Frame Left	1	
(D)	Footboard	1	
(E)	Slatted Mattress	2	
(F)	Slatted Mattress Holders A	2	
(G)	Hex Nut	8	
(H)	Flat Washer	8	

Step 1

Lay out the pieces on the floor, in their corresponding order.


Step 2

Attach together the footboard (Piece D) with the left side frame (Piece C). Fix the frames with a Hex Nut and Flat Washer.

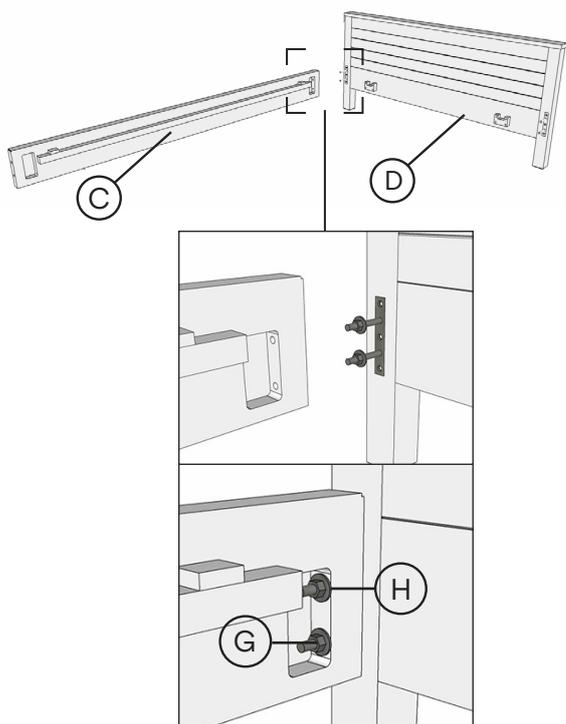


Step 3

Attach the right side frame (Piece B) to the footboard (Piece D).

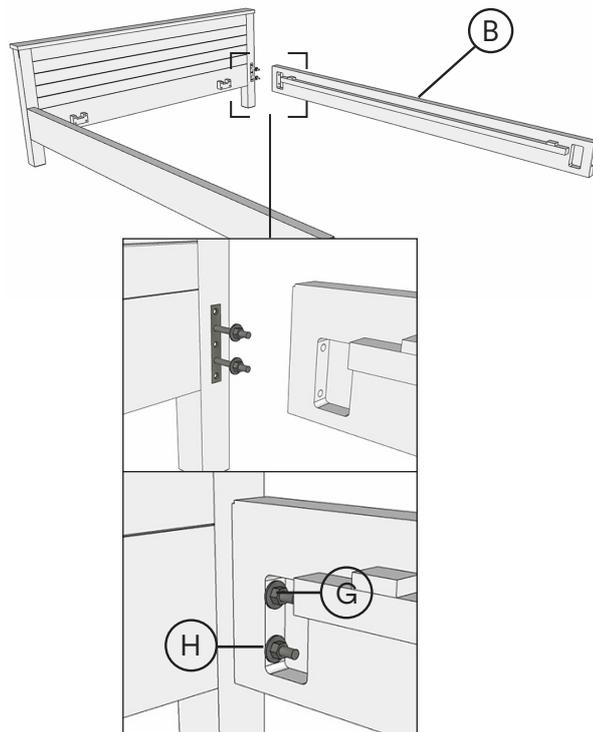


Step 4

Attach the frame pieces to the headboard (Piece A).

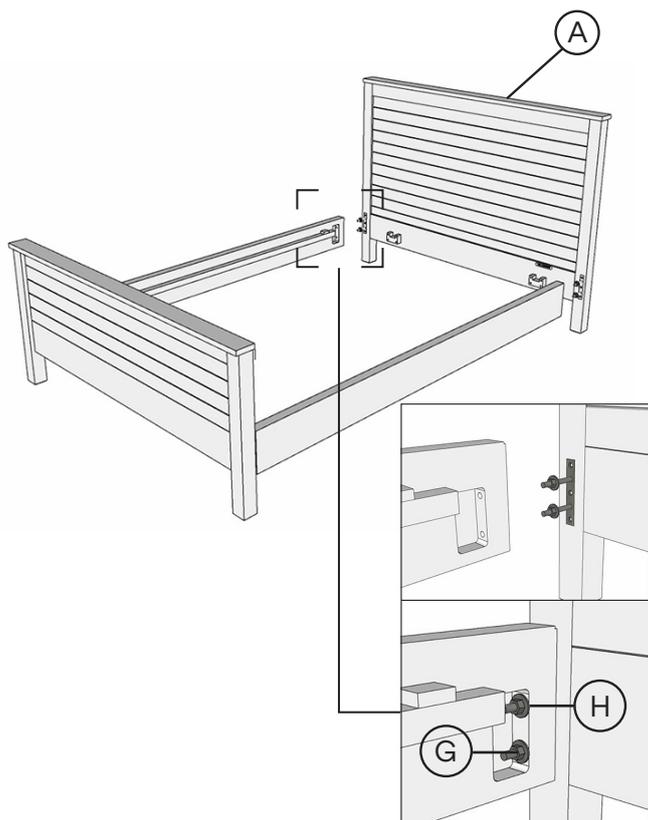


Step 5

Add the outer mattress holder (Piece F) and fix them in place with a Hex Nut and Flat Washer.

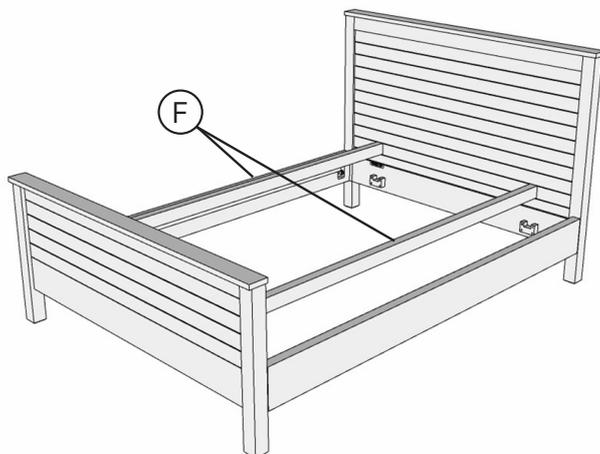

Step 6

Lastly, add the slatted mattress in place (Piece E).

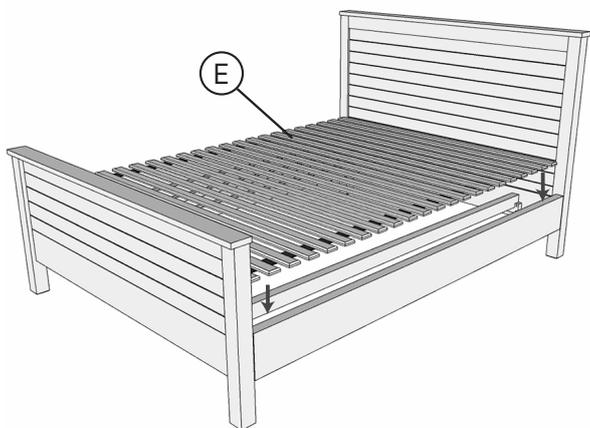



Thank you for supporting our mission to create a greener planet through reforestation. Before starting, please make sure all pieces listed in this manual are complete. And save this manual for future reference.

When assembling, we recommend placing all wooden parts on a soft, clean and flat surface to avoid scratches and damage while assembling your brand new MasayaCo piece.

Need any assistance?

Feel free to contact our Customer Service Team.

(615) 953 - 9373,
customerservice@masayacompany.com
 or using our chat on www.masayacompany.com

45 Min 2 people Wrench


ID	Description	Qty	Reference
(A)	Headboard	1	
(B)	Side Frame Right	1	
(C)	Side Frame Left	1	
(D)	Footboard	1	
(E)	Slatted Mattress	2	
(F)	Slatted Mattress Holders A	2	
(G)	Hex Nut	8	
(H)	Flat Washer	8	

Step 1

Lay out the pieces on the floor, in their corresponding order.


Step 2

Attach together the footboard (Piece D) with the left side frame (Piece C). Fix the frames with a Hex

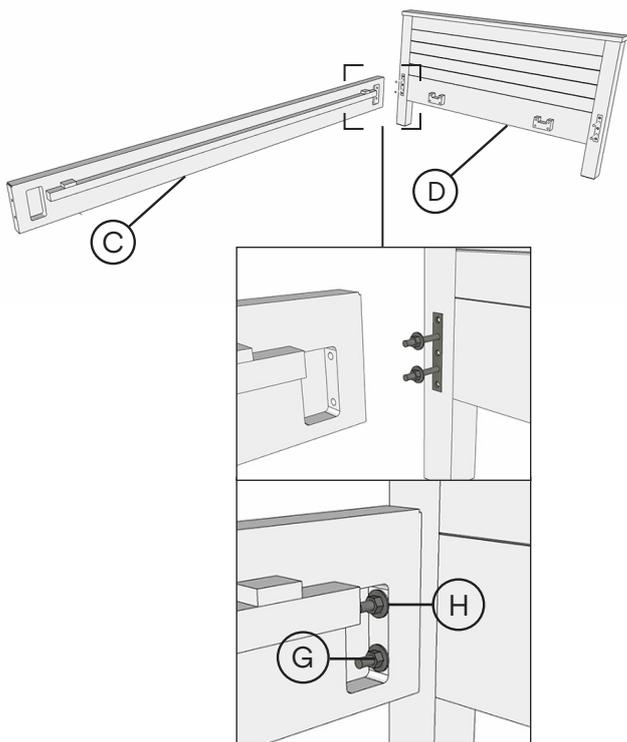


Step 3

Attach the right side frame (Piece B) to the footboard (Piece D).

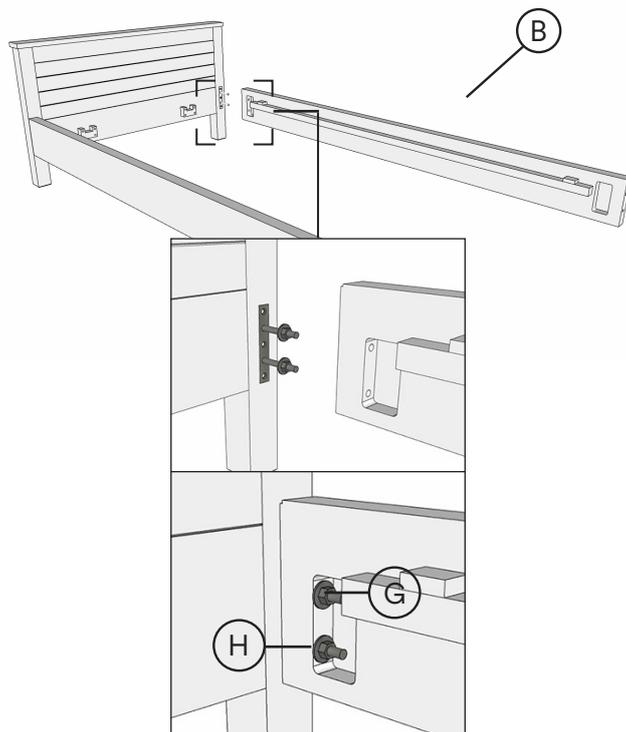


Step 4

Attach the frame pieces to the headboard (Piece A).

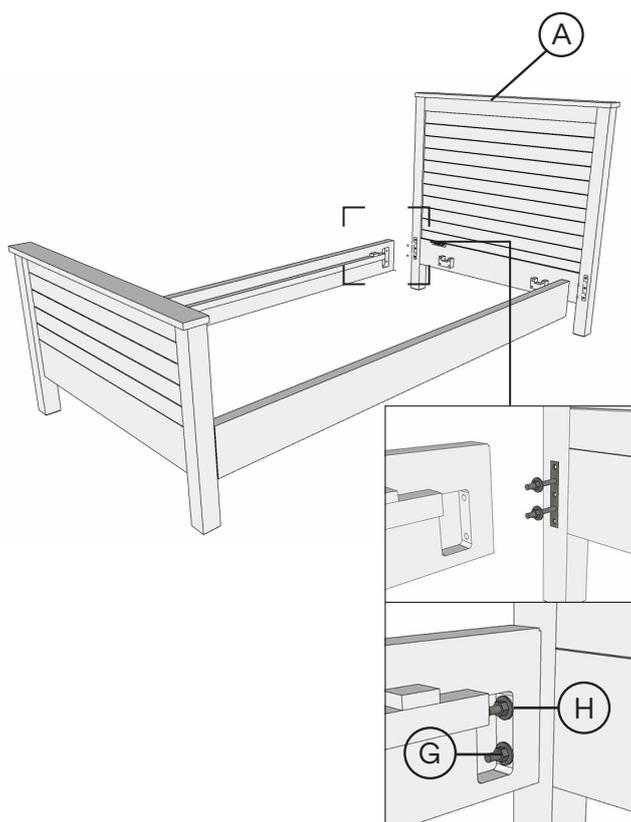

Step 5

Add the outer mattress holder (Piece F) and fix them in place with a Hex Nut and Flat Washer.

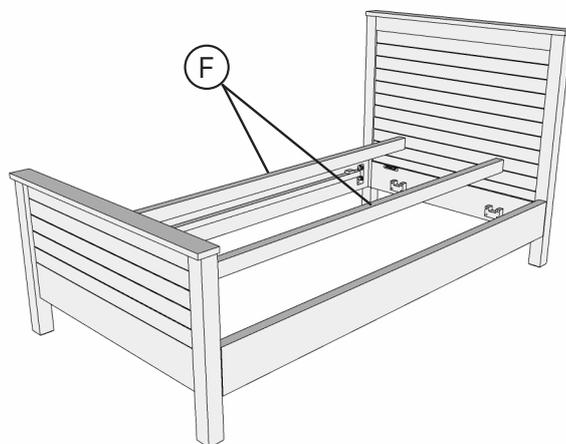

Step 6

Lastly, add the slatted mattress in place (Piece E).

