




1. Gently expand the box and work with the bottom flaps first.

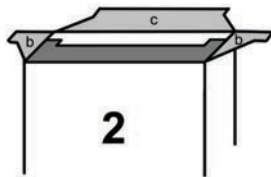

2. Fold flap 'a' into the box cavity.

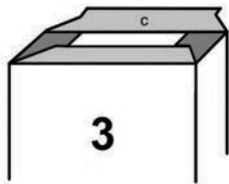


3. Fold flaps 'b' into the box until they lay atop flap 'a'.

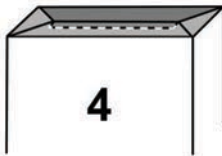


4. Gently fold flap 'c' into the box, pressing just enough to allow the tab to slip under flap 'a' to securely close bottom. Flip box over.



5. Insert the two styrofoam dividers into the box, gently turning them until flush against each end panel. Position them as deeply as they will go. The dividers have a very strong pressure-sensitive adhesive on the back. If you prefer, you may remove the protective paper, insert the dividers, and gently press them against the box interior to attach them permanently. **WARNING!** Before you attempt to stick a divider permanently to the box interior, you may want to try inserting one with the paper on just to get a feel for how it will fit.

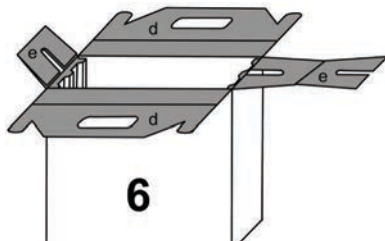

6. Fold flaps 'e' along the middle crease. Gently fold flaps 'd' along their creases to form the handle for when box is closed.

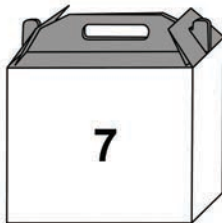

7. Lock the box closed by slipping the slotted flaps 'e' over the rounded corners of flaps 'd'.