




SUMMIT

USER GUIDE

polarpro.com | 949.220.9395 | support@polarpro.com

CAMERA INSTALLATION

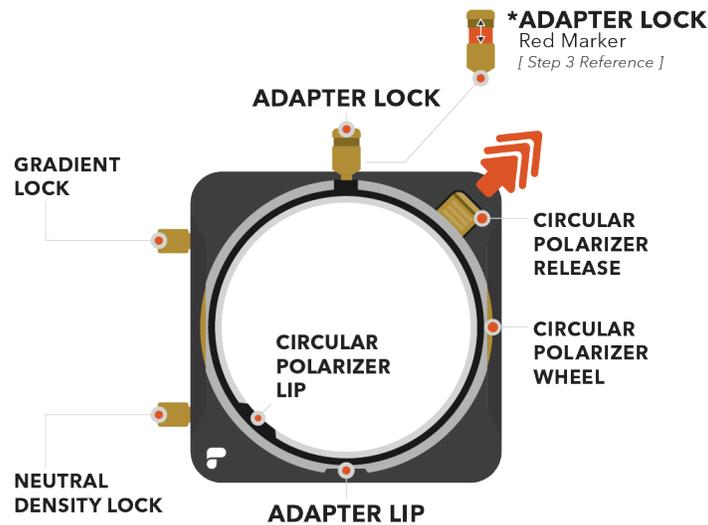

Step One

Thread Adapter Wheel onto lens.

Step Two

Attach to Summit Core by slipping Adapter Wheel in front of Adapter Lip on bottom of Summit Core.

Step Three

Pull upwards on Adapter Lock, until Red Marker is visible. Insert Adapter Wheel fully, ensure it is flush with the Summit Core, and release the lock. *Red Marker shouldn't remain visible.

Step Four

Tighten Adapter Lock to Secure.

*Reference shown in illustration above

TUTORIALS

For additional help be sure to visit our YouTube page [youtube.com/polarprofilters](https://www.youtube.com/polarprofilters) for tutorials and more.

QUESTIONS

Contact us at anytime via our website, or shoot us an email. We're happy to help!




SUMMIT

USER GUIDE

polarpro.com | 949.220.9395 | support@polarpro.com

CIRCULAR POLARIZER INSTALLATION

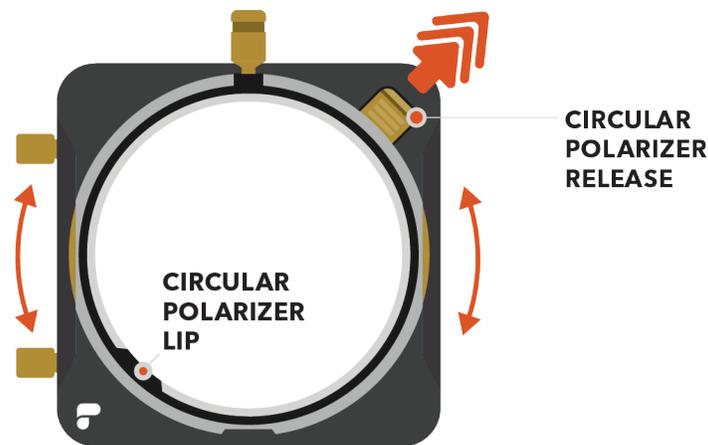

Step One

To insert Circular Polarizer, slip filter under the Circular Polarizer Lip on bottom left of Summit Core's Circular Polarizer slot.

Step Two

Slide the Circular Polarizer Release up to allow the filter to fall into place.

Removal

Slide the Circular Polarizer Release up, and remove filter by slightly inverting Summit Core until filter flips out.

Rotation

Use the Circular Polarizer Wheel on either side of Summit to rotate Summit Circular Polarizer.

TUTORIALS

For additional help be sure to visit our YouTube page [youtube.com/polarprofilters](https://www.youtube.com/polarprofilters) for tutorials and more.

QUESTIONS

Contact us at anytime via our website, or shoot us an email. We're happy to help!




SUMMIT

USER GUIDE

polarpro.com | 949.220.9395 | support@polarpro.com

NEUTRAL DENSITY INSTALLATION

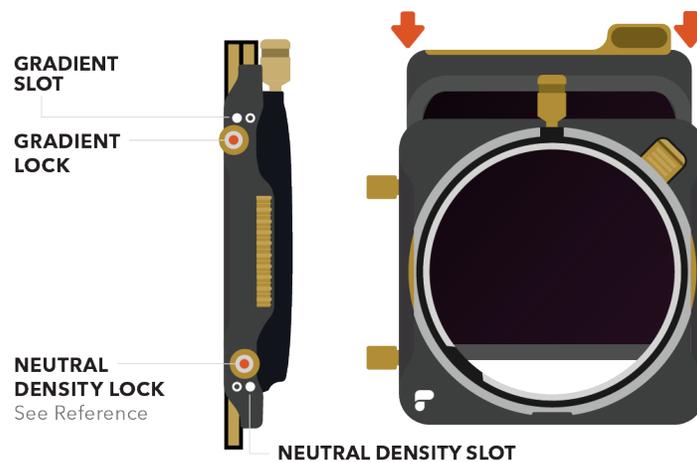

Step One

Slide filter into Neutral Density slot. If Neutral Density Lock is engaged, unscrew to allow Neutral Density to fall into place.

Step Two

Lock Neutral Density into slot by tightening Neutral Density Lock.

Reference

Dot indicators located on the side of the Summit Core by the Gradient Lock and Neutral Density Lock indicate the proper filter lock/slot.

Filter slot closest to your camera lens is your Neutral Density Slot.

○ ● **NEUTRAL DENSITY LOCK/SLOT**

● ○ **GRADIENT LOCK/SLOT**

TUTORIALS

For additional help be sure to visit our YouTube page [youtube.com/polarprofilters](https://www.youtube.com/polarprofilters) for tutorials and more.

QUESTIONS

Contact us at anytime via our website, or shoot us an email. We're happy to help!




SUMMIT

USER GUIDE

polarpro.com | 949.220.9395 | support@polarpro.com

GRADIENT INSTALLATION

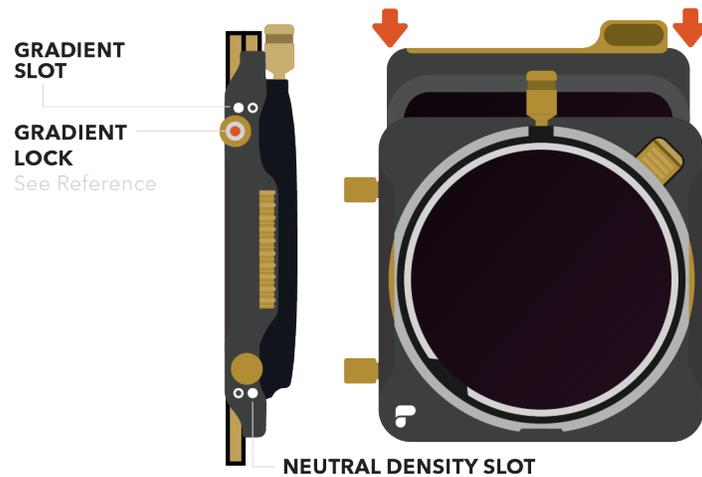

Step One

Slide filter into Gradient slot. If Gradient Lock is engaged, unscrew to allow Gradient to fall into place.

Step Two

Lock Gradient into slot by tightening Gradient Lock.

Reference

Dot Indicators located on the side of the Summit System by the Gradient Lock and Neutral Density Lock indicate the proper filter lock/slot.

Filter Slot furthest from your camera lens is your Gradient Filter Slot.



HOOD INSTALLATION

Step One

Attach hood by stretching over Summit Core, ensure that the cutouts match-up with the ND and Grad Locks.

TUTORIALS

For additional help be sure to visit our YouTube page [youtube.com/polarprofilters](https://www.youtube.com/polarprofilters) for tutorials and more.

QUESTIONS

Contact us at anytime via our website, or shoot us an email. We're happy to help!