



BASECAMP

Ultralight Matte Box System



What's Included

VND KIT

Core (Includes Hood + Flag) | *CP Filter* | *VND 2-5 Filter*
VND 6-9 Filter (free polarpro.com exclusive) | *Clamp Ring Full Set*

VND STAGE 3 KIT

Core (Includes Hood + Flag) | *Stage 3 Adapter* (Includes Stage 3 Hood + Flag)
CP Filter | *VND 2-5 Filter* | *VND 6-9 Filter* | *Mist Filter* | *Clamp Ring Full Set*

DIRECTORS KIT

Core (Includes Hood + Flag) | *Stage 3 Adapter* (Includes Stage 3 Hood + Flag)
CP Filter | *BlueMorphic Filter* | *GoldMorphic Filter* | *VND 2-5 Filter*
VND 6-9 Filter | *Mist Filter* | *Mist Heavy Filter* | *ND8-GR Filter* | *Clamp Ring Full Set*

STAGE 3 INTRO KIT

Stage 3 Adapter (Includes Stage 3 Hood + Flag) | *Mist Filter*

STAGE 3 ADVANCED KIT

Stage 3 Adapter (Includes Stage 3 Hood + Flag) | *BlueMorphic Filter*
GoldMorphic Filter | *Mist Filter* | *Mist Heavy Filter* | *ND8-GR Filter*


Lens Installation

Step 1

Attach Clamp Ring or Thread Plate to lens.

Step 2

Insert into BaseCamp Core and tighten Adapter Lock.

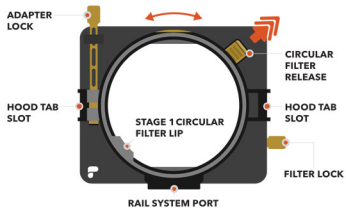

Stage 1 Circular Filter Installation

Step 1

To insert, slip filter under the Stage 1 Circular Filter Lip located on the bottom left of the slot.

Step 2


Slide the Circular Filter Release up to allow the filter to fall into place.

Removal

Slide the Circular Filter Release and remove filter by slightly inverting BaseCamp Core.

Rotation

Use the Stage 1 Circular Filter Wheel on top to adjust polarization.

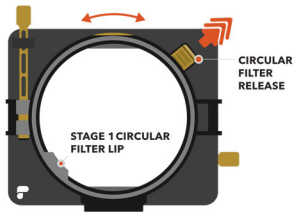


Stage 2 & 3 Filter Installation

Step 1

Slide filter into slot. If Filter Lock is engaged, unscrew to allow filter to fall into place.

Step 2

Lock filter into slot by tightening Filter Lock.

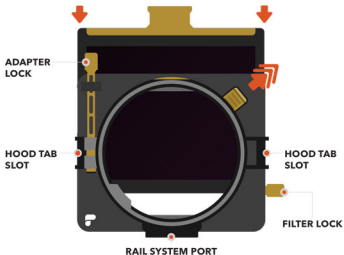

Hood & Flag Installation


Step 1

Attach the Hood by aligning tabs with slots of BaseCamp Core and pressing until it clicks into place.

Step 2

Attach Flag by unscrewing Flag Lock, inserting Flag in open position and rotating until flush. Tighten Flag Lock.

Shade Installation Reference

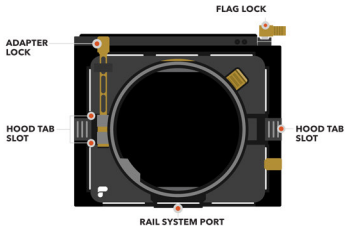

Rail System Installation

Step 1

Attach the Rail System to Rail System Port on BaseCamp Core.

Step 2

Adjust to desired height and tighten thumbscrew.

Stage 3 Installation

Attachment to BaseCamp Core

Loosen the knobs counter clockwise on either side of the Third Stage Adapter, align and press onto BaseCamp Core, and tighten knobs to ensure secure attachment.

Hood Installation & Removal

Attach Hood by aligning hood locking knobs with the Stage 3 Core. Fasten knobs to secure. To remove Hood, loosen the hood locking knobs and remove.

Filter Installation & Removal

To install filter, loosen the filter locking knob and install filter with larger filter type etching facing away from camera. Tighten the filter lock knob to secure. To remove, loosen the filter locking knob and remove filter.

More Info

Tutorials

For additional help be sure to visit our YouTube page:

[youtube.com/polarprofilers](https://www.youtube.com/polarprofilers)

for tutorials and more.

Questions

Contact us at anytime via our website, or shoot us an email. We're happy to help.

polarpro.com | 949.220.9395

support@polarpro.com