


# INSTALLATION INSTRUCTIONS

# ULTRAFRAME V6

## GENERAL INFORMATION

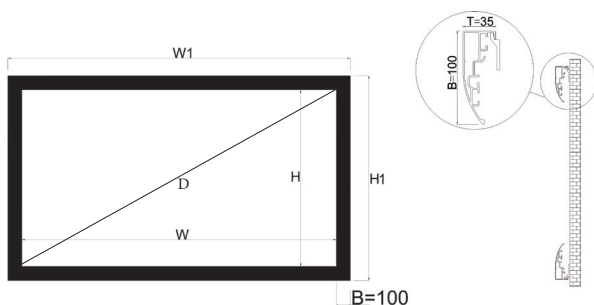

Description	D Diagonal Size (inches)	W Image Width (cm / inches)	H Image Height (cm / inches)	Gross Weight (kgs)	Packing Volume		
					Length (cm)	Width (cm)	Height (cm)
Framed 16:9 (10cm Frame)	92"	204 / 80.75"	115 / 45.29"	17	146	38	15
	100"	221 / 87"	124 / 48.85"	18	156	38	15
	109"	240 / 94.12"	135 / 53.18"	19	168	38	15
	120"	265 / 104.33"	149 / 58.64"	22	181	38	15
	129"	285 / 112.19"	160 / 63"	24	192	38	15
	150"	332 / 130.34"	187 / 73.64"	30	218	38	15
Framed 2.4:1 (10cm Frame)	149"	350 / 137.45"	146 / 57.12"	32	210	38	15

# INSTALLATION INSTRUCTIONS

# ULTRAFRAME V6

## INSTALLATION

### ASSEMBLING THE FRAME


The long sides of the frame is divided into two parts. Please attach these first. Then attach the two short sides and tighten all corner screws. You might need to loosen and re-tighten some of the corners if required. A small gap will appear in each corner on the inside of the frame, caused by the velvet wrapping. This gap will not be visible on the front.

1



First, attach the long sections and secure them by tightening the screws

2

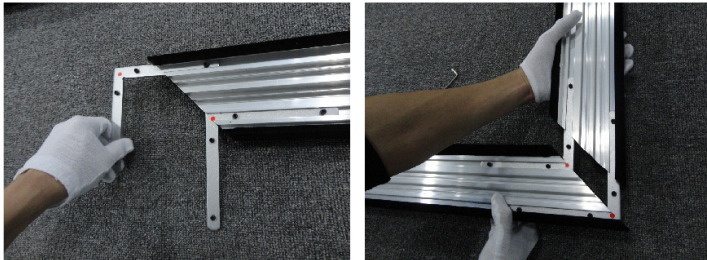

Then, attach the short sections and secure them by tightening the screws

# INSTALLATION INSTRUCTIONS

# ULTRAFRAME V6


## INSTALLATION

### SUPPORT BAR FOR LARGER FRAMES

Larger frames includes a vertical support bar that is installed after the fabric is attached if you are using a PVC fabric. However, the bar needs to be in place before you install the UltraWeave fabric as you would otherwise not be able to attach it afterwards without risking pulling out the fabric from the grip rails. If you are placing speakers behind the screen, there is no problem moving the support bar 30-40cm towards one of the edges to avoid the bar conflicting with the center speaker.



Slide the bar at an angle into the bottom, then slide it in on the top.

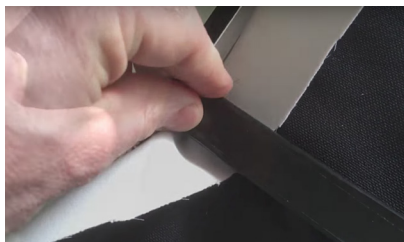

Work around the support bar by moving it back and forth a little if installing the UltraWeave fabric into grip rails.

# INSTALLATION INSTRUCTIONS


# ULTRAFRAME V6

## INSTALLATION

### INSTALLING THE ULTRAWEAVE AT FABRIC


If you have purchased the UltraWeave fabric to accommodate your screen, you will receive a set of grip rails that you can easily insert into the pre-fitted tracks of your UltraFrame. To tuck the fabric we recommend using a custom made tucking tool. If needed, you can easily pull up and re-tuck the fabric. For more detailed instructions, please visit our webpage.

1

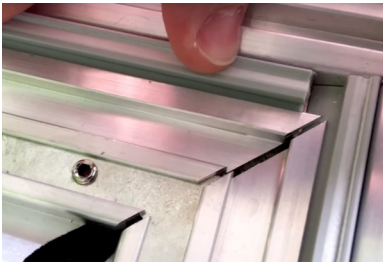

First, cut (use a regular cutting plier) the grip rails and insert them into the pre-fitted tracks. No glue is needed. Then place the fabric atop leaving the integrated, separate protective clothing underneath the frame and start tucking.

2

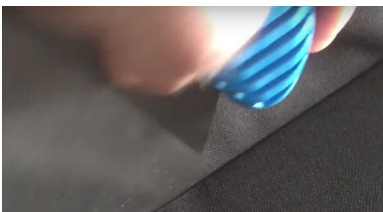

Start tucking in the fabric, long sides first, then the short sides. If needed, you can still easily pull out and re-tuck the fabric. When finished, cut off excessive fabric.

# INSTALLATION INSTRUCTIONS


# ULTRAFRAME V6

## INSTALLATION

### INSTALLING THE PVC FABRIC

If you have chosen to use the regular non-AT PVC materials, please follow these instructions.

1

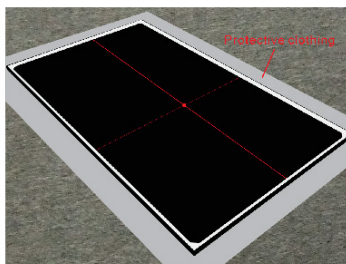

Remove the fabric and roll it out over the frame. Please use a protective clothing.

2



Tension Rod(Horizontal)X4



Tension Rod(Vertical)X2



Insert the horizontal and vertical tension rods.



# INSTALLATION INSTRUCTIONS

# ULTRAFRAME V6

## INSTALLATION

### INSTALLING THE PVC FABRIC

3

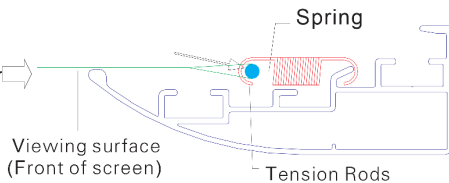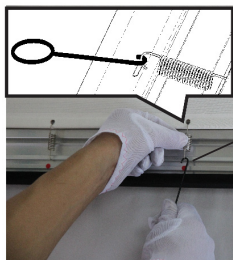

Pull the springs into the depicted groove.

# INSTALLATION INSTRUCTIONS


# ULTRAFRAME V6

## INSTALLATION

### WALL MOUNTING THE FRAME


The frame is easily mounted using only two top brackets. Make sure the brackets are leveled correctly and attach them to the wall using a fitting type of screw.

1

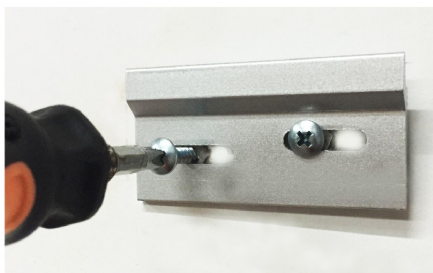

First, attach the two brackets to the wall. You can slide the frame so you are free to place the brackets as much as 20-40cm from the corners.

2

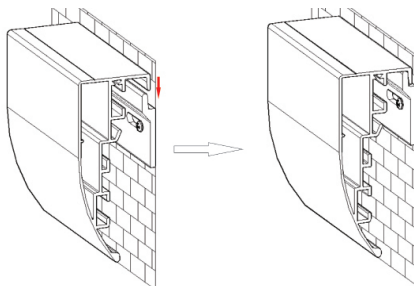

Then you simply hang the frame onto the two brackets and slide it into perfect position.