



NSTALL GEN 1 (2010 - 2014) | GEN 2 (2017 - 2020) | GEN 3 (2021 - 2023)

Step 1:

Remove the three 4mm allen button head bolts holding the factory shock guard onto the lower shock shaft

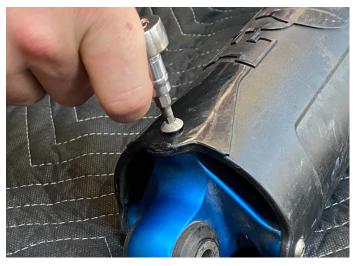



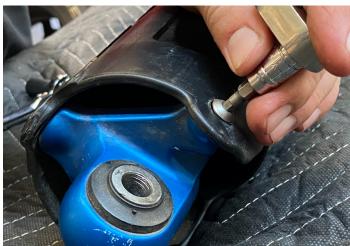





NSTALL GEN 1 (2010 - 2014) | GEN 2 (2017 - 2020) | GEN 3 (2021 - 2023)

Step 2 ***If your installing a shock guard replacement, skip to step 3***

For installing a shock guard cover, slide the factory shock guard up to the top of the shock off the lower shock shaft, this makes room for the new shock guard cover. Then, slide the new shock guard cover onto the factory cover. The new guard is slotted to allow it to go around the shock shaft.









NSTALL GEN 1 (2010 - 2014) | GEN 2 (2017 - 2020) | GEN 3 (2021 - 2023)

Step 2 (cont.)

Once the new guard is on, lower back onto the lower shock shaft mounting area.

Install all of the supplied longer bolts with blue loctite and tighten.













NSTALL GEN 1 (2010 - 2014) | GEN 2 (2017 - 2020) | GEN 3 (2021 - 2023)

Step 3

For installing a shock guard replacement, slide the shock guard up to get it off the lower shock shaft, the guard is slotted on the back and can be removed without unbolting the shock, then you can remove the guard.

Next install the new replacement guard by sliding it up the shock with the gap towards the shock shaft, till it fits over the shock.

Then slide the guard back down onto the lower shock shafts, install the supplied hardware, using blue loctite and tighten.

Step 4

Step back and enjoy your new protection for your shocks!
Feel free to tag us in any photos or videos with this product installed.
We will repost / share to our instagram & facebook page:
@FoutzMotorsports / #FoutzMotorsports

NOTE:

It can be helpful to have the shocks at full extension to give more room to install the guards.

Never work under an unsupported vehicle.