




# SKID PLATE - UNDERBODY KIT

## INSTALL

### FORD BRONCO & BRONCO RAPTOR

#### Step 1:

Remove factory transfer case skid plate, transmission skid plate, and engine skid plate, save hardware for reuse.

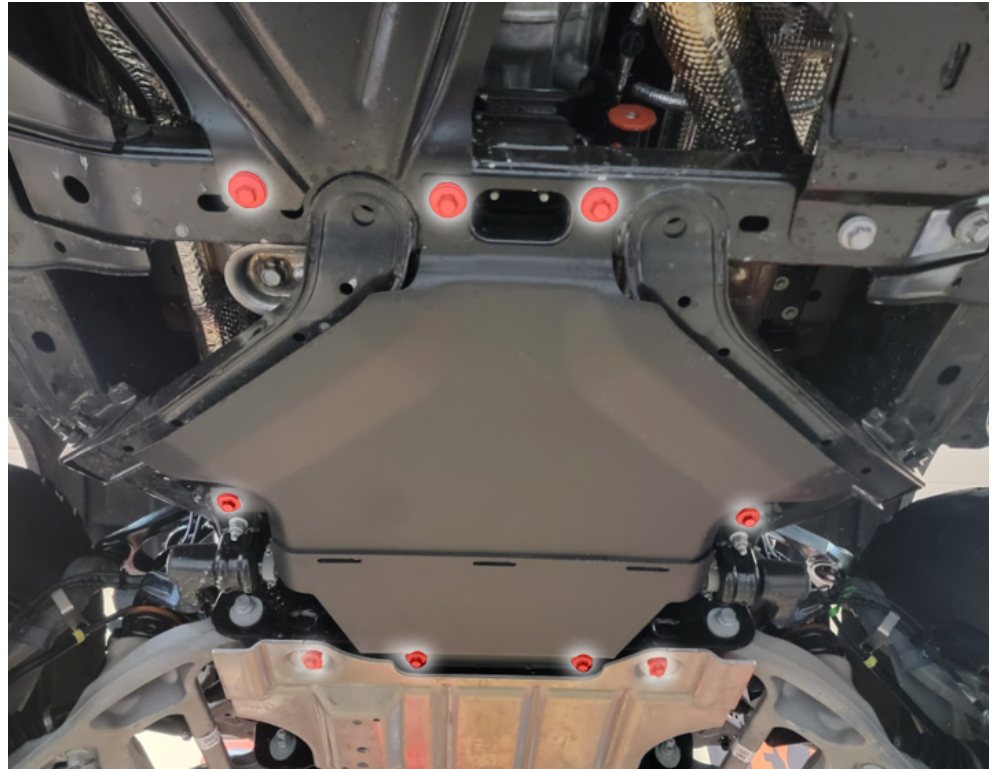

Loosen the front skid plate bolts, the four by the tow hooks, and the two down low on the crossmember by the lower control arms.








# SKID PLATE - UNDERBODY KIT

## INSTALL

FORD BRONCO & BRONCO RAPTOR

### Step 2:

Remove the nuts from the bolts on the transmission crossmember, then install the supplied crossmember onto the bolts, then tighten the nuts to factory specs.

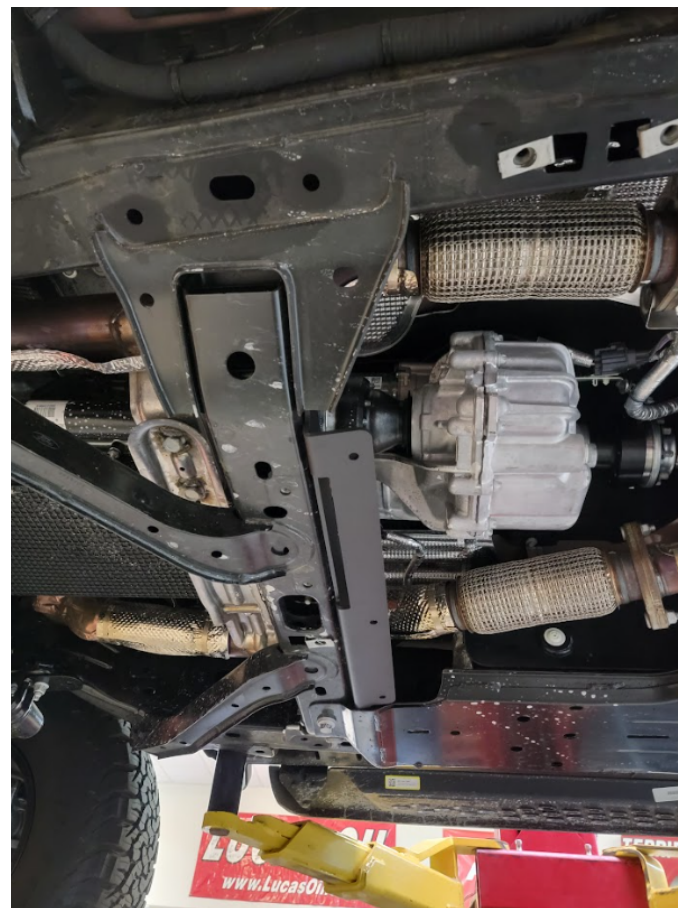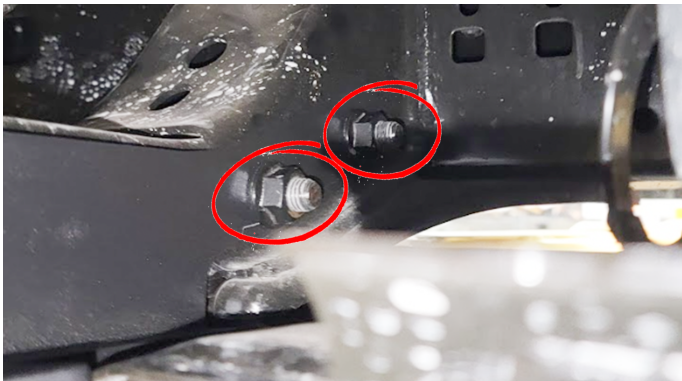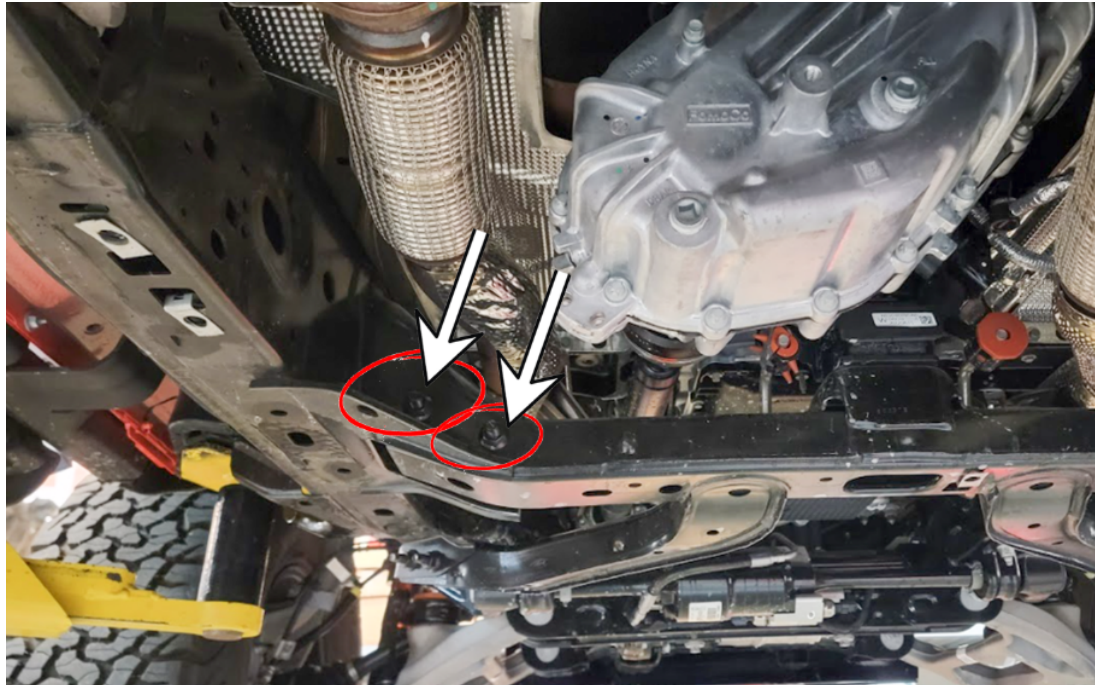



# SKID PLATE - UNDERBODY KIT

## INSTALL


FORD BRONCO & BRONCO RAPTOR

### Step 2:

Starting with the transfer case skid plate, it will need to be slipped into the slot between the stock transmission crossmember and the supplied skid plate crossmember.



Tighten the new transfer case skid now with saved factory hardware from step 1.

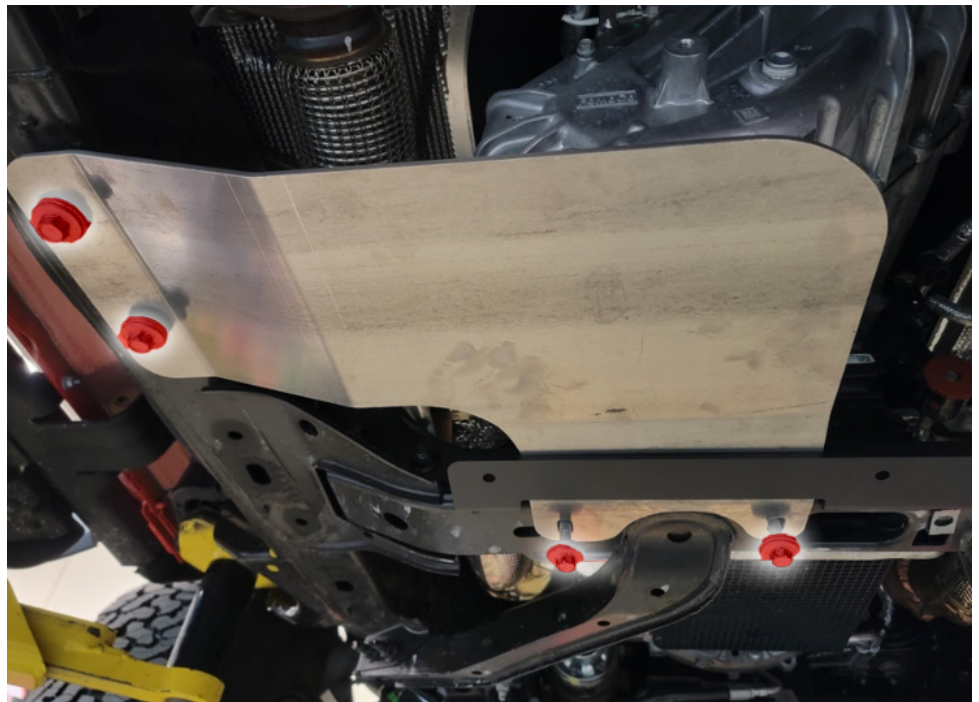



# SKID PLATE - UNDERBODY KIT

## INSTALL

FORD BRONCO & BRONCO RAPTOR

### Step 4

Install the new transmission skid plate to the supplied skid plate crossmember, leave hardware loose for now.





# SKID PLATE - UNDERBODY KIT

**INSTALL**

**FORD BRONCO & BRONCO RAPTOR**

## Step 5

Install the engine skid plate, make sure to install the supplied spacers between the engine skid and the rear factory crossmember, see pictures.

For Bronco 2 spacers are used, for Bronco Raptor 3 spacers are used. The engine skid plate should overlap the transmission skid plate





# SKID PLATE - UNDERBODY KIT

## INSTALL

FORD BRONCO & BRONCO RAPTOR

### Step 6

Making sure all skid plates are overlapping like roof shingles, tighten all hardware.



### Step 7

Enjoy your new skid plates and new found protection.

