



# HYDRAULIC BUMP STOP KIT


**INSTALL**

**FORD BRONCO (2021 +)**

## Step 1:

Park vehicle on level ground, set the parking brake.

Block the front tires front and rear so the truck can't roll.

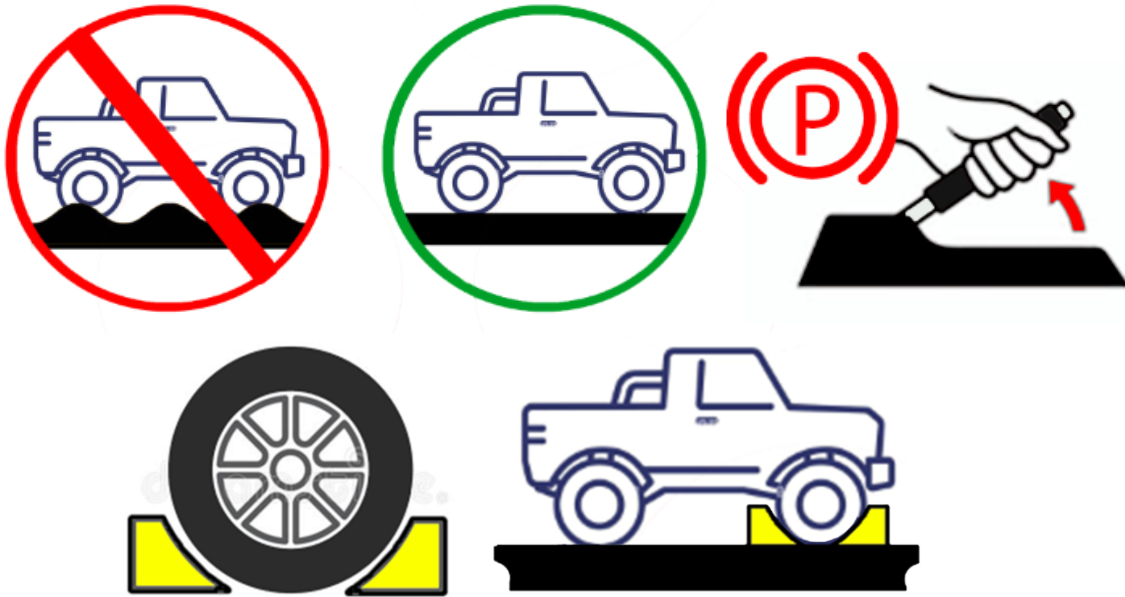

Lift truck and set jack stands on the frame so the axle hangs freely, then remove both rear tires.





# HYDRAULIC BUMP STOP KIT

**INSTALL**

**FORD BRONCO ( 2021 + )**

## **Step 2**

Starting on the drivers side hold up the new bump stop mount to the frame, identify any taller factory welds to grind down, also look at the inside of the frame rail and locate any clips or brake lines that need to be removed from the frame to make room for the inner bracket.

Also check for tall welds on the inside of the frame.

## **Step 3**

Grind down any tall spots discovered in previous step, then paint to prevent rust.

## **Step 4**

Reinstall bump stop mount to frame, use supplied hardware to secure the mount to the frame using the two large holes right behind the shock. Once these bolts have been started, install the inner bracket and start the supplied hardware in those holes.

Once all hard ware has been started, tighten starting with the two large bolts.

## **Step 5**

Repeat steps 2-4 on the passenger side.



# HYDRAULIC BUMP STOP KIT

**INSTALL**

**FORD BRONCO (2021 +)**

## Step 6

Locate the supplied axle bump pad, place it on the axle indexing it on the upper link mount.

Remove any clips that will be in the way, and then cut off the clip tab from the axle and grind smooth.

Also remove paint around the bump pad to prep for welding.

## Step 7

Once axle has been properly prepped, weld on the supplied bump pads.

## Step 8

After bump pads have cooled, paint to prevent rusting. Resecure lines that were moved to prevent rubbing or being crushed by the bump stop.

## Step 9

Enjoy your NEW  
Foutz Motorsports  
Bronco bump stop kit!

