



LOWER REAR SHOCK SKID KIT


INSTALL

FORD BRONCO RAPTOR

Step 1:

Park vehicle on level ground, set the parking brake.

Block the front tires front and rear so the truck can't roll.

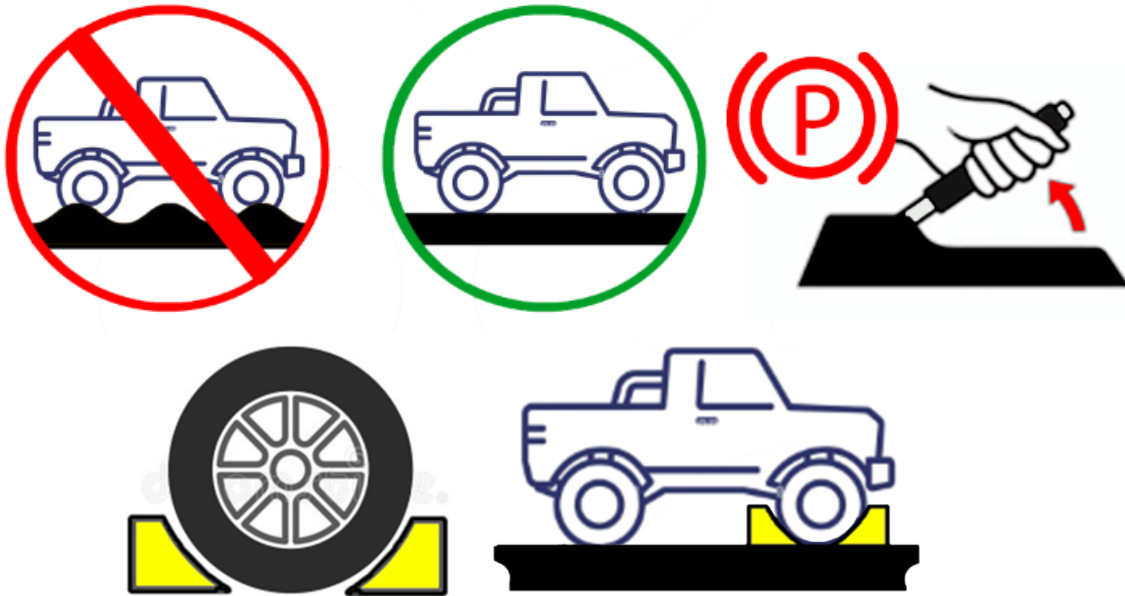

Lift truck and set jack stands on the frame so the axle hangs freely, then remove both rear tires.





LOWER REAR SHOCK SKID KIT

INSTALL

FORD BRONCO RAPTOR

Step 2:

Doing one side at a time, place a floor jack under the axle tube next to the lower shock mount, then remove the two large bolts that mount the lower shock mount to the axle.

Keep the nuts, they will be reused on the supplied hardware.

Step 3:

Slide the shock skid over the lower shock mount, the large opening on the side will go towards the tire.

Step 4:

Install the new supplied bolts into the shock skid and lower shock mount, installing the bolts from the inside of the truck with the nuts on the tire side of the mount.

Tighten to factory spec.

Step 5

Repeat steps 2-4 on the other side.

Step 6

Reinstall tires and set the truck back on the ground, then torque the lug nuts to factory spec.



LOWER REAR SHOCK SKID KIT

INSTALL

FORD BRONCO RAPTOR

Step 7:

Enjoy your new shock skids and extra protection! Feel free to tag us in any photos or videos with this product installed.

We will repost / share to our instagram & facebook page:

@FoutzMotorsports

#FoutzMotorsports

