

WHALEN'S SPEED RESEARCH AND DEVELOPMENT


2017+ CAN-AM MAVERICK X3 TURBO CHARGE TUBE AND BLOW OFF VALVE KIT INSTALLATION GUIDIE.




269.415.0040 | TECH@WHALENTUNED.COM

WHALEN'S SPEED RESEARCH AND DEVELOPMENT

- Remove the OEM charge tube to throttle body adapter coupler.
- Remove the Map sensor from the adapter, you'll need to reinstall this.
- Install the aluminum vacuum barb adapter into the factory spot on the intake manifold.
 - T30-Torx headed bolt

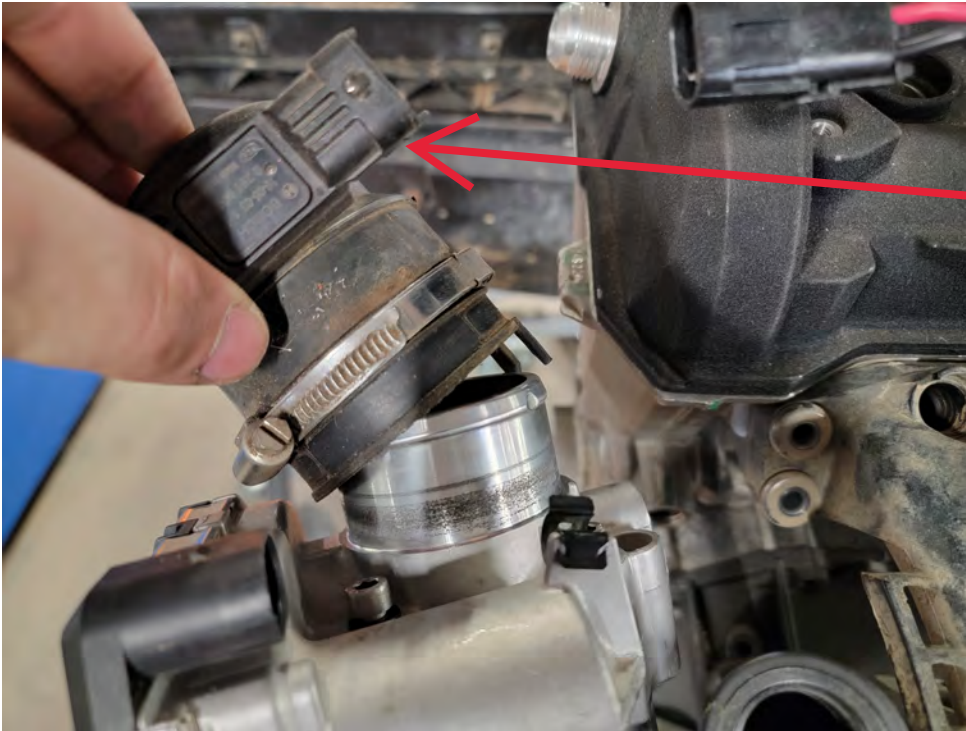


- MAP sensor

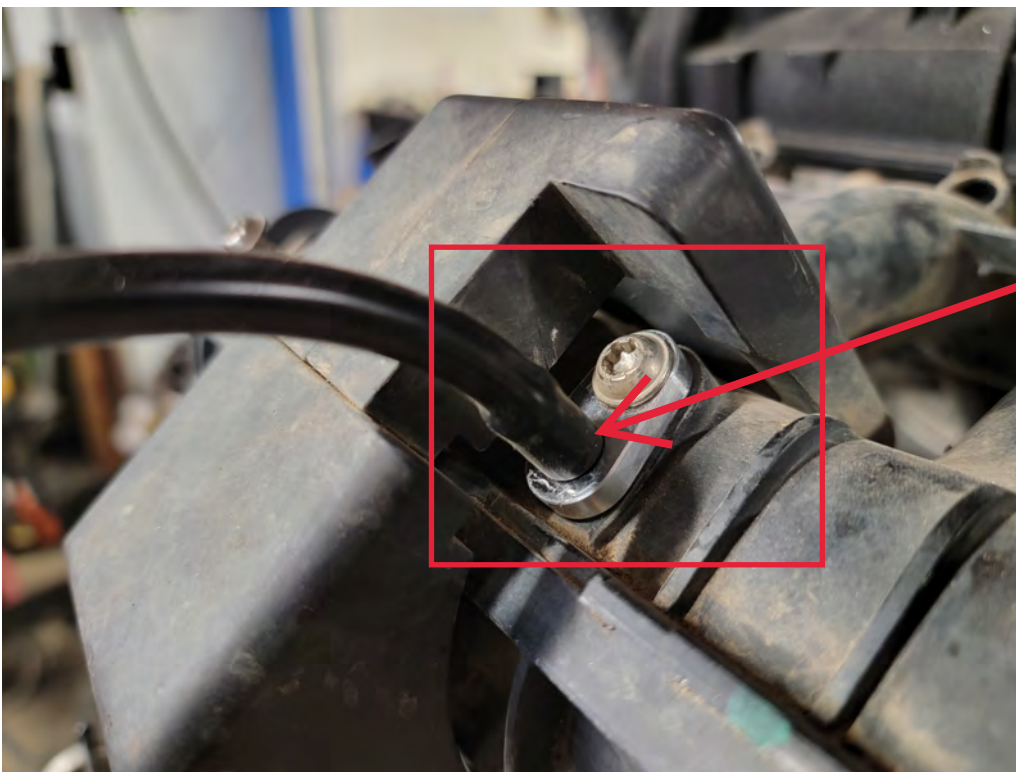

- Zip tie vacuum hose to the aluminum barb!!!

WHALEN'S SPEED RESEARCH AND DEVELOPMENT

- Our charge tube installs directly to the throttle body, as shown below.

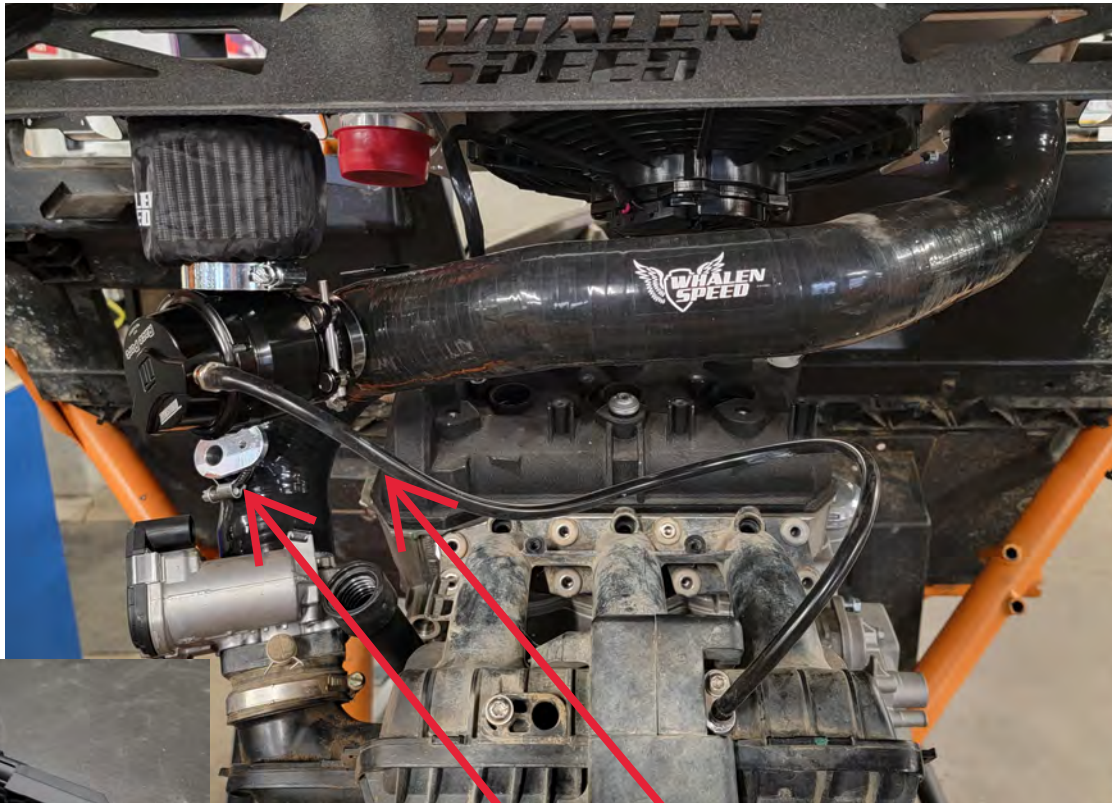

- Cut silicone vacuum line to your needs.

- New MAP sensor location


RICHRULES CAN AM X3 W/ OUR PROTOTYPE CHARGE TUBE.



- 2020+ Can AM X3's will be able to use the factory plastic bracket (shown here).

WHALEN'S SPEED RESEARCH AND DEVELOPMENT

- 2021 Can am X3 Turbo RR Shown | Rear mounted radiator | Installation Example

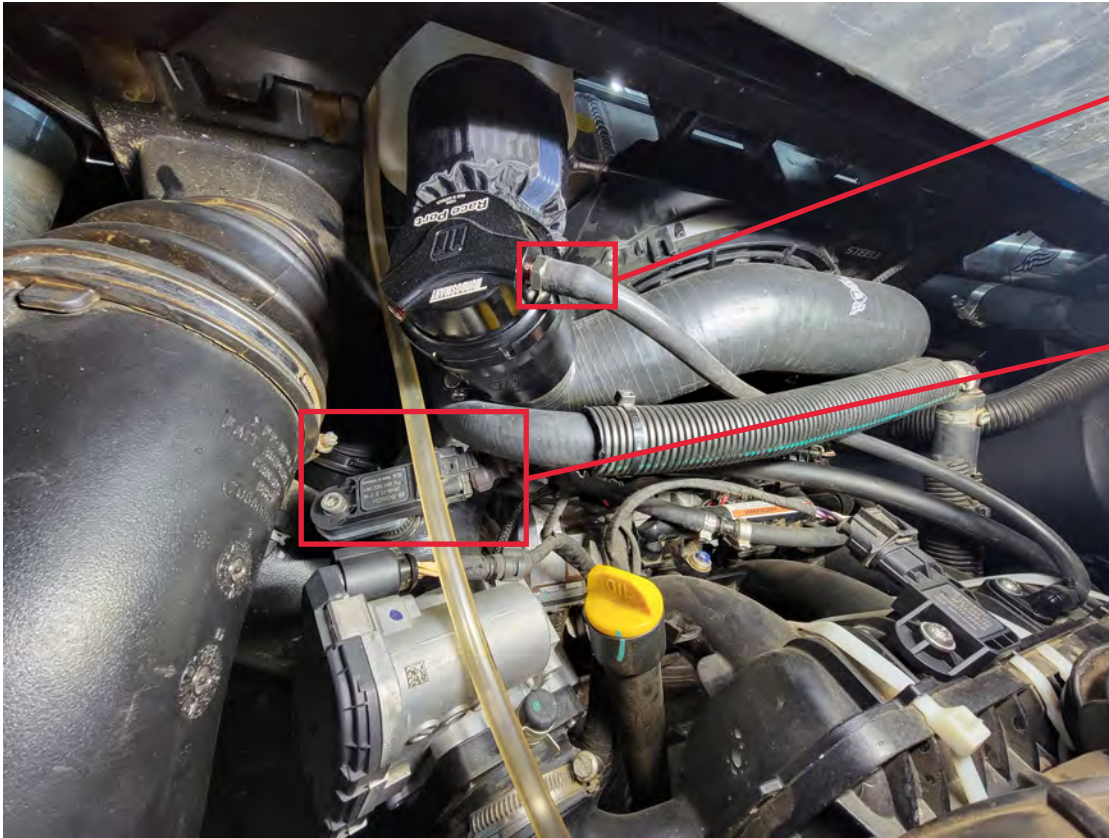

Zip tie vacuum line to BOV barb.

Proper MAP sensor orientation.



Proper BOV orientation.

Double check BOV has the 1/8npt plug installed!