

STEELE



Can-Am X3 OEM Radiator Brushless Motor Upgrade Kit

What you need:


- Stock X3 radiator fan and shroud assembly

What's included in the kit?

- Qty(1) – Steele Brushless Motor
- Qty(1) – X3 motor upgrade kit

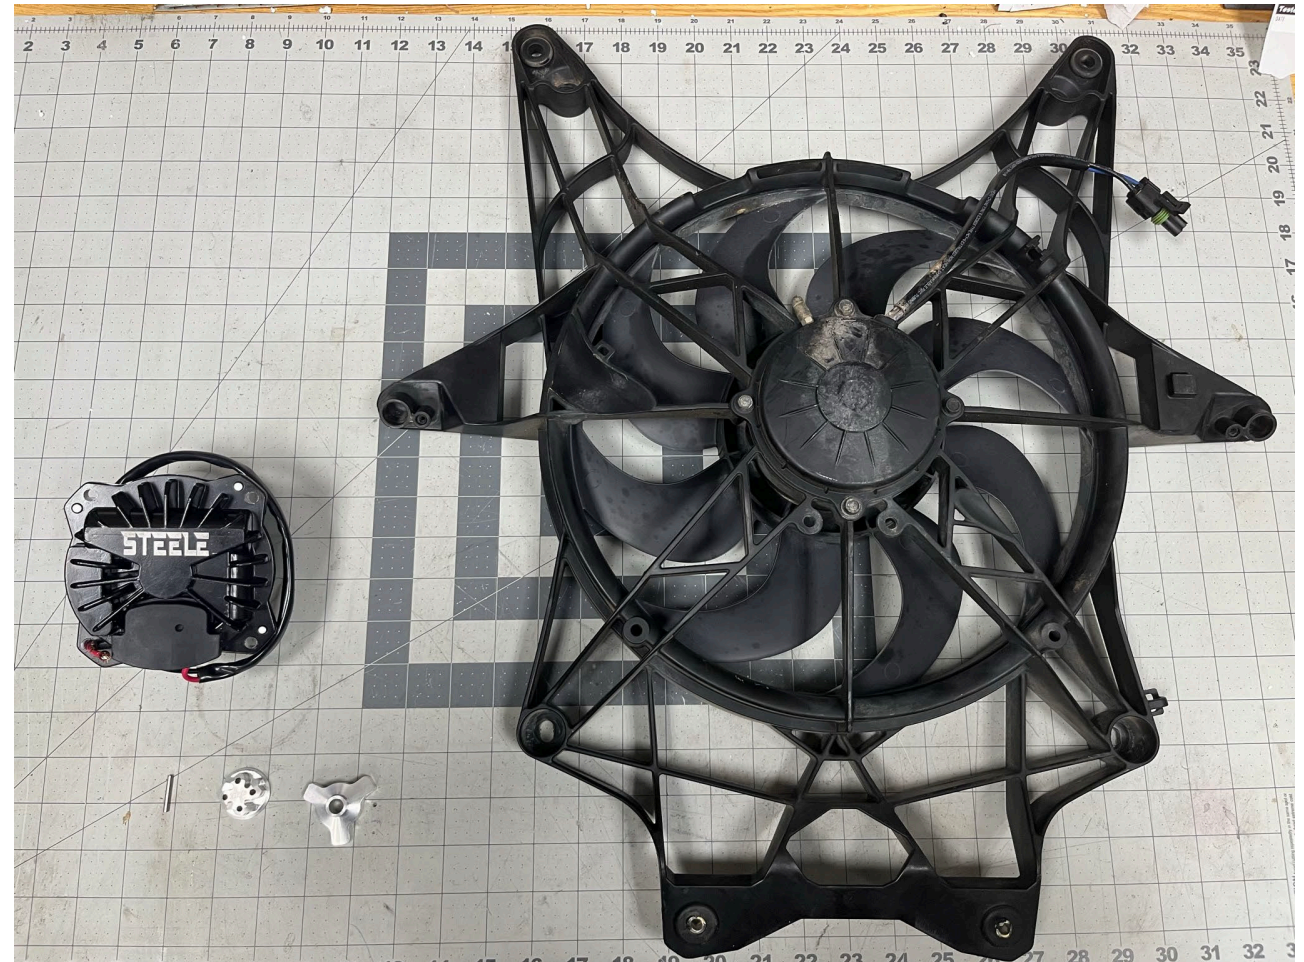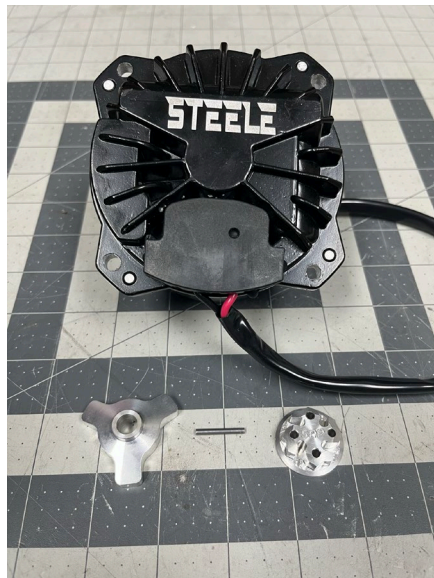

1.

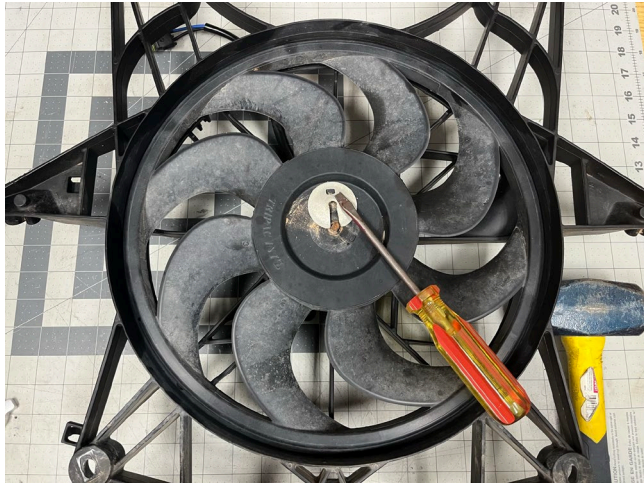


Remove OEM fan blade

2.




Discard OEM fan blade adapter

3.

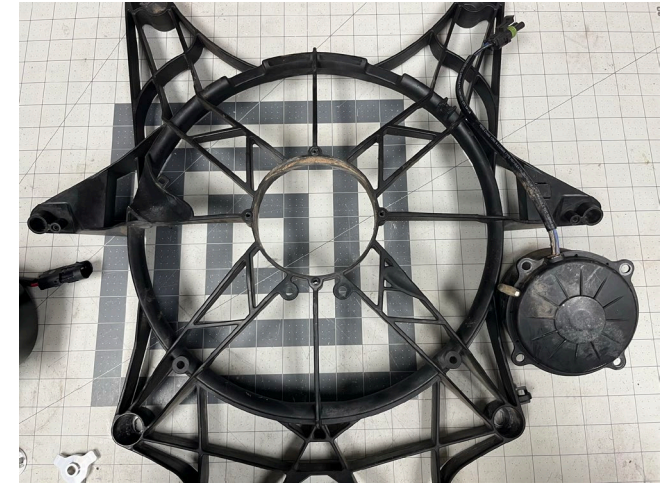


Remove the 4 motor mounting screws (do not discard)

4.

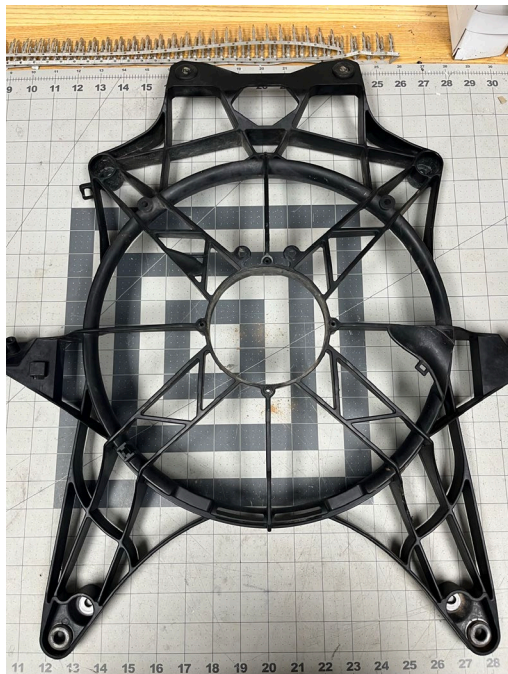

Orient the OEM shroud to match the picture

5.

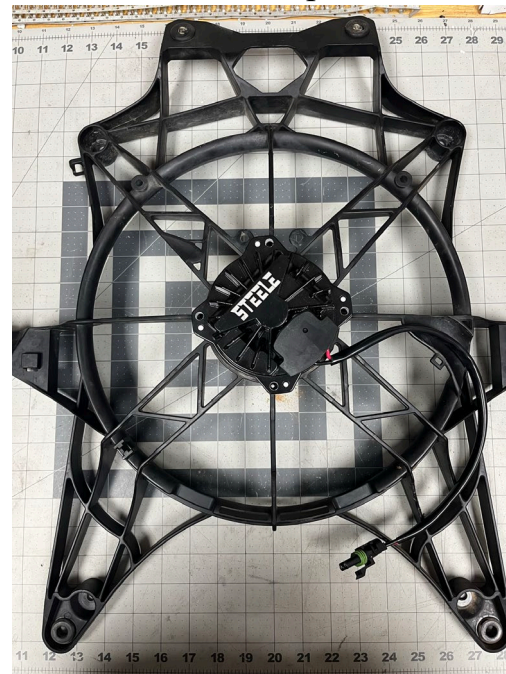

Place and align the Steele motor onto the shroud and secure with the OEM screws

6.



6.



7.



Align dowel pin hole on motor shaft and adapter



8.



Insert motor shaft dowel pin in slot



V1.0

9.



10.



Place OEM fan blade onto motor shaft adapter – apply red-loctite



11.



NOTE: MOTOR SHAFT IS LEFT-HAND THREAD




STEELE

12.



Secure adapter nut
with a 13/16 socket
at 15 ft/lbs. torque

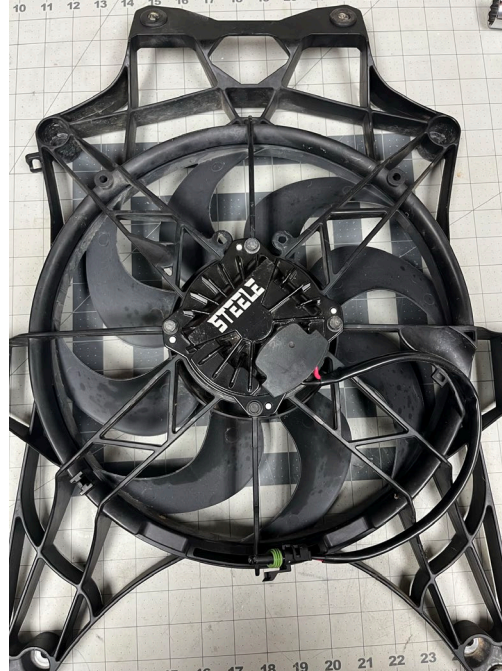

For any questions, please contact us at info@steeleracingproducts.com