

20/20 Clay Single Lap Vent Tile. Fitting Instruction.

Not for use below 20 degree roof pitch

Step 1:




Determine a clear space between rafters to allow the Underbase of the vent to sit between.

Step 2:




Where the underbase needs to locate, remove a Section of batten 270mm wide.

Step 3:

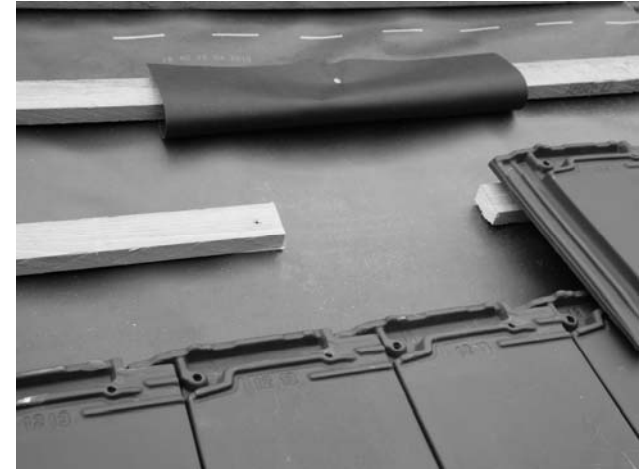


A hole in the felt will need to be cut. Protect this hole by inserting a section of felt at the nearest lap as shown. Wide enough to span beyond the hole

Step 4:

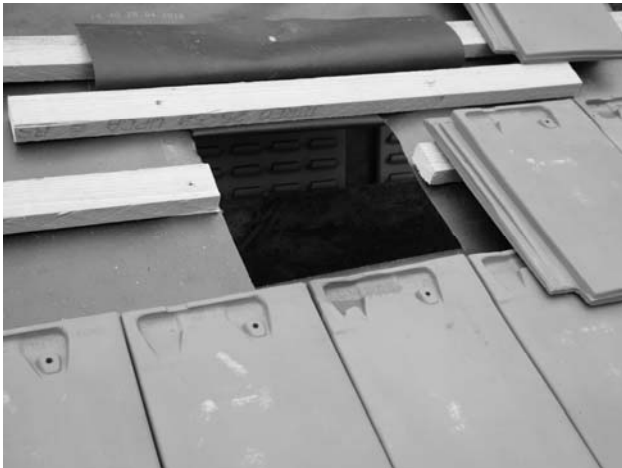


Carefully cut away felt, turning resulting flaps of felt outwards. Insert a support batten 130mm top to top to support the head of the vent.

Step 5:

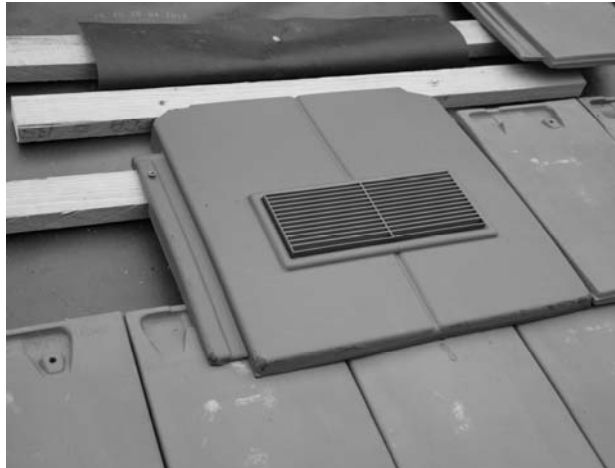

Position tile and secure through extended weather bar on the vent, as shown. Continue tiling.

Step 6:

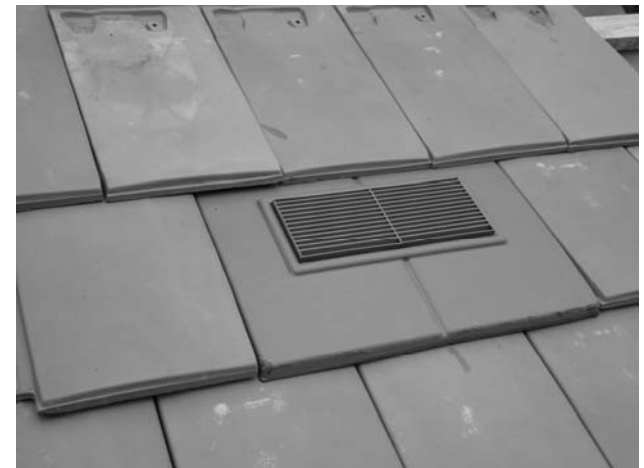

Continue tiling.