




FITTING INSTRUCTIONS: 5025 SMOOTH/TEXTURED SLATE LINE

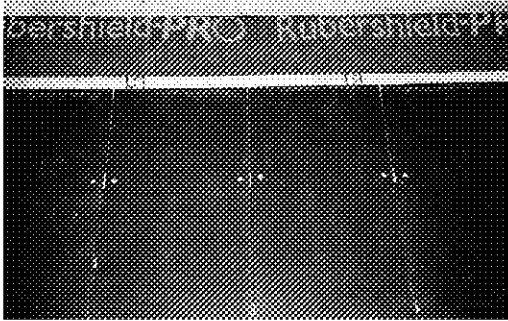


STEP 1: TWO SLATES WILL NEED TO BE TRIMMED. ENSURE THE PERP FORMED BY THE TWO SLATES FALLS BETWEEN RAFTERS.

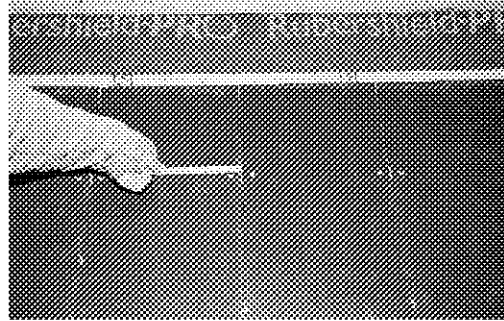

STEP 2: FROM THE PERP MEASURE ACROSS ONE SLATE HORIZONTALLY 130MM. REPEAT THIS MEASUREMENT ACROSS THE OTHER SLATE.

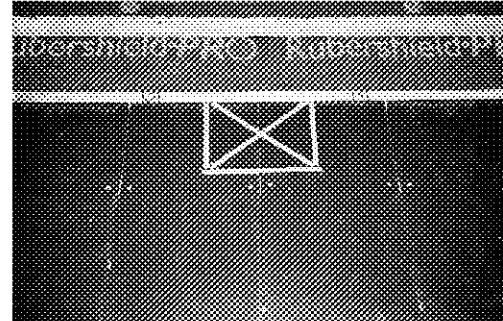

STEP 3: A VERTICAL CUT NEEDS TO BE MADE FROM THE HEAD OF THE SLATE TO WHERE THE SLATE MEETS THE BATTEN, AS THE GRAPHIC. REMOVE SLATES AND TRIM.

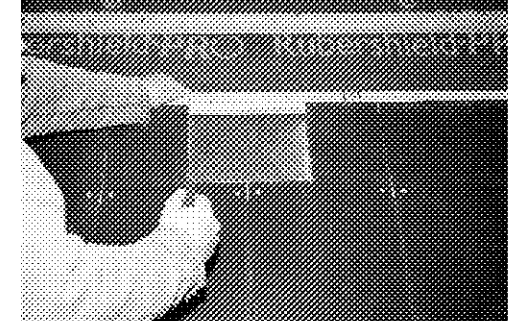


STEP 4: RE-POSITION SLATES AND FIX SECURELY. CAREFULLY CUT BATTEN FROM BETWEEN THE REMOVED SECTION OF SLATE.




STEP 5: TO SECURE THE ENDS OF THE CUT BATTEN, NAIL FURTHER BATTEN ABOVE THE CUT BATTEN AND TOSH NAIL THE ENDS.



STEP 6: CAREFULLY CUT AWAY THE FELT TO THE AREA OF THE REMOVED SLATE. THE TOP SECTION, CUT DIAGONALLY AND PIN BACK TO THE BATTEN ABOVE.

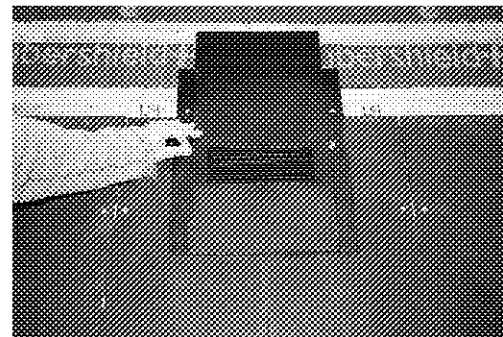

STEP 7: PLACE VENT IN POSITION AND SECURE ENSURING THE TAIL OF THE VENT IS AT THE CORRECT MARGIN. INSERT COMPLETE COPPER DISC RIVETS TO SLOTS IF USING FIBRE CEMENT SLATES.

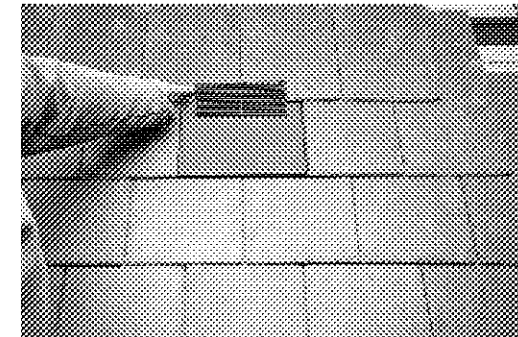

STEP 8: TO MAINTAIN THE AIRFLOW THROUGH THE VENT, TRIM THE SLATES AROUND THE GRILLE.