



# Fitting Instructions: 6030 Smooth/Textured/Natural Top



**Step 1:** Two slates will need to be trimmed. **Ensure the perp formed by the two slates falls between rafters.**

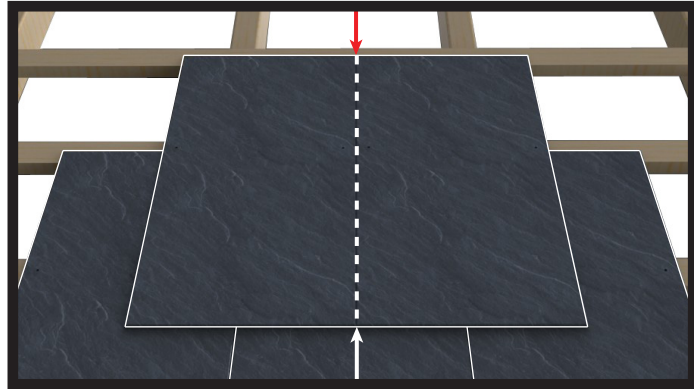


**Step 2:** From the perp measure across one slate horizontally 130mm. Repeat this measurement across the other.

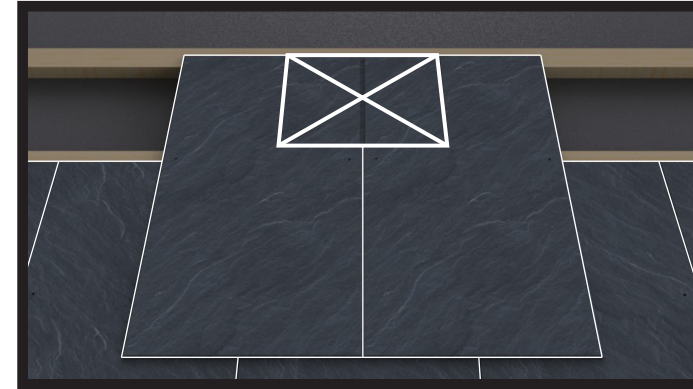


**Step 3:** A vertical cut needs to be made from the head of the slate to where the slate meets the batten. Remove slate and trim.




**Step 4:** Re-position slates and fix securely. Carefully cut batten from between the removed section of slate.

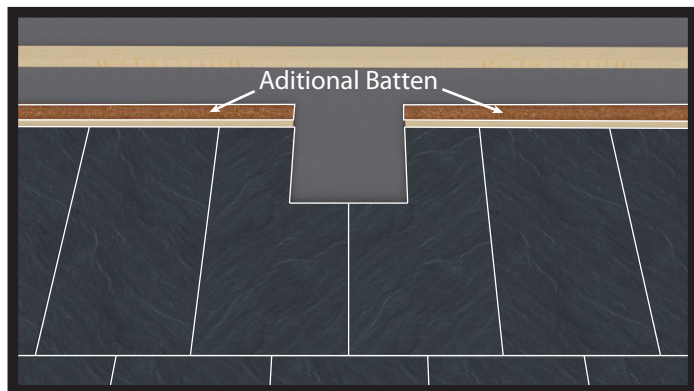


**Step 5:** To secure the ends of the cut batten, nail further batten above the cut batten and tosh nail the ends. (Recommended to span two rafters)

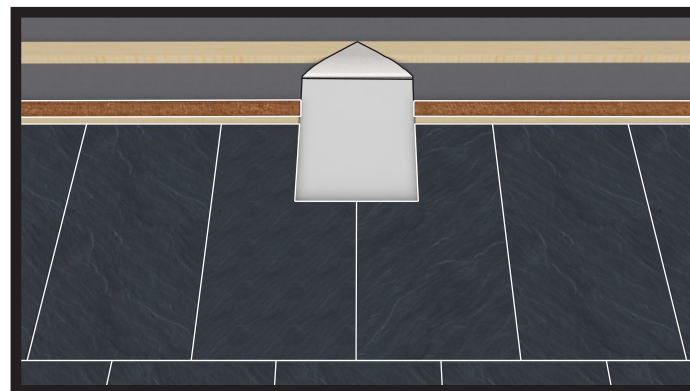

**Step 6:** Carefully cut away the felt to the area of the removed slate. Cut the top section diagonally and pin back to the batten above.

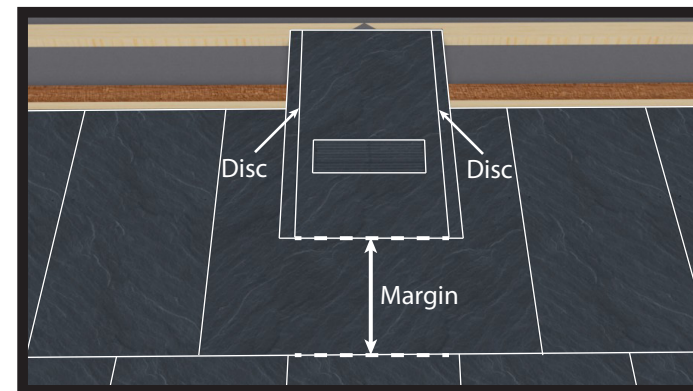

**Step 7:** Place the vent in position and secure, ensuring the tail of the vent is at the correct margin. If required insert complete copper disc rivets to slots.

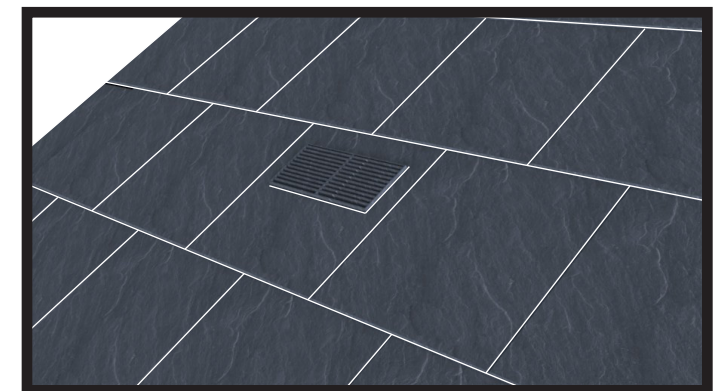

**Step 8:** Continue slating the roof safe in the knowledge your roof will be able to breath for the lifetime of the roof.