


BAT ACCESS FITTING INSTRUCTIONS

Consult your ecologist as to whether to allow bat access into the roofspace or the batten cavity.


STEP 1

DETERMINE POSITION OF BAT ACCESS BETWEEN
RAFTERS.

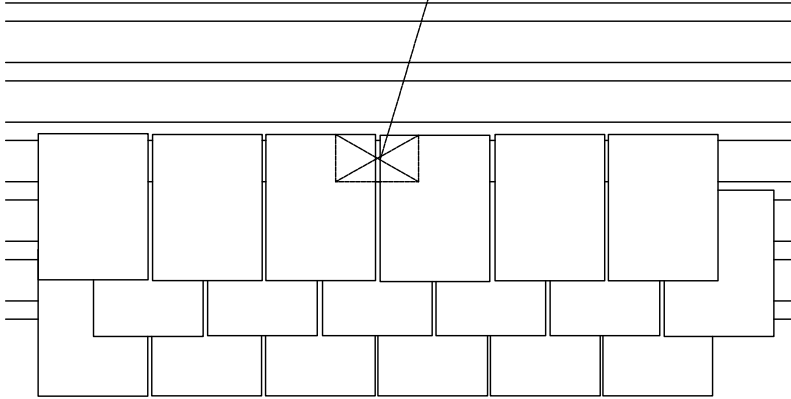

STEP 3 Trim adjacent slates to Access to
maintain perps if required


PLACE UNIT AND SECURE BY NAILING THROUGH
THE FLANGE FELT

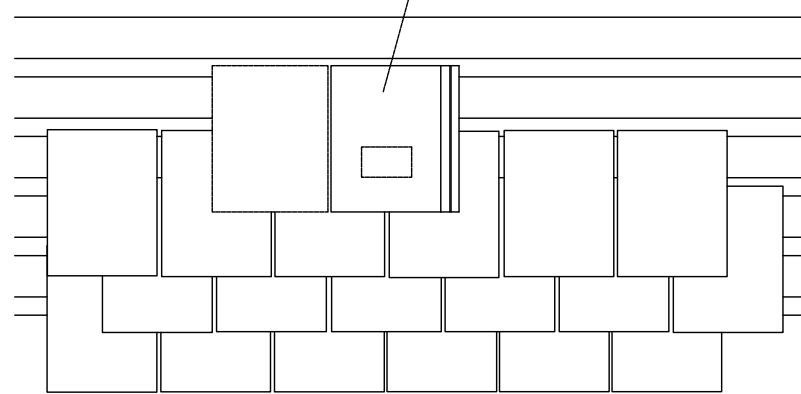

STEP 2

CUT AND REMOVE BATTEN 225MM WIDE

REMOVE AND TRIM SLATES AS SHOWN.
REFIX SLATES.

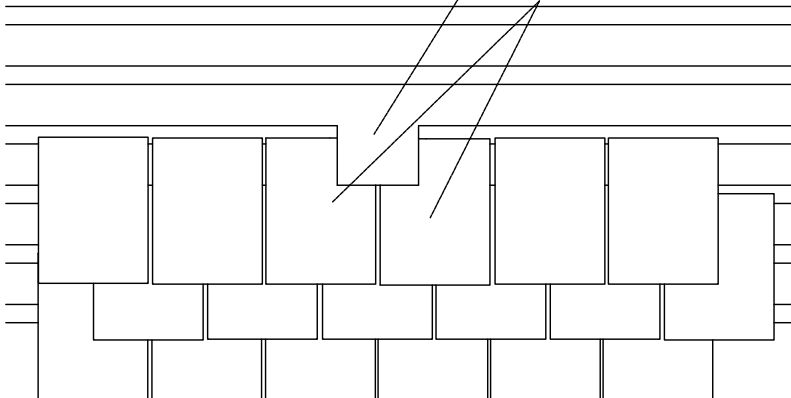

STEP 4

TRIM SLATES AROUND THE
COWL ACCESS POINT.

