




Step 1: Determine position of the vent. To ensure successful location the vent needs to be between rafters.

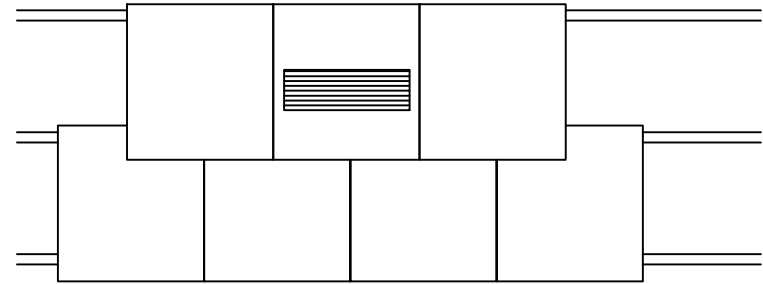

Step 3: Position and secure the vent. Continue tiling .

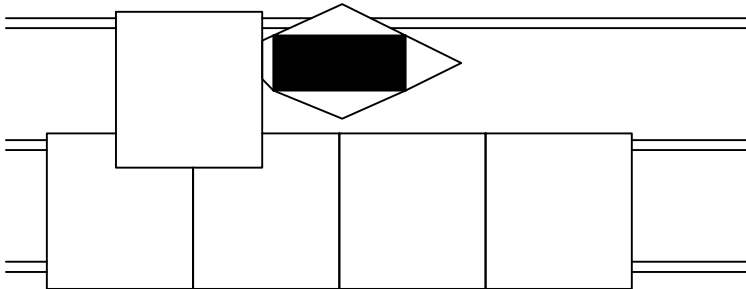

Step 2: Carefully trim felt in a diagonal manner. The resulting cut felt needs to be folded out as shown.

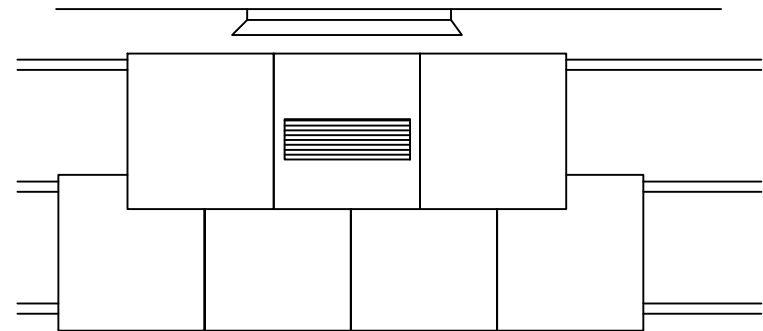

Step 4: Protect the opening in the felt. As close to the vent as possible, a folded piece of roofing felt needs to be inserted into the felt to act as a weir to divert any rain water driven onto the felt, around the aperture.

NOT BELOW 22.5 DEGREE PITCH