

Naturepedic Ready-to-Assemble Foundation | Assembly Instructions

Parts Checklist



2 x End Frame



2 x Side Frame




1 x Center Rail
(Queen size only)



Wooden Slats

Step 1

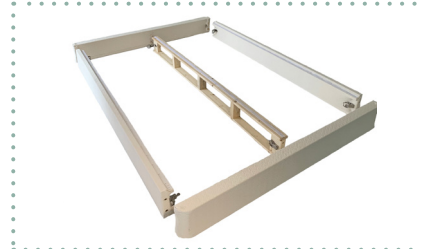

Lay out the four wooden pieces of the foundation frame (five if queen size). Make sure that the Side Frames have the recessed velcro side facing up. This recess on the side frames will hold the slats later in the assembly.

Step 2



Start at one end of the foundation. Insert the dowel rods found in the End Frame through the corresponding holes in the Side Frame.


Step 3



Secure the End Frame to the Side Frame using the hasp on the side frame. Secure the other end of the Side Frame to the same End Frame. You should now have both Side Frames attached to one of the End Frame pieces. For queen sizes and up, attach center rail to end frame using dowel rods and hasp.

Naturepedic Ready-to-Assemble Foundation | Assembly Instructions

Step 4

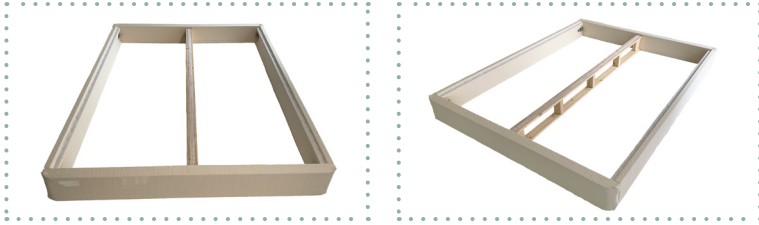


Repeat the process for the opposite End Frame, by attaching Side Frames and Center Rail (queen size only). Ensure all hardware is securely fastened. Again, remember to have the recessed side of the Side Frames facing up.

Step 5



Starting at one end of the foundation, carefully lay the slats inside the foundation frame, Velcro side down. Stretch the slats to ensure a snug fit. Use the Velcro to secure the slats in place.

Step 6

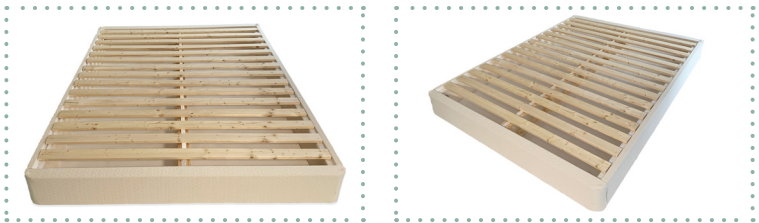

Completed Unit