


**TOOLS NEEDED**


- 3MM & ALLEN WRENCHES
- CABLE CUTTERS

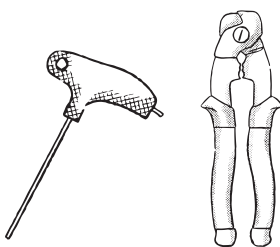


**WARNING:** DO NOT DRILL OR MODIFY YOUR FRAME IN ANY WAY. DOING SO WILL VOID THE WARRANTY. MODIFICATION OF YOUR FRAME IN ANY WAY MAY RESULT IN FRAME FAILURE WHICH MAY RESULT IN SERIOUS INJURY OR DEATH.

**PACKAGE INCLUDES**

- LOAM LEVER
- HINGED CLAMP OR OTHER CHOSEN ADAPTER
- LEVER BOLT
- SHIFTER CABLE

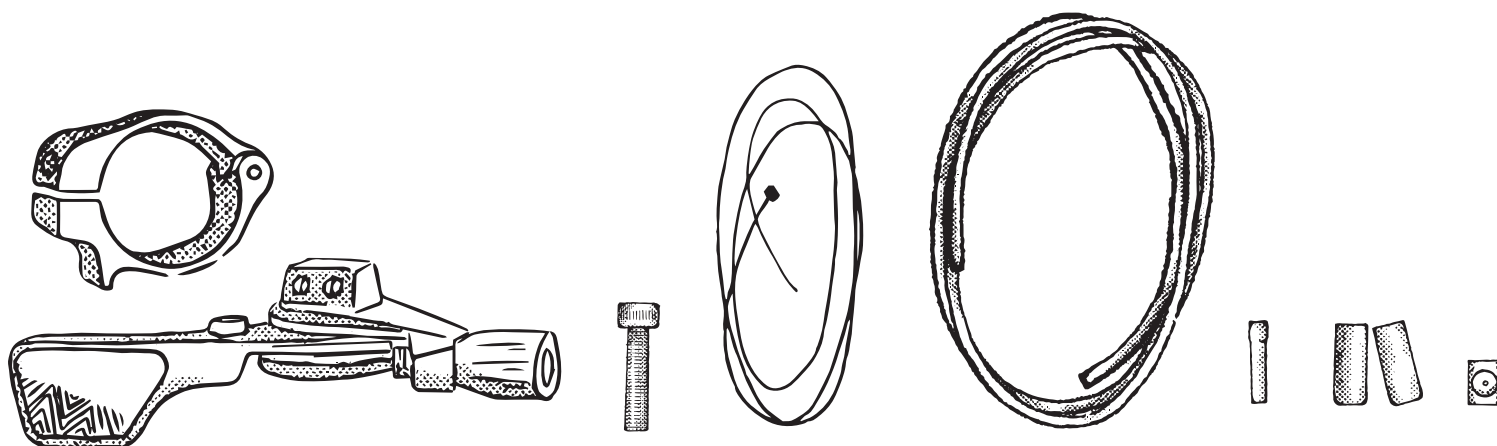**LOAM LEVER INSTALL****STEP 1**


POSITION HINGED CLAMP ON BAR AND ATTACH LEVER TO CLAMP USING EITHER THREADED HOLE ON LEVER BODY TO BEST FIT YOUR HAND. TIGHTEN WITH 3MM ALLEN WRENCH TO MAXIMUM 2NM. NOTE: THIS POSITION CAN BE CHANGED AFTER INSTALL TO FINE TUNE FIT.

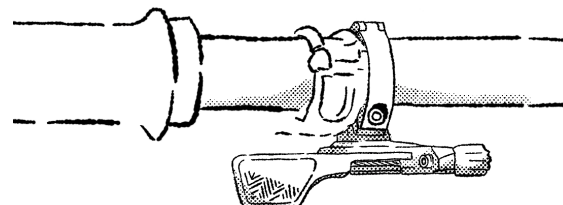

CONT'D...



## STEP 2

LOOSEN BUT DO NOT REMOVE THE CABLE FIXING BOLT ON THE UNDERSIDE OF THE DROPPER LEVER WITH A 3MM ALLEN WRENCH, SCREW THE BARREL ADJUSTER FULLY IN CLOCKWISE, AND MAKE SURE THE CABLE HOUSING HAS A HOUSING END INSTALLED. INSERT THE DROPPER CABLE THROUGH THE BARREL ADJUSTER UNTIL THE HOUSING IS COMPLETED SEATED IN BARREL ADJUSTER, THREADING THE CABLE UNDER THE CABLE FIXING BOLT AND WASHER.

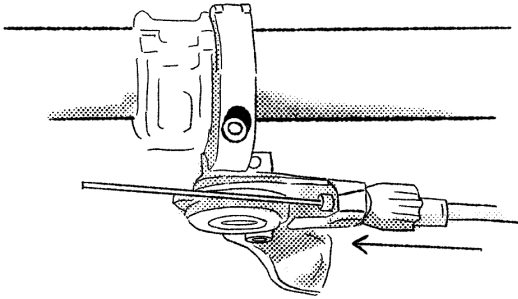

## STEP 3

PULL CABLE TAUT AND TORQUE CABLE FIXING BOLT TO 2.5 NM WITH A 3MM ALLEN WRENCH.  
NOTE: MAKE SURE CABLE IS SEATED IN MACHINED GROOVE TO ENSURE PROPER CABLE RETENTION WITH THE WASHER.

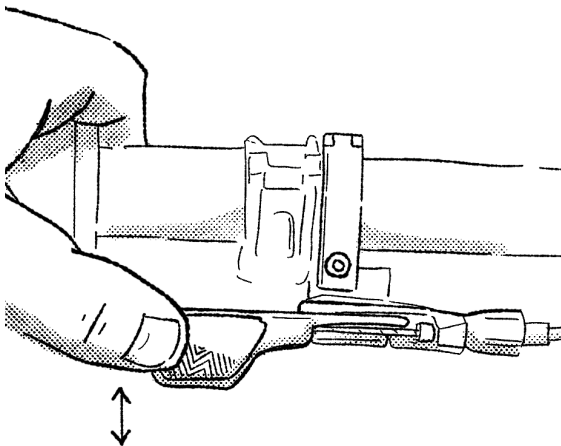
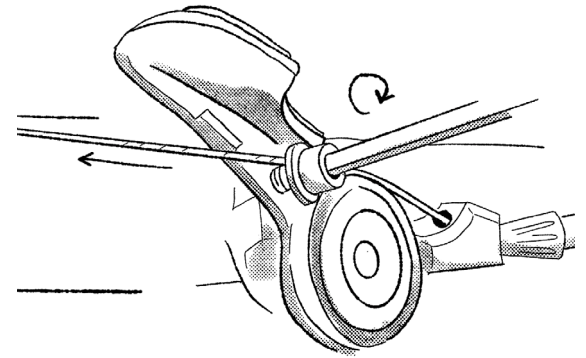


## STEP 4

PUSH THE LEVER 5-10 TIMES TO MAKE SURE THE CABLE HOUSING IS FULLY SEATED AND TO CHECK FOR PLAY IN THE CABLE.  
NOTE: IF THERE IS PLAY IN THE LEVER/CABLE, LOOSEN CABLE FIXING BOLT WITH 3MM ALLEN WRENCH AND PULL CABLE TIGHT A SECOND TIME. FOR MICRO ADJUSTMENT, USE THE BARREL ADJUST ON THE LEVER WHERE THE CABLE ENTERS.

**STEP 5**

TRIM EXCESS CABLE WITH CABLE CUTTERS WITH ENOUGH ROOM TO PLACE CABLE END, APPROXIMATELY 10MM. IT IS IMPORTANT TO USE PROPER CABLE CUTTERS TO PREVENT THE CABLE FROM FRAYING.

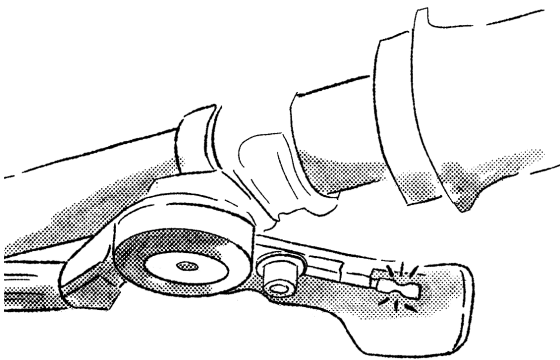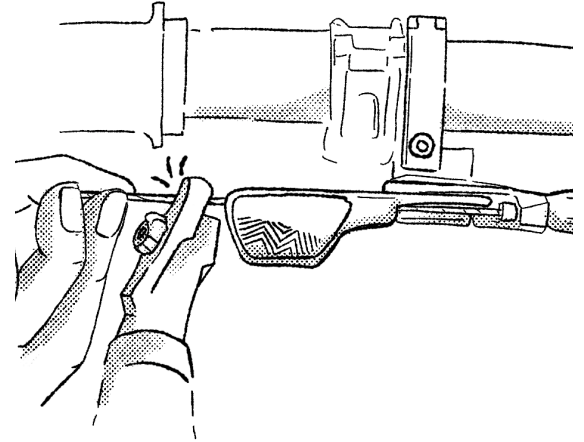

**STEP 6**

CRIMP CABLE END IN PLACE.  
PUSH LEVER.  
DROP POST.  
GET RAD.

