
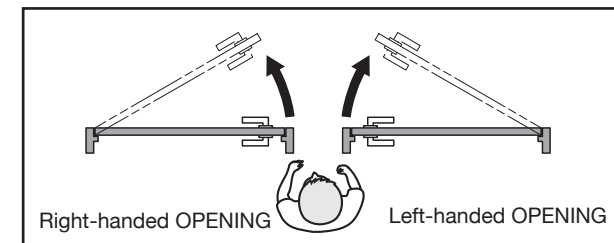
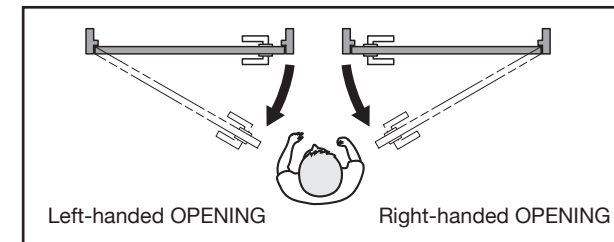


# LDD-S STRIKE INSTALLATION TEMPLATE

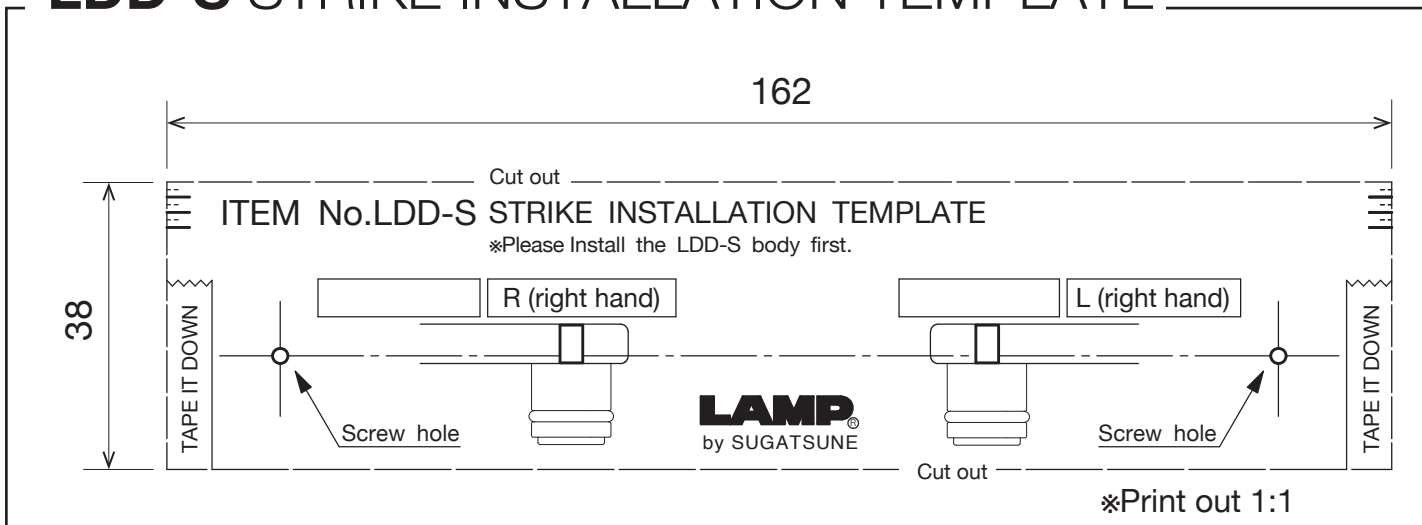

## HOW TO USE THE TEMPLATE

### ① Cut out above template

(it is shown for right-handed) Cut out

Pick screw holes above in red circle with a pencil for smooth installation

### ② Installation for body

Installation position is changed depending on "C"

Frame  
Door

### ③ Hold the arm on the template of the arm position

Door

Tape it down for easy installation

### ④ Mark up screw holes and install the strike plate

Door

Screw for strike plate (4x16)

**WARNING** Proceed with the final adjustment before opening and closing the door

### ⑤ While arm is fully extended assure that arm enters center of strike channel

Roller  
Center position  
1~2mm  
2~3mm

\*Please see an installation for more details