STANDOFFS MOUNTING KIT

Everything you need to mount signage, artwork, posters or awards.
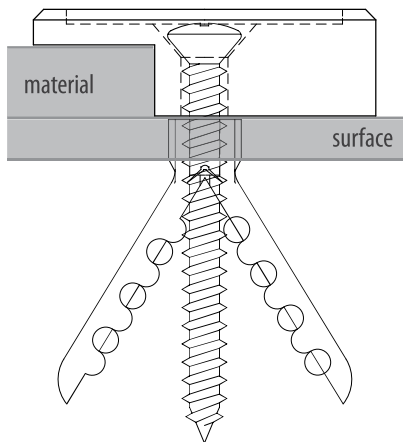
Here's what you'll find in your kit:

NOTE: Your kit includes two vinyl shims to accommodate different material thicknesses. See table below for how many shims to use.
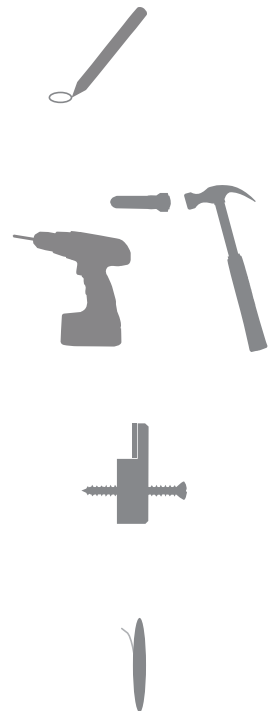
nylon anchor*

*not required for wood
pre-drill 1/8" hole instead

vinyl shims

clip →

oval head screw

← disc

Watch our how-to videos: standoffsystems.com/howto

material

surface

Material Thickness	Vinyl Shims
1/8" thick	2
3/16" thick	1
1/4" thick	0

1   Mark the wall 3/16" above and below your desired location of the panel edges.

2   Pre-drill 1/4" holes in your surface, then insert **nylon anchors** into the holes and tap them flush.

3   Drive **oval head screws** into anchor to mount lower **clips**. Slide in panel and install upper clips.

4   Remove the adhesive backing from **discs** and place one into the recess on the face of each clip.

TIP: Panel clips should be installed at the top and bottom and at least 2–3" in from the sides of glass mirrors (plastic materials not critical).

MADE
IN USA

GYFORD
standoff systems™