


ADAPTIV MOTORCYCLE ACCESSORY MOUNT™

SKINNY BAR MOUNT INSTALLATION

ADAPTIV
TECHNOLOGIES

CONTENTS

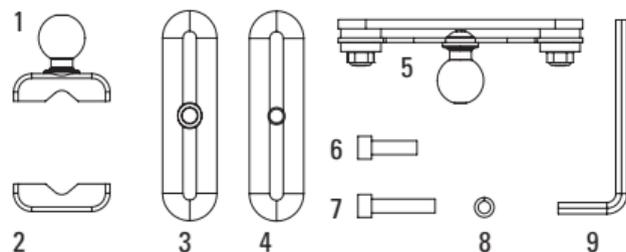

Item No.	Name	Qty.
1	Skiny Bar Top Clamp	1
2	Skiny Bar Bottom Clamp	1
3	Left Link	1
4	Right Link	1
5	Mounting Plate	1
6	10-24 x 5/8" Screw	2
7	10-24 x 7/8" Screw	3
8	Lock Washer	3
9	5/32" Hex Key	1

This mount is designed for attachment to mirror stems and other bars 5/16" - 9/16" (8mm - 14mm) in diameter.



Warning: Installation of the mount should be performed by a qualified technician. Improper installation may interfere with the safety and proper operation of the product and/or vehicle.

1. Place the motorcycle on a center stand.
2. Using the 5/32" Hex Key, remove the 10-24 x 7/8" Screw and Lock Washer to disassemble the Mount as shown in **Figure 1**.

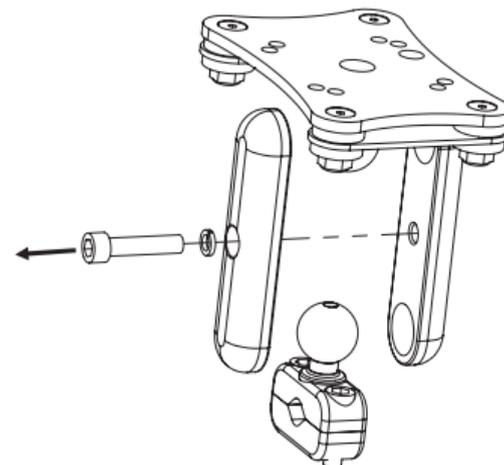


Figure 1

3. Using the $5/32$ " Hex Key, disassemble the bottom portion of the mount and reassemble onto mirror stem or other bar as shown in **Figure 2**. Use the longer 10-24 x $7/8$ " Screws if needed.

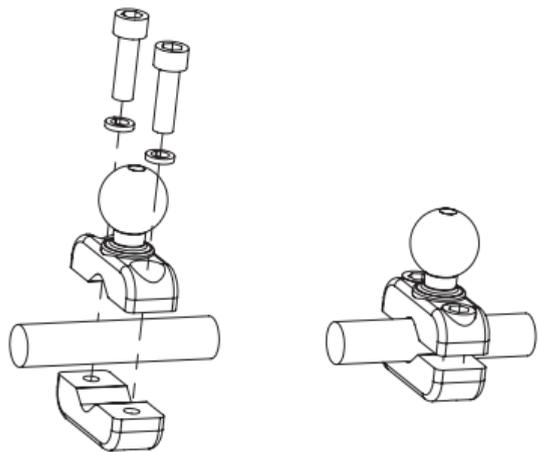


Figure 2

4. Using the $5/32$ " Hex Key, loosely reassemble the top portion of the mount as shown in **Figure 3**.

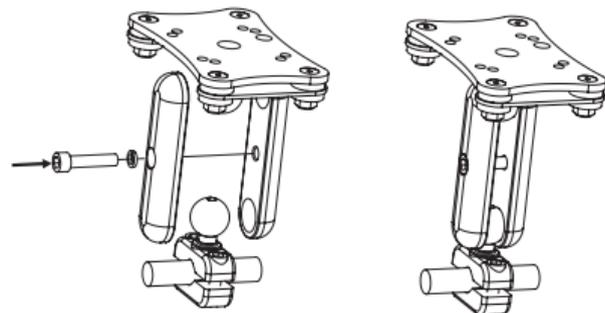


Figure 3

5. Fasten the accessory device or cradle to the top of the *Mounting Plate* (**Figure 4**) utilizing appropriate hardware. The eight "AMPS" pattern holes (1-8) will accommodate #8 or M4 screws. The larger hole (9) will accommodate a $1/4$ " or M6 screw. Alternatively, double sided adhesive tape or hook and loop fastener may be used.

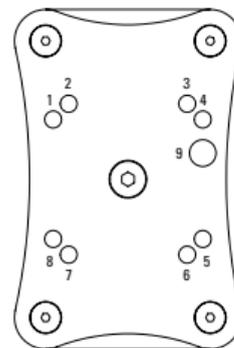


Figure 4

6. Adjust the mount to the desired position and tighten the screws to lock the assembly in place.



Warning: Verify that the position of the mount and accessory will not interfere with proper operation of the vehicle.



Warning: Make sure all screws and nuts are securely tightened before each ride so that the assembly will not move during use.

Adaptiv Technologies, LLC

1639 11th Street
Suite 156
Santa Monica, CA 90404

www.AdaptivTech.com

866-ADAPTIV
(866-232-7848)
646-722-0253