


# ADAPTIV MOTORCYCLE ACCESSORY MOUNT™

## KZ MOUNT INSTALLATION

ADAPTIV  
TECHNOLOGIES

### CONTENTS

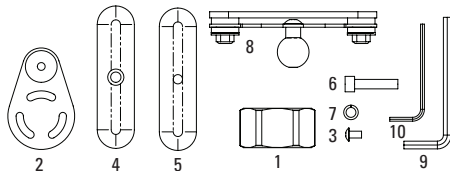

Item No.	Name	Qty.
1	Steering Stem Nut	1
2	Extension Plate	1
3	Extension Plate Screw	3
4	Left Link	1
5	Right Link	1
6	Positioning Screw	1
7	Positioning Lock Washer	1
8	Mounting Plate	1
9	5/32" Hex Key	1
10	5/64" Hex Key	1

This mount is designed for 2006-2008 Kawasaki ZX-10.



**Warning:** Installation of the mount should be performed by a qualified technician. Improper installation may interfere with the safety and proper operation of the product and/or vehicle.

1. Place the motorcycle on a center stand.
2. Remove the stock *Steering Stem Nut* (also known as Yoke Nut) on the motorcycle and replace with the supplied *Steering Stem Nut*. Tighten to 70% of the vehicle manufacturer's torque specification. Note that the stock washer should be reused.



**Tip:** Wrap the *Steering Stem Nut* in multiple layers of masking tape or a shop rag to prevent damage from the wrench.

3. Using the 5/32" *Hex Key*, remove the *Positioning Screw* and *Positioning Lock Washer* to disassemble the Mount as shown in **Figure 1**.

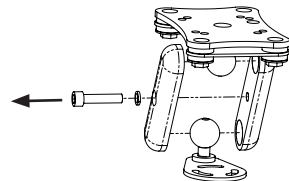


Figure 1

4. Using the  $5/64$ " Hex Key, fasten the *Extension Plate* to the *Steering Stem Nut* with the three *Extension Plate Screws* as shown in **Figure 2**. The ball should be oriented towards the front of the motorcycle.




Figure 2

5. Using the  $5/32$ " Hex Key, loosely reassemble the mount as shown in **Figure 3**.

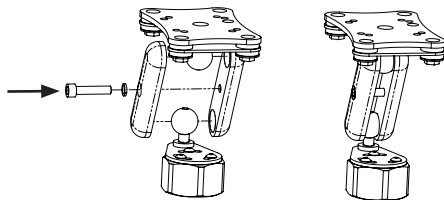


Figure 3

6. Fasten the accessory device or cradle to the top of the Mounting Plate (**Figure 4**) utilizing appropriate hardware. The eight "AMPS" pattern holes (1-8) will accommodate #8 or M4 screws. The larger hole (9) will accommodate a  $1/4$ " or M6 screw. Alternatively, double sided adhesive tape or hook and loop fastener may be used.

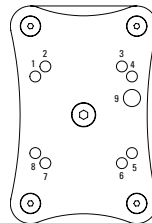


Figure 4

7. Adjust the mount to the desired position and tighten the *Positioning Screw* to lock the assembly in place.



**Warning:** Verify that the position of the mount and accessory will not interfere with proper operation of the vehicle.



**Warning:** Make sure all screws and nuts are securely tightened before each ride so that the assembly will not move during use.

---

**Adaptiv Technologies, LLC**

1639 11th Street  
Suite 156  
Santa Monica, CA 90404

[www.AdaptivTech.com](http://www.AdaptivTech.com)

866-ADAPTIV  
(866-232-7848)  
646-722-0253