





Four-Door RZR 900 / 1000 / Turbo Door Inserts

Hardware Pack Contents:

- 1 2- Small Triangle Panel Z-Brackets
- 2 6- Nut Insert Clips
- 3 4- Allen Bolts with Washers and Nuts
- 4 6- Gold Bolts with Lock Washers & Washers

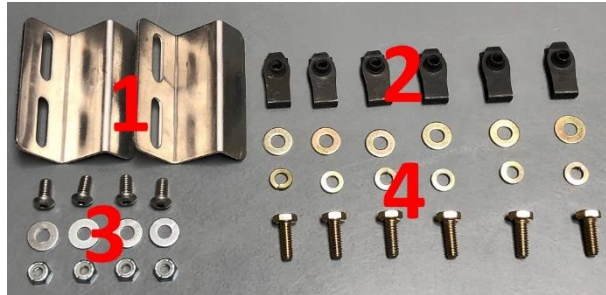

1. **FRONT INSERTS:** Remove factory torx head bolts from RED ARROWS in picture below. Note the front torx location.
2. Clip Nut Insert (#2 in picture above) to center door frame at YELLOW ARROW, aligning with center hole in insert.
3. Reinstall factory torx bolts to attach insert to door at RED ARROWS. Use the supplied gold bolt and washers (#4 in picture above) to secure insert to nut clip at Yellow Arrow.

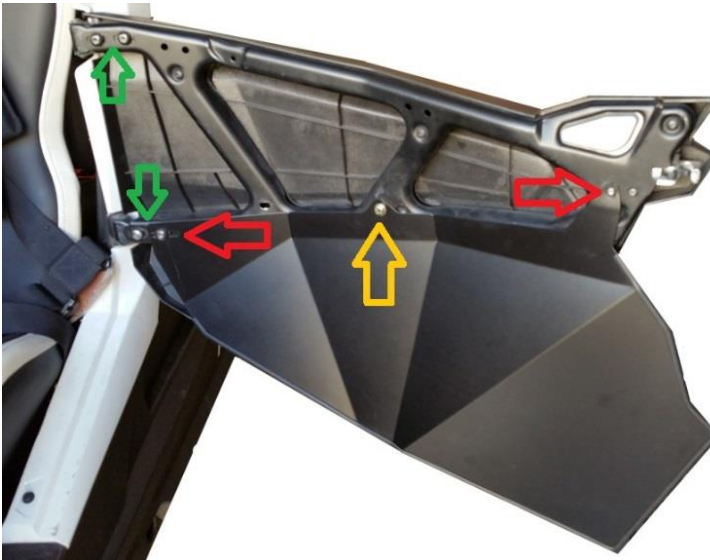

4. **TIP:** For final adjustment and centering: Loosen the 4 torx bolts at GREEN ARROWS and also loosen the two torx bolts at the door latch striker "D" (not shown in pics, this is up front on the body plastic). When all 6 of these torx bolts are loose, door can be latched closed and moved around for perfect fit. Hold in place, then tighten.
5. **REAR INSERTS** - Remove factory torx bolt at rear. Use two nut insert clips for middle and front. Use same adjustment method as front doors for perfect fit.
6. **REAR TRIANGLES** -- Identify the small triangular panels using picture above right. If you have the wrong triangles please call or email.
7. Attach the Small Panel Z-Brackets to small triangles using allen bolts and hardware as shown in picture below.
8. Clip small triangular panel in position, remove and reinstall roll cage bolt to secure.

Any questions/issues please email jake@utvgiant.com

Or Call us at 949-290-2144. Thanks! MADE IN USA!

