


COBALT

A Q U A T I C S

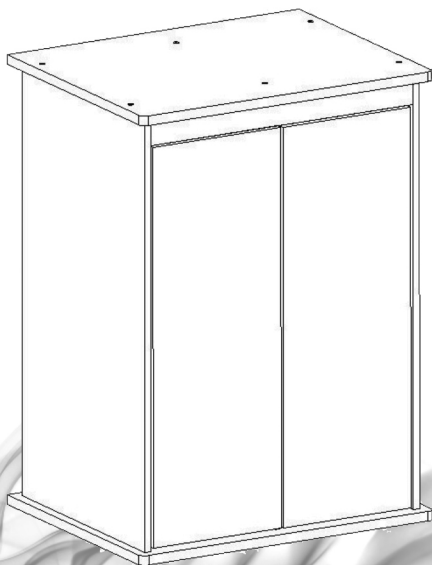

AQUARIUM AND INTEGRATED
FILTRATION SYSTEM

COMPLETE WITH TANK, LID,
FILTRATION, PUMP

ACUARIO Y SISTEMA DE
FILTRACIÓN INTEGRADO

COMPLETO CON TANQUE, TAPA,
FILTRACIÓN, BOMBA

AQUARIUM ET SYSTÈME DE
FILTRATION INTÉGRÉ

COMPLÉT AVEC RÉSERVOIR, COUVERCLE,
FILTRATION, POMPE

C-VUE

aquarium stand




www.cobaltaquatics.com

Customer Service: (803) 591-9500

C-VUE STAND PARTS LIST

Door Hinges
Camlocks
Camlock Screws
½" Hinge Screws
1" Cabinet Foot Screws
Plastic Cabinet Feet
Stand Panels

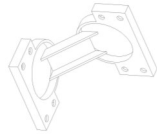

Special Note on installing Camlock screws

When installing camlock screws into pre-installed nylon adapters. Be sure not to over tighten, or cams will not engage correctly.

Thread camlock screws straight up and down as possible and only screw in just to the point where you cannot see thread any more. If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.


Over tightening the camlock screws can also cause damage to the outer finish of stand, this kind of damage is not covered by warranty.




C-VUE 18, 26, 45 ASSEMBLY INSTRUCTIONS

Step 1- Attaching Right Side Panel to Back Panel

[requires two (2) Camlocks and two (2) Camlock Screws]

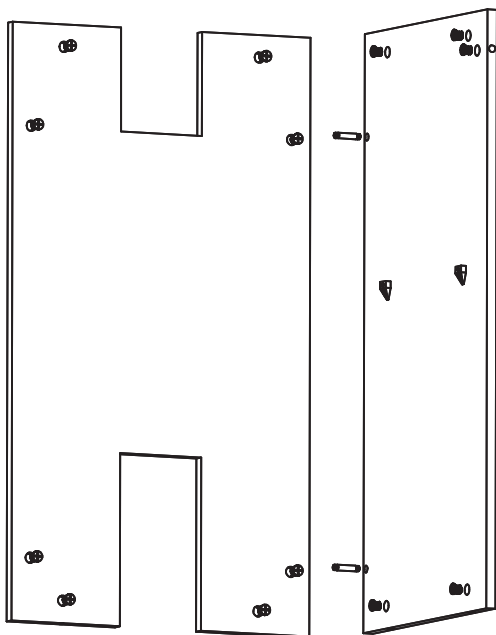

- Insert two (2) Camlock Screws into the Right Side Panel.
 - Be sure to screw in just until the threads are not visible, no more.
- Insert two (2) Camlocks into the Back Panel
- Attach Right Side Panel into the Back Panel
- Tighten Camlocks to secure the Right Side Panel to Back Panel.
 - If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

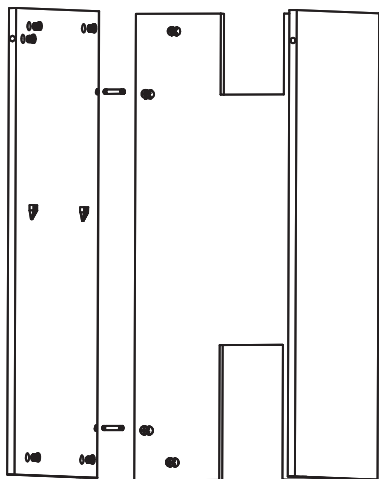

Step 2- Attach Left Side Panel to Back Panel


[requires two (2) Camlocks and two (2) Camlock Screws]


- Insert two (2) Camlock Screws into the Left Side Panel.
- Be sure to screw in just until the threads are not visible, no more.
- Insert two (2) Camlocks into the Back Panel.
- Attach the Left Side Panel to the Back Panel.
- Tighten Camlocks to secure the Left Side Panel to Back Panel.
- If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

Step 3- Attaching Bottom Panel to Stand

[requires six (6) Camlocks and six (6) Camlock Screws]

- Insert six (6) Camlock Screws into the Bottom Panel.
- Be sure to screw in just until the threads are not visible, no more.
- Insert two (2) Camlocks into the Right Side Panel
- Insert two (2) Camlocks into the Left Side Panel
- Insert two (2) Camlocks into the Back Panel
- Attach Bottom Panel to Cabinet
- Tighten Camlocks to secure the Bottom Panel to the Cabinet
- If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

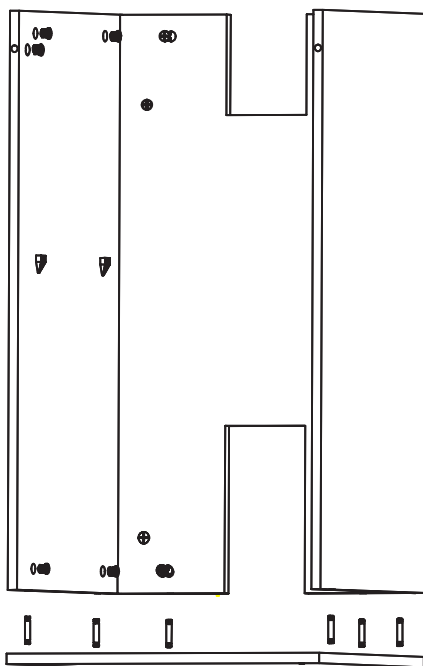

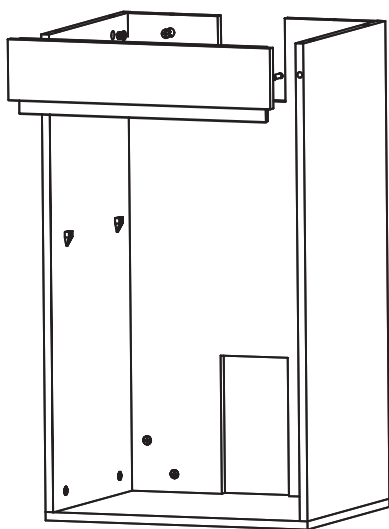


Step 4- Attaching Front Panel to Stand [requires two (2) Camlocks and two (2) Camlock Screws]


- Insert two (2) Camlock Screws into the Front Panel.
 - Be sure to screw in just until the threads are not visible, no more.
- Insert one (1) Camlocks into the Right Side Panel
- Insert one (1) Camlocks into the Left Side Panel
- Attach Front Panel to Cabinet
- Tighten Camlocks to secure the Bottom Panel to the Cabinet
 - If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

Step 5- Attaching the Top Panel to the Cabinet

[requires eight (8) Camlocks and eight (8) Camlock Screws]

- Insert eight (8) Camlock Screws into the Top Panel.
 - Be sure to screw in just until the threads are not visible, no more.
- Insert two (2) Camlocks into the Left Side Panel
- Insert two (2) Camlocks into the Right Side Panel
- Insert two (2) Camlocks into the Back Panel
- Insert two (2) Camlocks into the Front Support Brace
- Place the Top Panel on the Cabinet
- Tighten the Camlocks to secure the Top Panel to the Cabinet
 - If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.


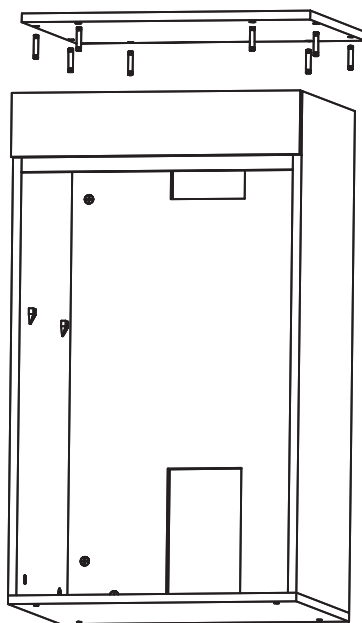


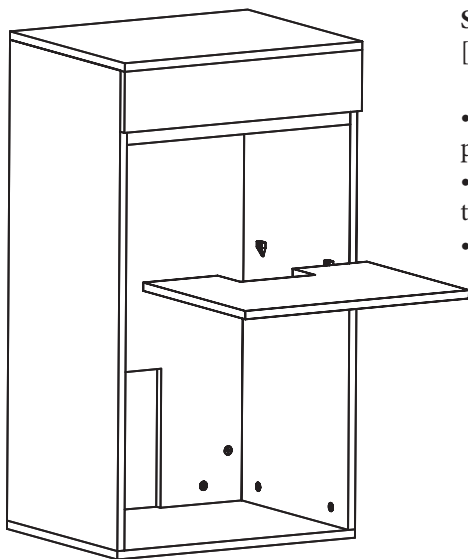

Step 6- Insert Shelf into stand

[requires four (4) shelf holders]

- Insert four (4) shelf holders into pre-drilled holes.
- Press in firmly, you may need to tap lightly with hammer.
- Place shelf onto shelf holders

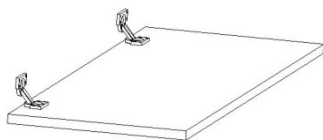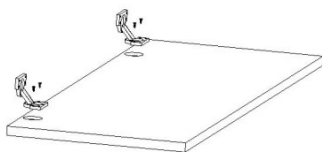

Step 7- Attaching Hinges



[requires four (4) 1/2" screws]

- Attach the Hinges to the Left Side Panel and Right Side Panel
- Line up hinges with pilot holes and secure with 1/2" screws.
 - Be sure to make screws with tight snug fit, but do not over tighten.

Step 8- Installing the door

[requires four (4) ½" screws]

- Mount Door to the Hinge on the Side Panel using ½" screws.
- Line up hinges with pilot holes and secure with 1/2" screws.
 - Be sure to make screws with tight snug fit, but do not over tighten.

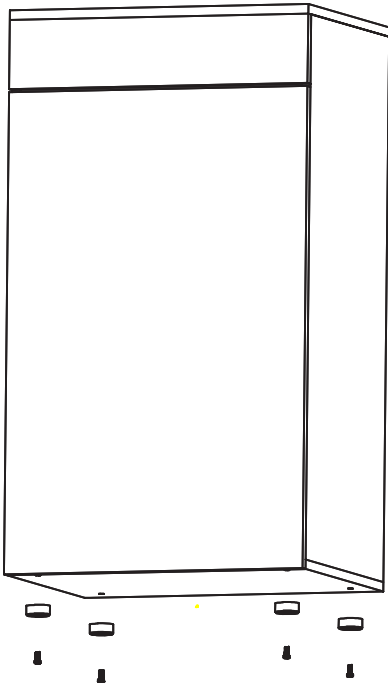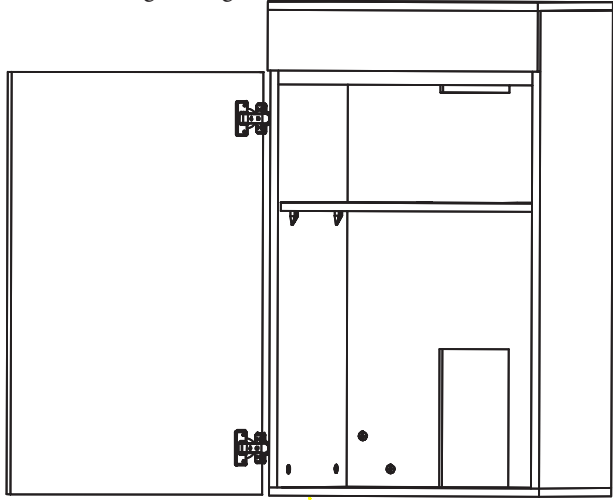

Step 9- Installing the cabinet feet


[requires four [4] cabinet feet and four (4) 1" cabinet feet screws]

- Align feet with pilot holes
- Secure with 1" screws.
 - Be sure to make screws with tight snug fit, but do not over tighten.

C-VUE 40 ASSEMBLY INSTRUCTIONS

Step 1- Attaching Right Side Panel to Back Panel

[requires two (2) Camlocks and two (2) Camlock Screws]

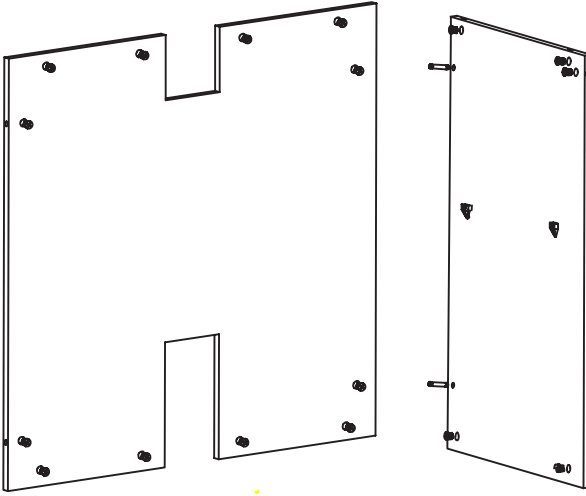


- Insert two (2) Camlock Screws into the Right Side Panel.
 - Be sure to screw in just until the threads are not visible, no more.
- Insert two (2) Camlocks into the Back Panel
- Attach Right Side Panel into the Back Panel
- Tighten Camlocks to secure the Right Side Panel to Back Panel.
 - If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

Step 2- Attach Left Side Panel to Back Panel

[requires two (2) Camlocks and two (2) Camlock Screws]


- Insert two (2) Camlock Screws into the Left Side Panel.
- Be sure to screw in just until the threads are not visible, no more.
- Insert two (2) Camlocks into the Back Panel.
- Attach the Left Side Panel to the Back Panel.
- Tighten Camlocks to secure the Left Side Panel to Back Panel.
- If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

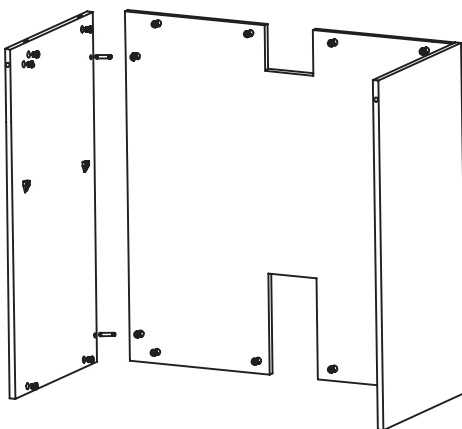

Step 3- Attaching Bottom Panel to Stand

[requires eight (8) Camlocks and eight (8) Camlock Screws]


- Insert eight (8) Camlock Screws into the Bottom Panel.
- Be sure to screw in just until the threads are not visible, no more.
- Insert two (2) Camlocks into the Right Side Panel
- Insert two (2) Camlocks into the Left Side Panel
- Insert four (4) Camlocks into the Back Panel
- Attach Bottom Panel to Cabinet
- Tighten Camlocks to secure the Bottom Panel to the Cabinet
- If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

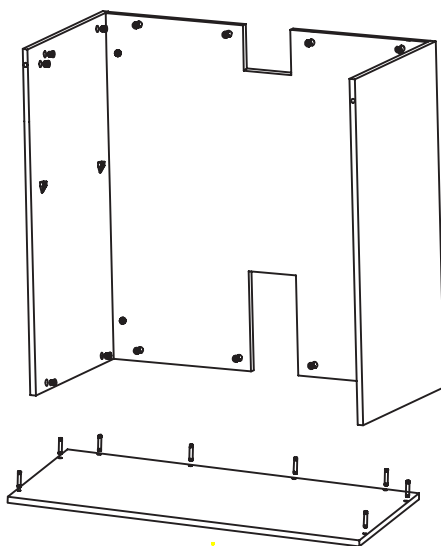

Step 4- Attaching Front Panel to Stand


[requires two (2) Camlocks and two (2) Camlock Screws]

- Insert two (2) Camlock Screws into the Front Panel.
- Be sure to screw in just until the threads are not visible, no more.
- Insert one (1) Camlocks into the Right Side Panel
- Insert one (1) Camlocks into the Left Side Panel
- Attach Front Panel to Cabinet
- Tighten Camlocks to secure the Bottom Panel to the Cabinet
- If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

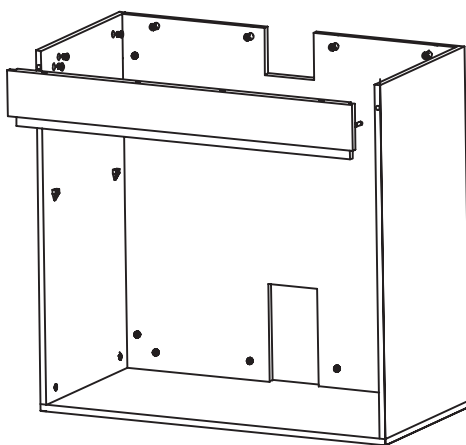


Step 5- Attaching the Top Panel to the Cabinet

[requires twelve (12) Camlocks and twelve (12) Camlock Screws]

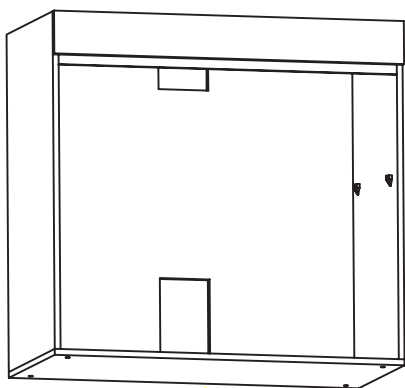

- Insert twelve (12) Camlock Screws into the Top Panel.
- Be sure to screw in just until the threads are not visible, no more.
- Insert two (2) Camlocks into the Left Side Panel
- Insert two (2) Camlocks into the Right Side Panel
- Insert four (4) Camlocks into the Back Panel
- Insert four (4) Camlocks into the Front Support Brace
- Place the Top Panel on the Cabinet
- Tighten the Camlocks to secure the Top Panel to the Cabinet
- If cam will not engage during assembly, then you must unscrew the camlock screw slightly until the head of the screw and engage with cam.

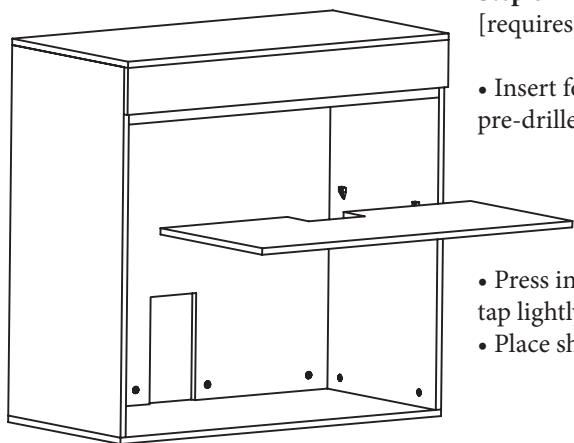


Step 6- Insert Shelf into stand [requires four (4) shelf holders]


- Insert four (4) shelf holders into pre-drilled holes.
- Press in firmly, you may need to tap lightly with hammer.
- Place shelf onto shelf holders

Step 7-Installing middle support beam.

[requires four (4) 1/2" screws and two (2) angle brackets]

- Place beam inside stand on front edge and behind top front panel.
- Line up angle bracket with pilot holes
- Secure with 1/2" screws.
 - Be sure to make screws with tight snug fit, but do not over tighten.

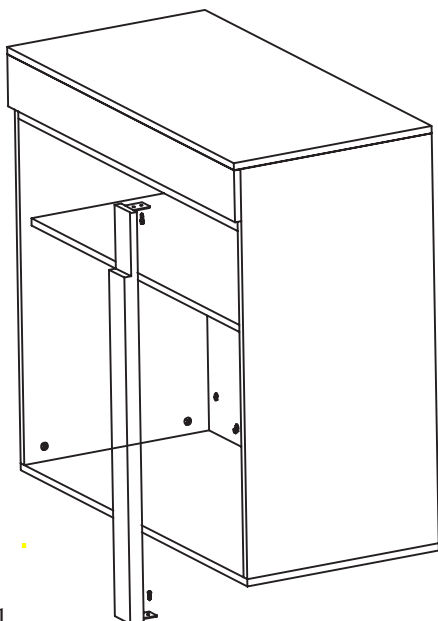

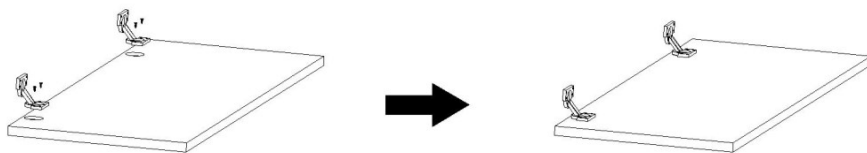

Step 8- Attaching Hinges


[requires eight (8) ½" screws]


- Attach the Hinges to the Left Side Panel and Right Side Panel
- Line up hinges with pilot holes and secure with 1/2" screws.
 - Be sure to make screws with tight snug fit, but do not over tighten.

Step 9- Installing the doors

[requires eight (8) ½" screws]

- Mount Door to the Hinge on the Side Panel using ½" screws.
- Line up hinges with pilot holes and secure with 1/2" screws.
 - Be sure to make screws with tight snug fit, but do not over tighten.

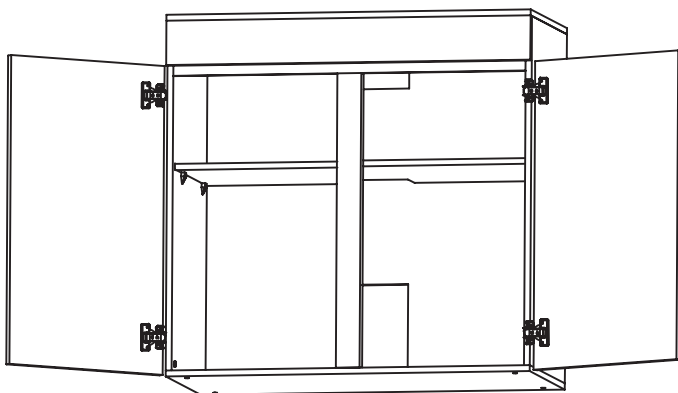

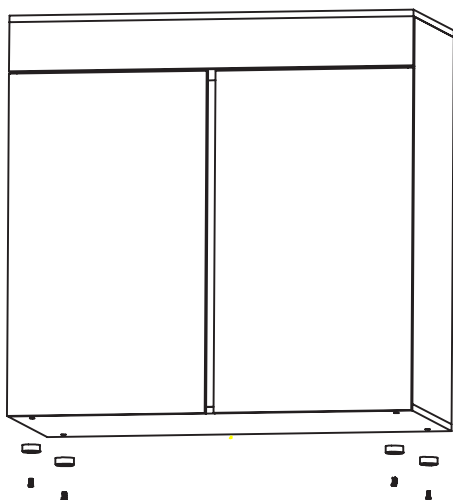

Step 10- Installing the cabinet feet [requires four [4] cabinet feet and four (4) 1" cabinet feet screws]

- Align feet with pilot holes
- Secure with 1" screws.
 - Be sure to make screws with tight snug fit, but do not over tighten.

WARRANTY

Cobalt International, Inc will warrant this product to be free of manufacturer defects for a period of ninety (90) days. Cobalt will repair or replace, at its option, any C-VUE aquarium stand or component which is deemed defective in workmanship or materials. All warranty claims **MUST** be submitted with a valid proof of purchase. This warranty does not cover damage resulting from modifications, misuse, negligence, improper handling and installation, or incidental and/or consequential damages resulting from the use of this product. Any modification, including but not limited to cutting, drilling, or changing out of parts to non-stock components, etc will render this warranty void. Incidental and/or consequential damages may include (but are not limited to):

If the stand is not placed on a flat level surface, designed to support the combined weight of the stand and aquarium when filled. If an aquarium larger than that for which the stand was designed is placed on the stand. If the stand is moved without first removing the aquarium, If the stand is modified in any way from its original condition. If the stand shows any damage due to water, impact, negligence, or mishandling. If the stand is used for other than its intended purpose.

Cobalt International is not responsible for and warranty does not cover livestock loss (including but not limited to, fish, plants, corals, live rock, other invertebrates, or aquarium décor), personal injury, property loss, or damage (direct, incidental, or consequential) resulting from the use of this product. Use of this product indicates acknowledgement and acceptance of these terms. This warranty gives you specific legal rights. You may also have other legal rights that vary from state to state*.

*Because some states do not allow the exclusion of incidental or consequential damages, this exclusion may not apply to you.

Questions or Missing Parts:

Call 803-591-9500 or email info1@cobaltinternational.com

WARRANTY REGISTRATION

Please Fill Out Completely and Return within 14 days from date of purchase. *(Please Print)*

Customer Name: _____

Address: _____

City: _____

State: _____ Zip: _____

Phone#: _____

Email: _____

☐ Yes I would like to receive emails on Cobalt News
New Products, Sales, Rebates

☐ No I do not want receive emails on Cobalt News

Date of Purchase: _____ Model _____

Dealer Purchased From: _____

Please mail warranty registration and Proof of Purchase to:

Cobalt International
Attn: Warranty Dept.—CVUE STAND
624 Wilkerson Rd
Rock Hill, South Carolina 29730

Complete this warranty card and return to Cobalt to obtain your ninety (90) day warranty from date of purchase. Completed warranty cards can also be submitted electronically with proof of purchase to
info1@cobaltinternational.com



Thank you for your purchase!



Distributed By: Cobalt International
624 Wilkerson Rd
Rock Hill, South Carolina 29730

www.cobaltaquatics.com
803-591-9500 • info1@cobaltinternational.com