


# Installation Instructions – EX® 6 & 59 series




1 Cut cable squarely.




2 Using a fixed blade prep tool in good condition, prepare cable to 1/4" x 1/4" dimensions. Use edge of tool if no stop.

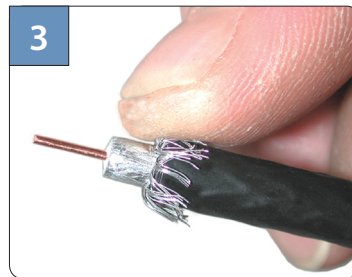

3 Fold back braid. If Trishield or Quadshield remove additional foil layer and fold back remaining braid.

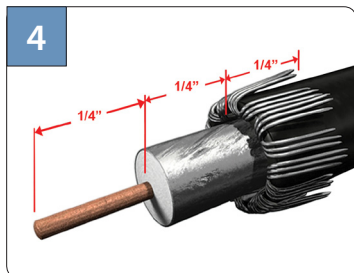


4 Cable is prepared to proper dimensions

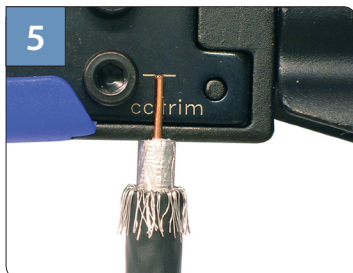


5 Ensure cable is prepared to 1/4" x 1/4" dimensions. Use gauge on VT tool to recheck center conductor.




6 Guide center conductor and dielectric into post. Insert cable into connector until dielectric is flush within post.

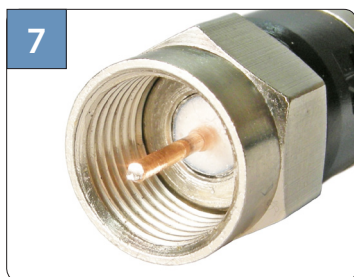

7 Dielectric is flush within the post.

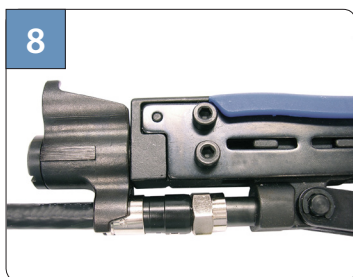

8 Properly seat connector and compress fully.

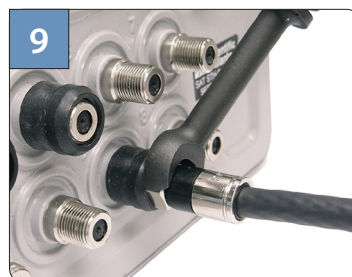

9 Tighten connector to recommended torque.



EX6



EX6XL



EX59



EX59XL

## Part Numbers

- EX6
- EX6XL
- EX59
- EX59XL

## Description

EX® Series Universal compression connectors for 6 & 59 series cable



A BELDEN BRAND