

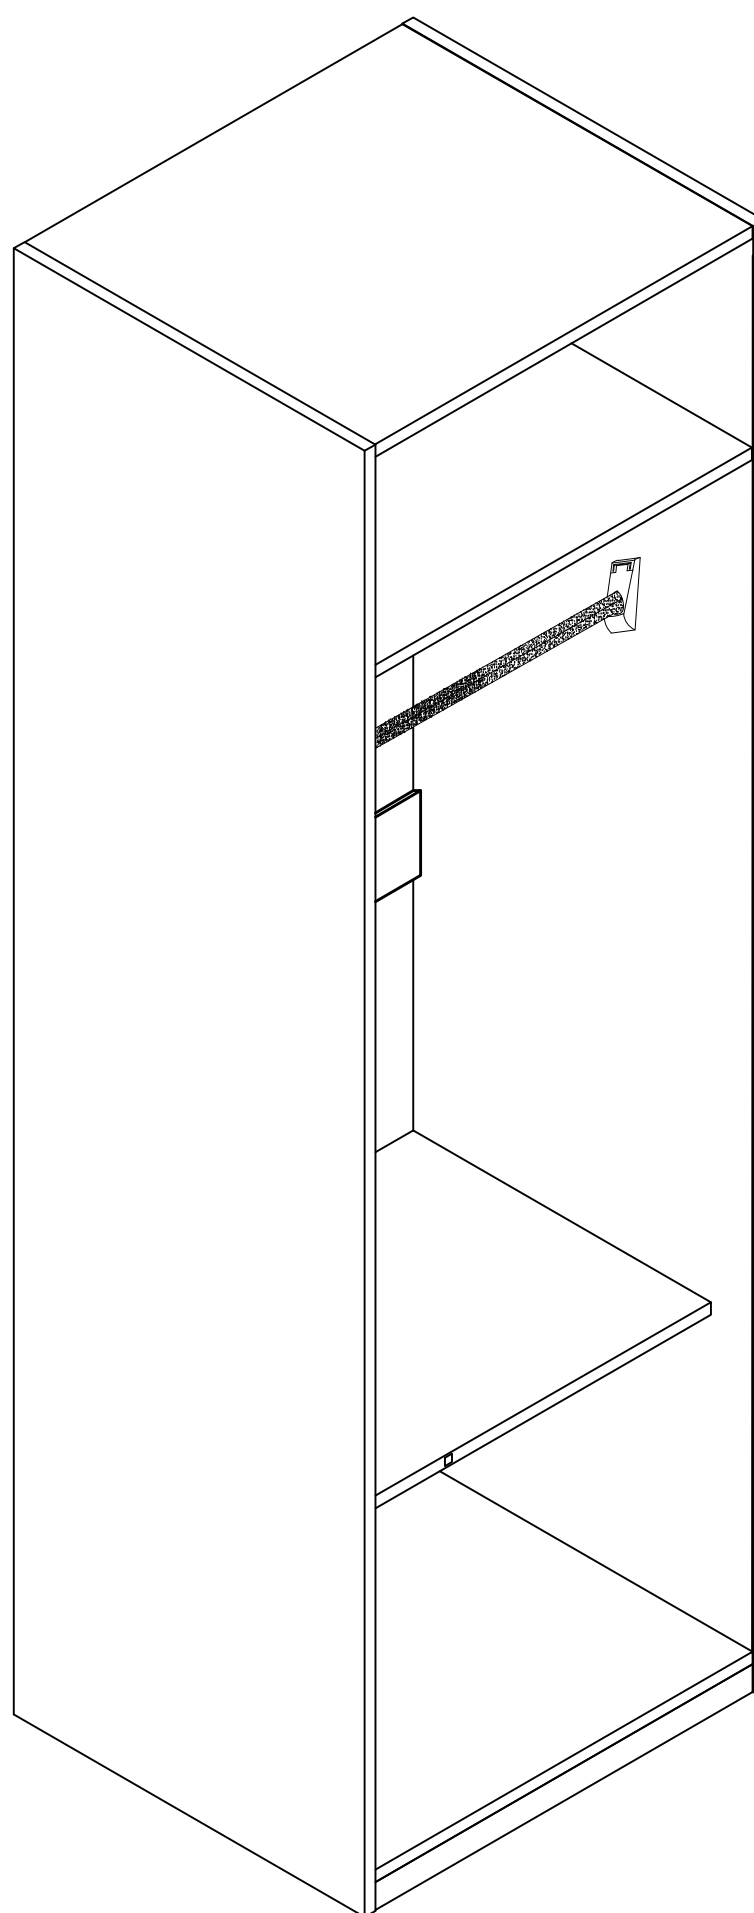
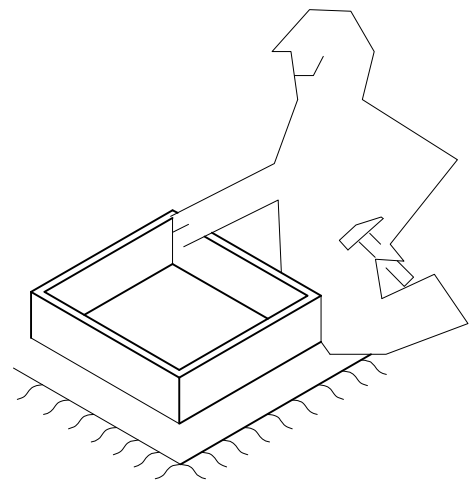
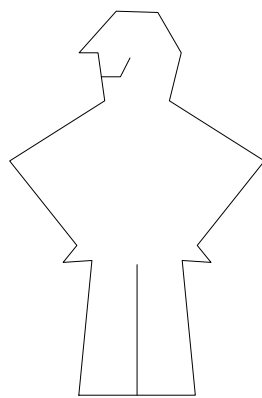
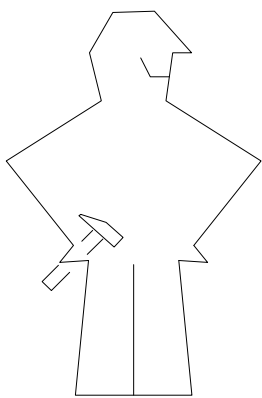
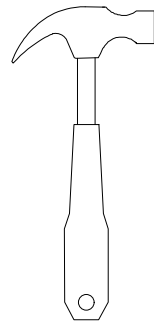


SINGLE DOOR WARDROBE(L)
INSTALLATION
MODEL NO: W1002-SL













Tool Needed

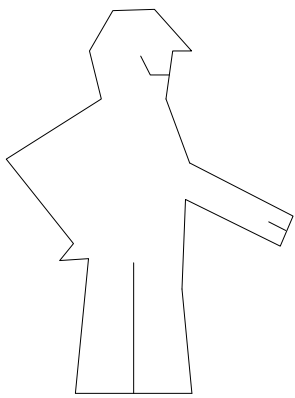














Two Man Work

Protection On Floor


Accessories Instruction

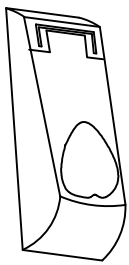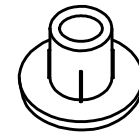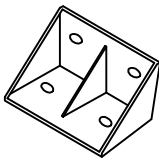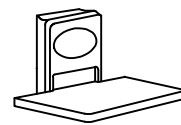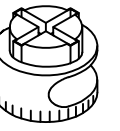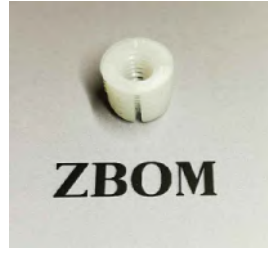


Size of each panel

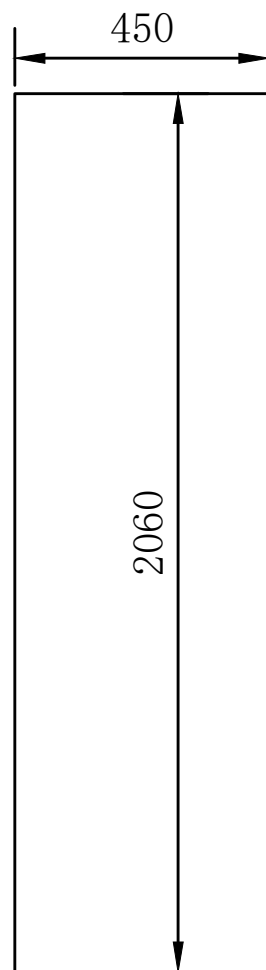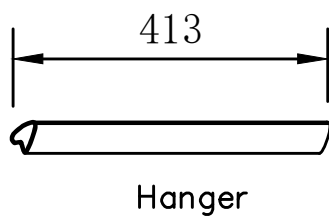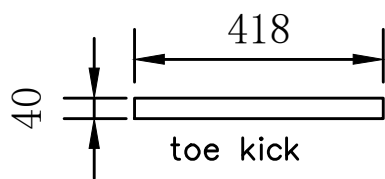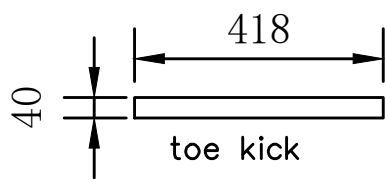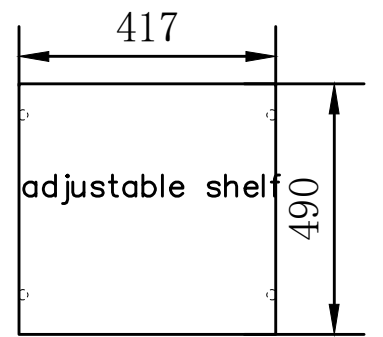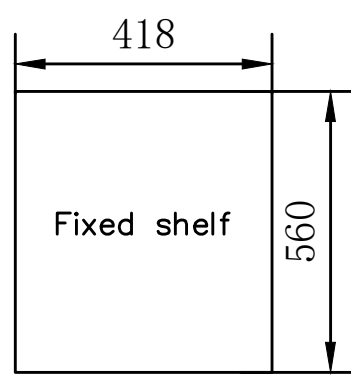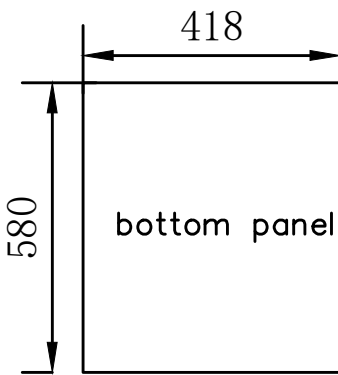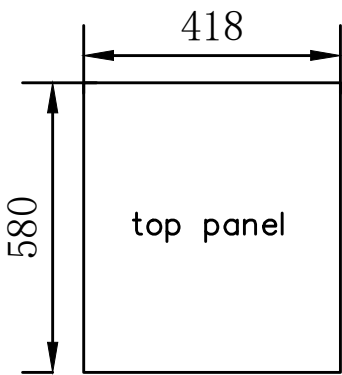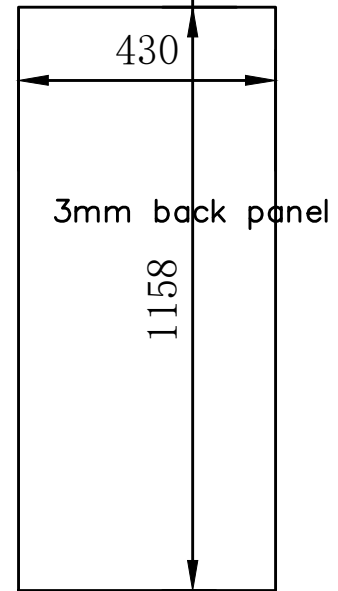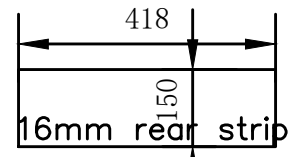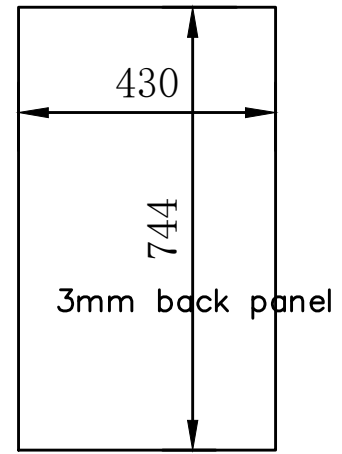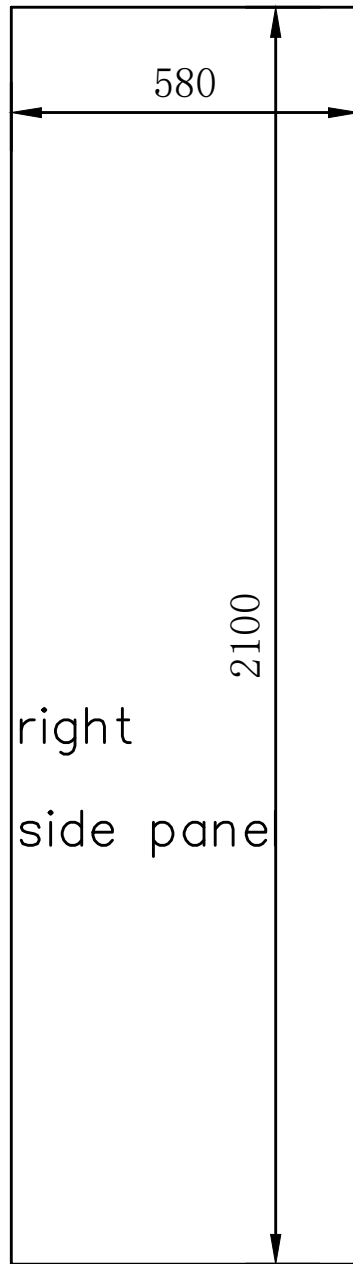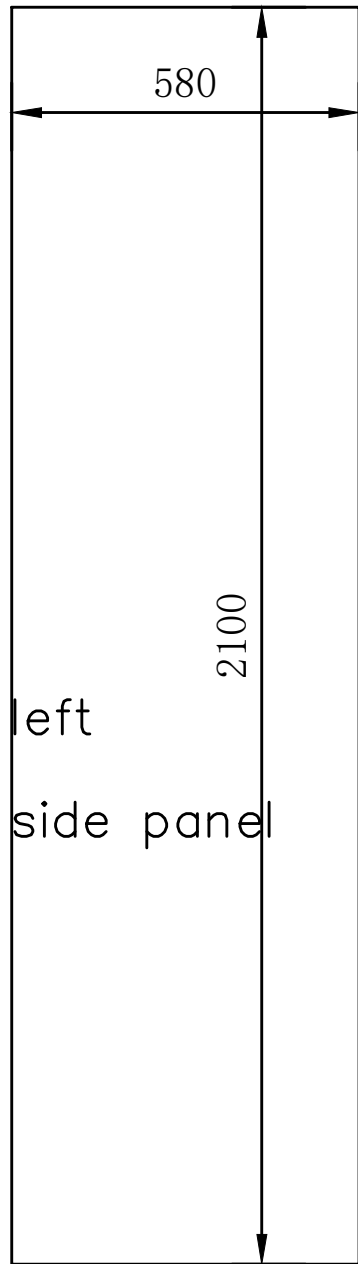


Size of each panel

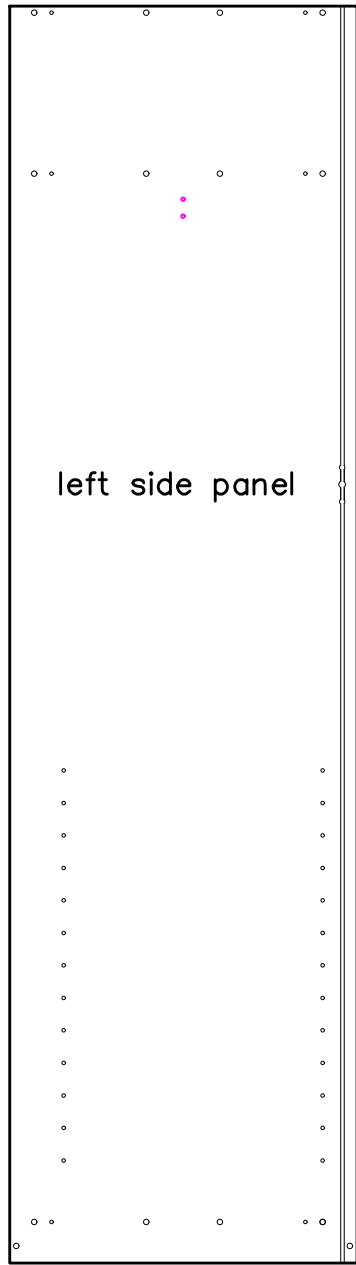


x1

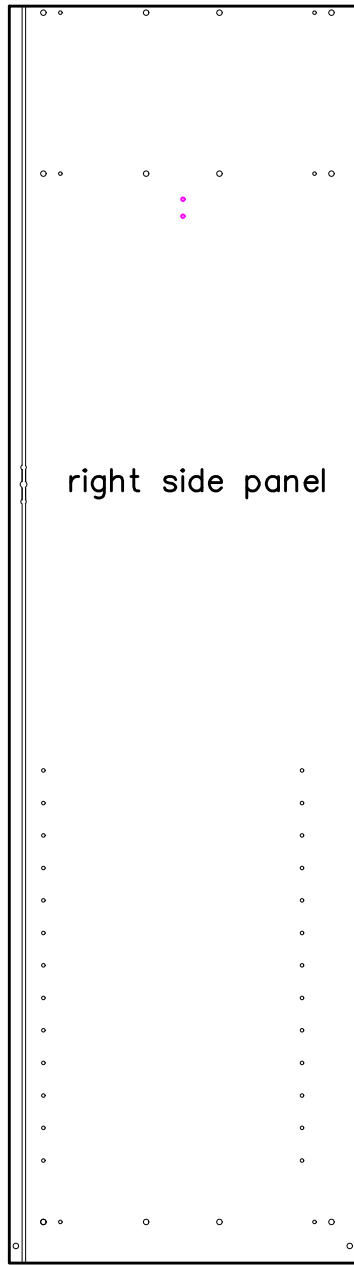


x1

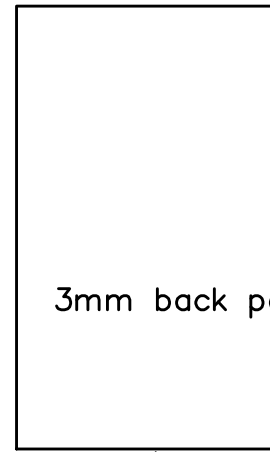


x1




x1

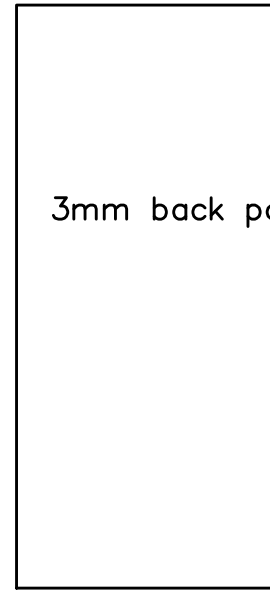


x1

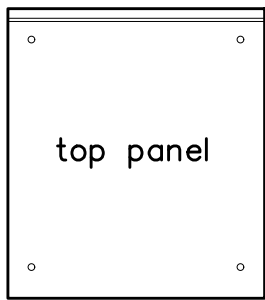


x1

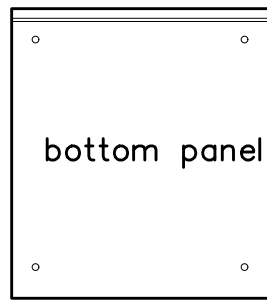





x1

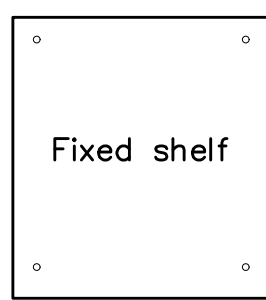

x1


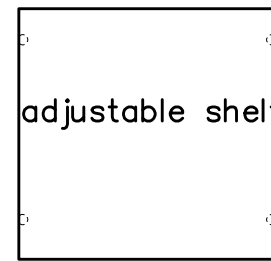




x1

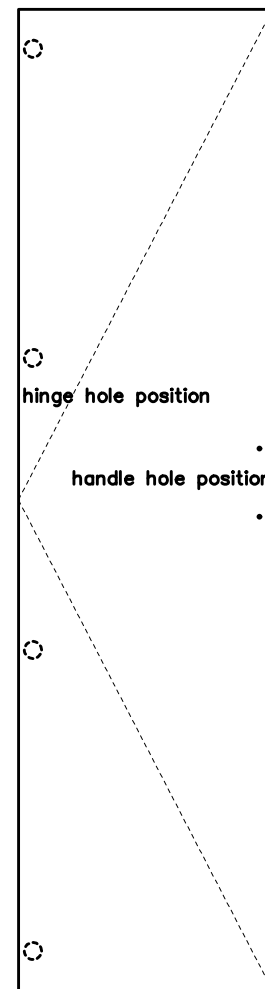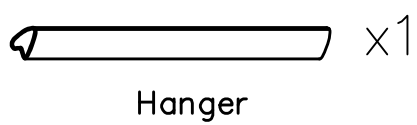






x1


Door panel(open to left)

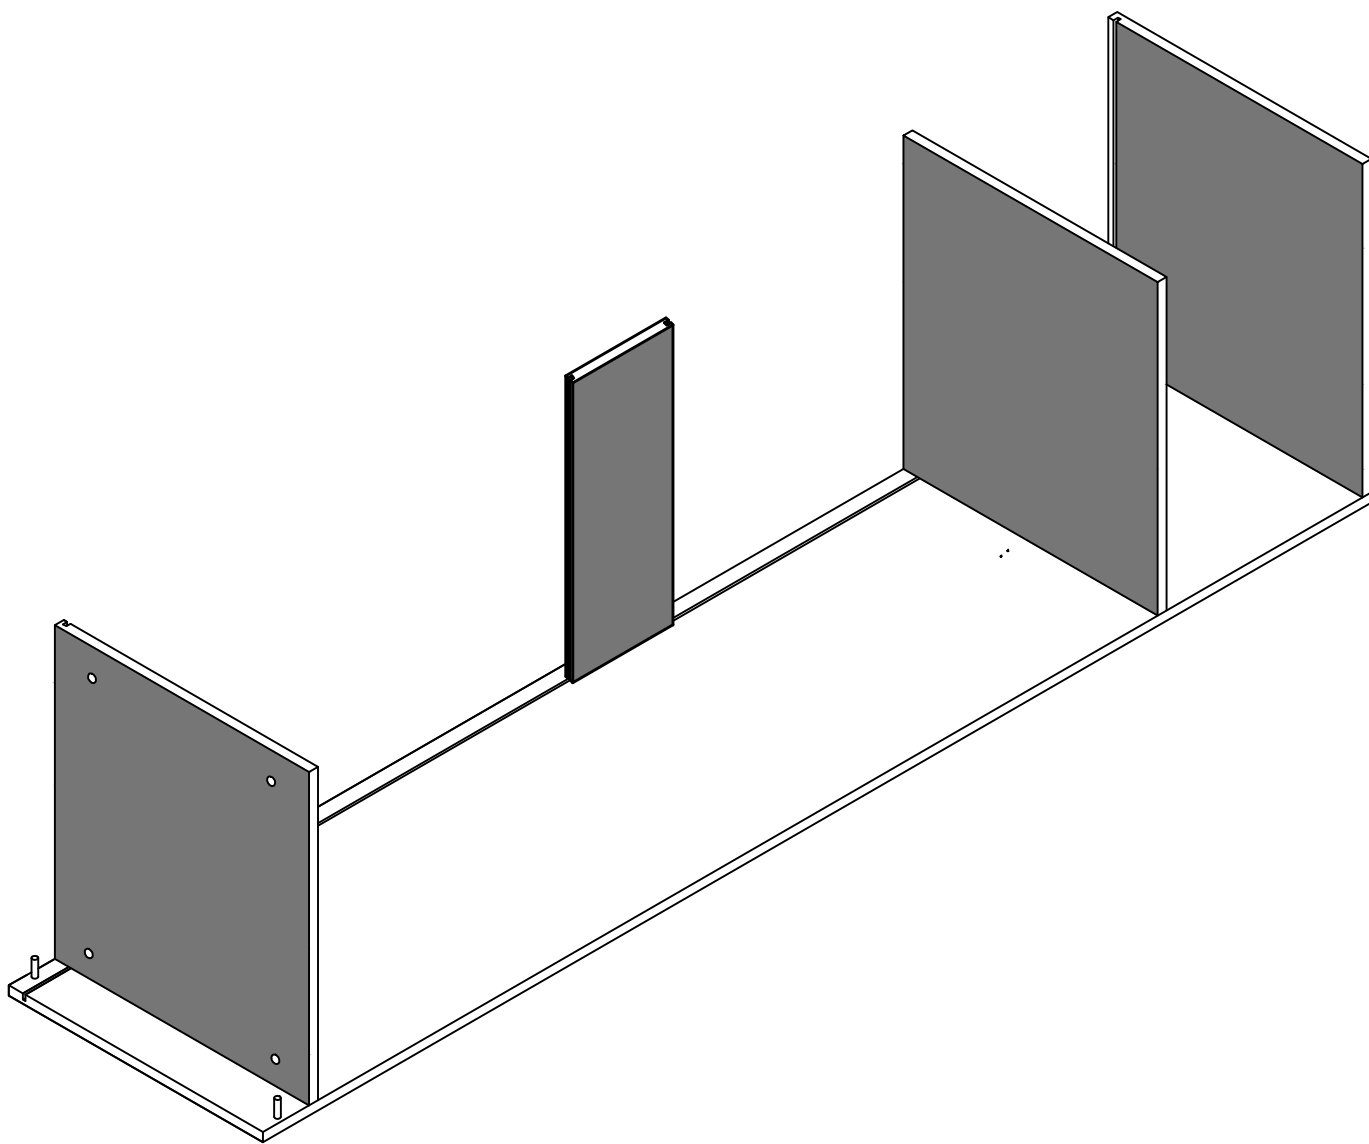
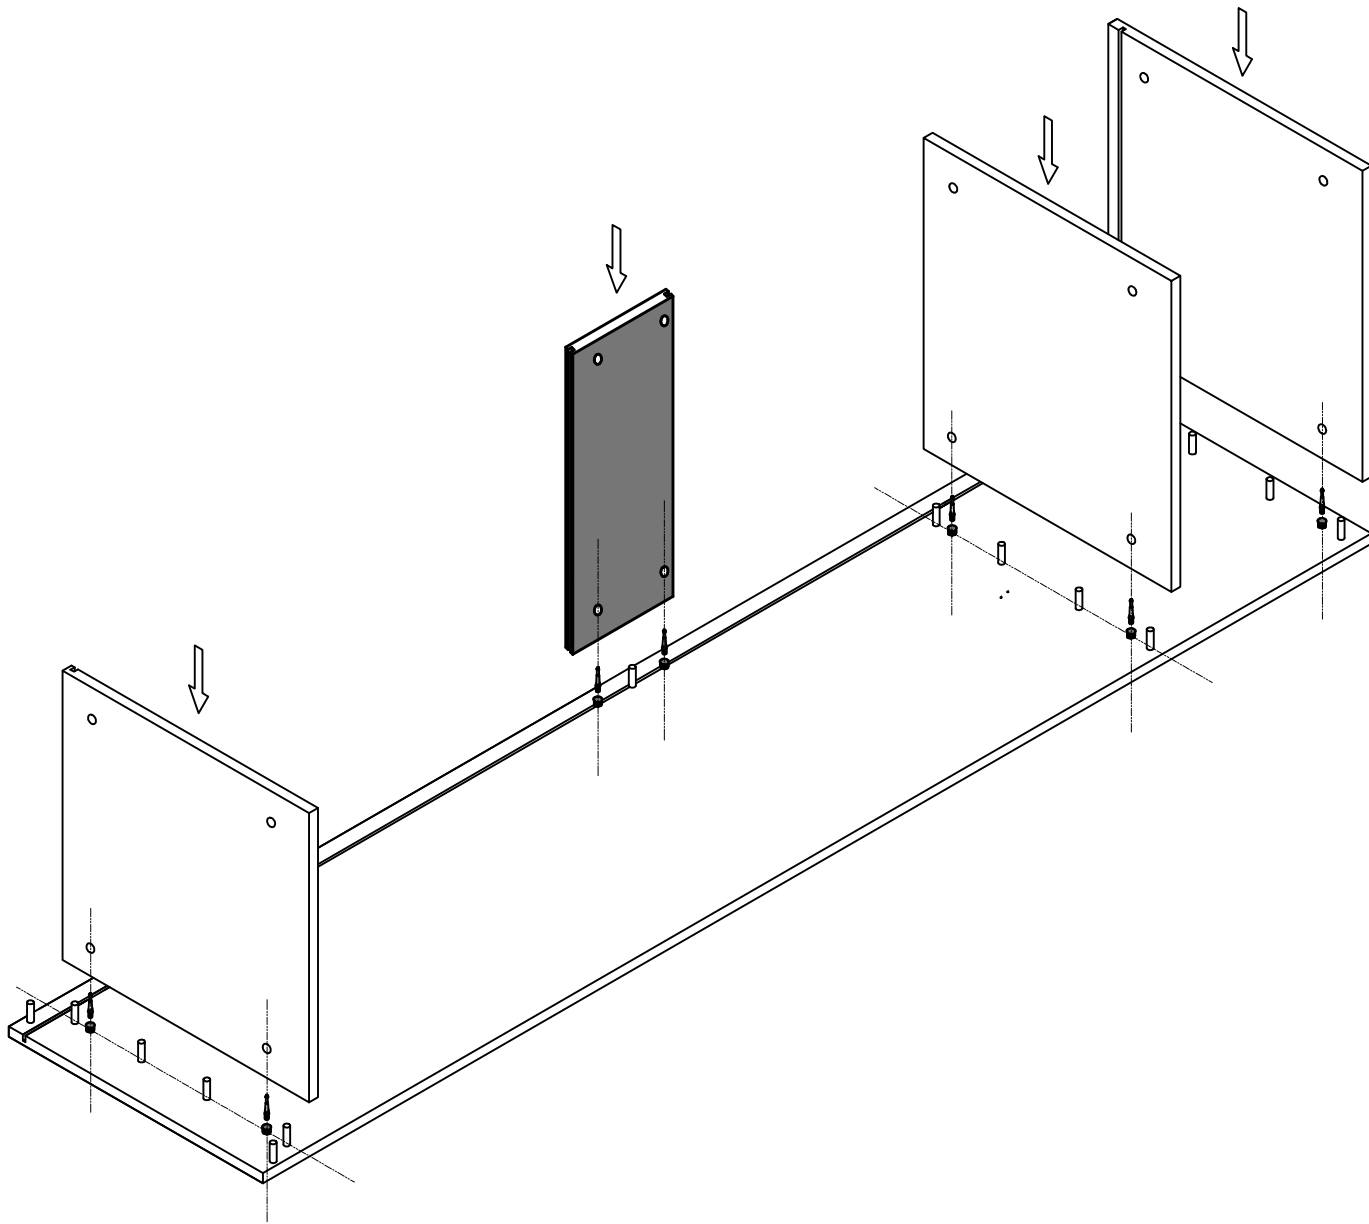





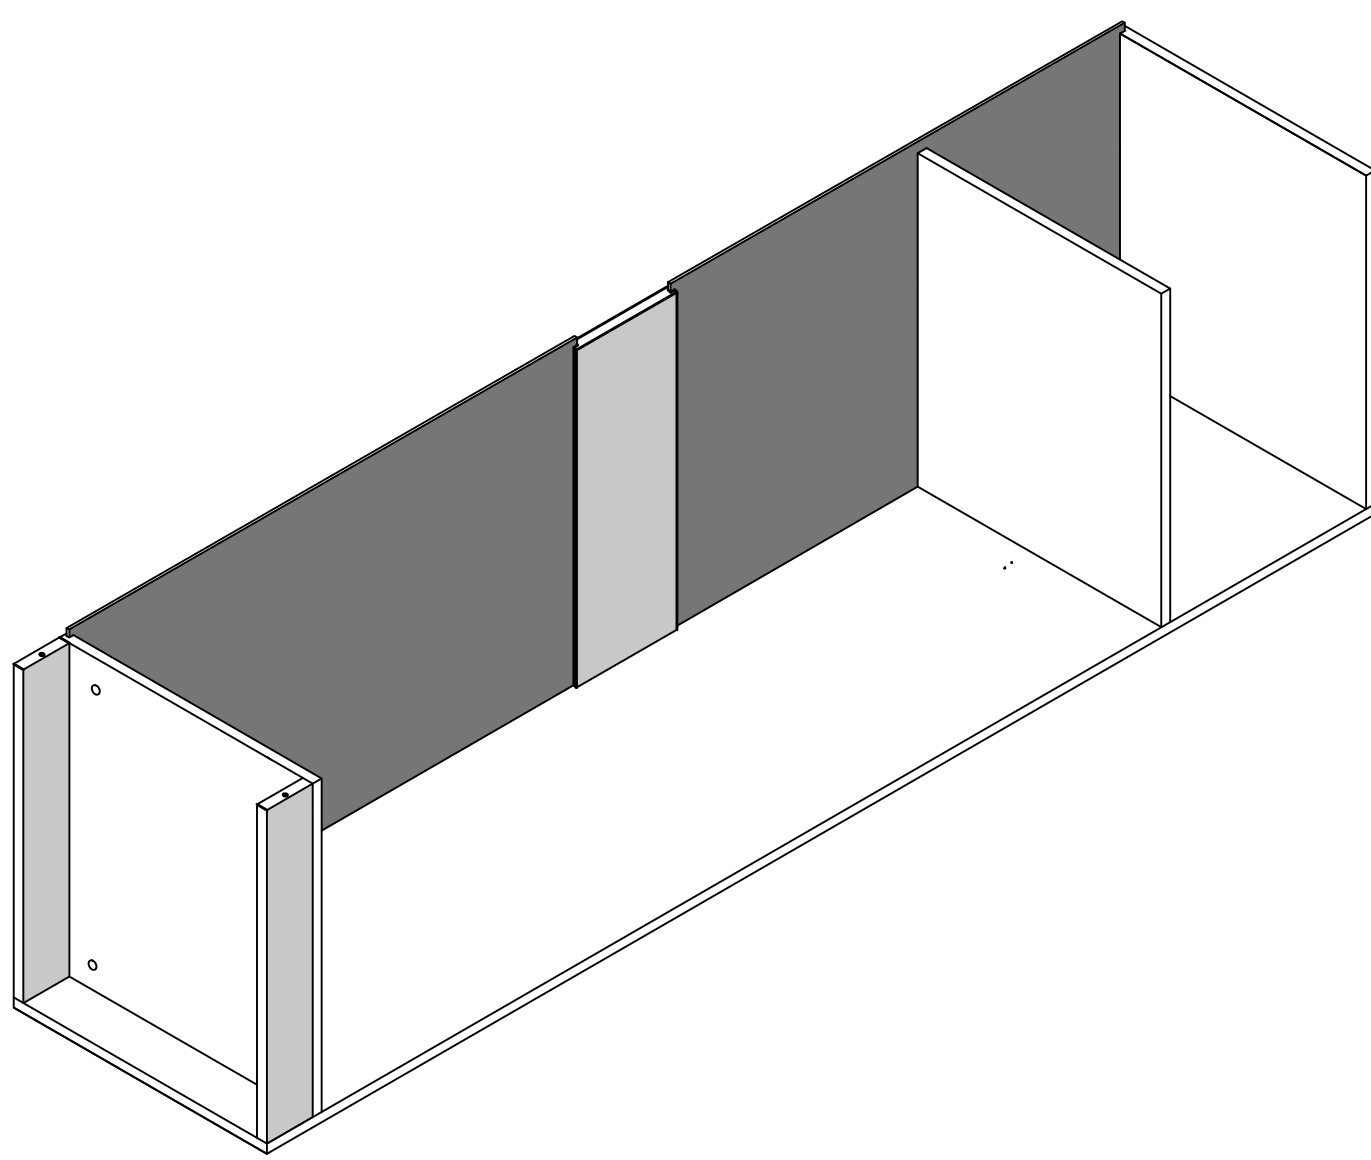
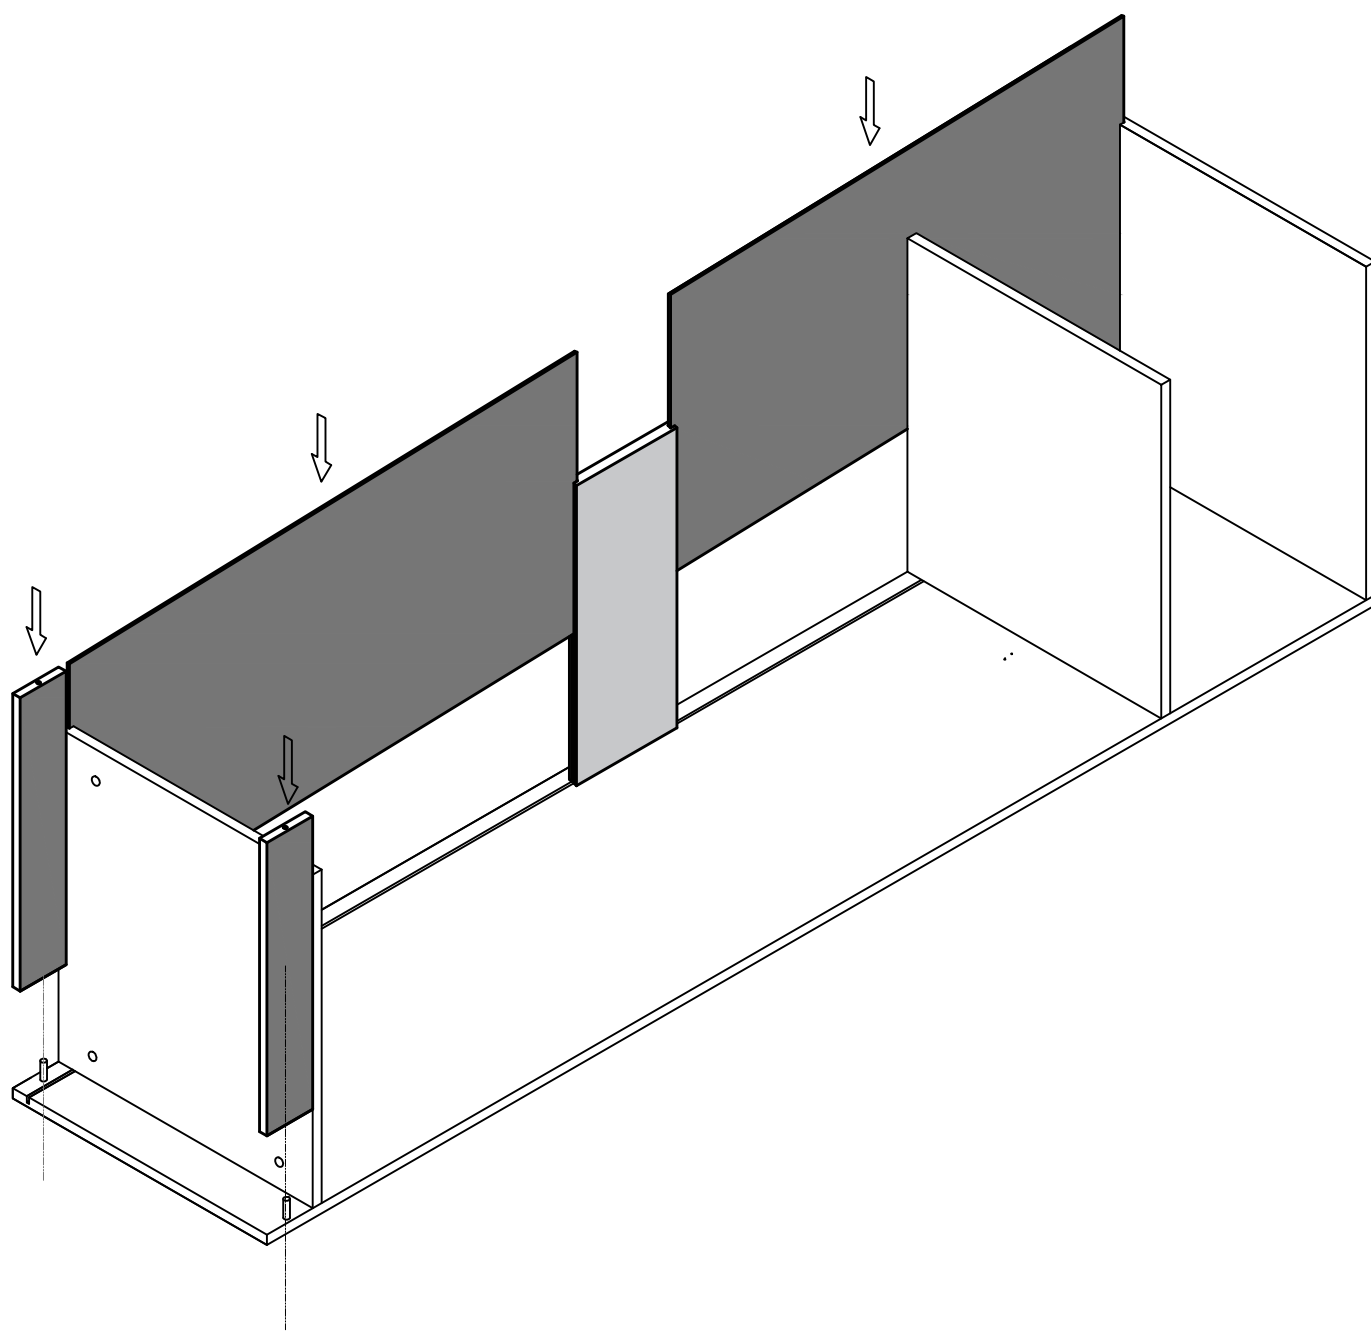


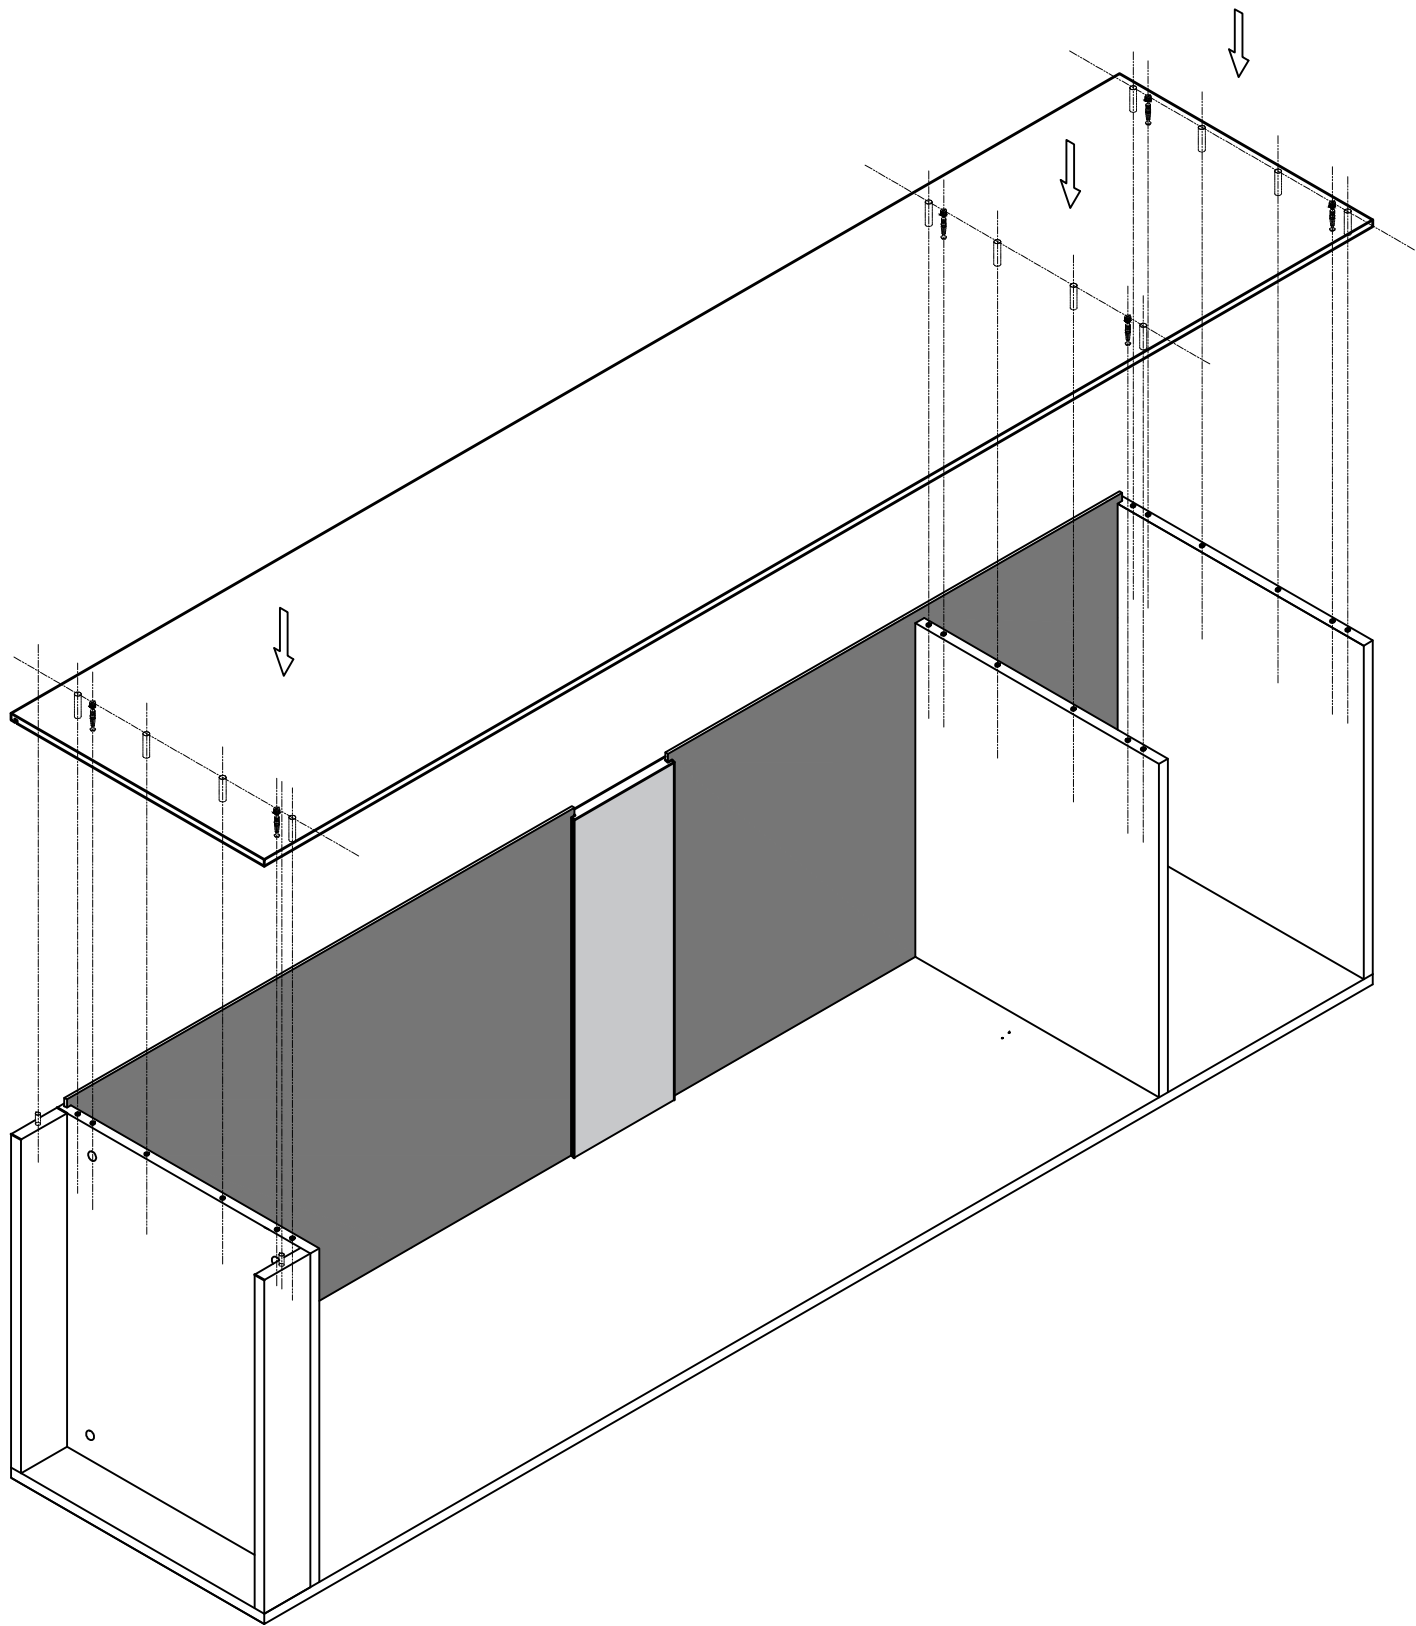


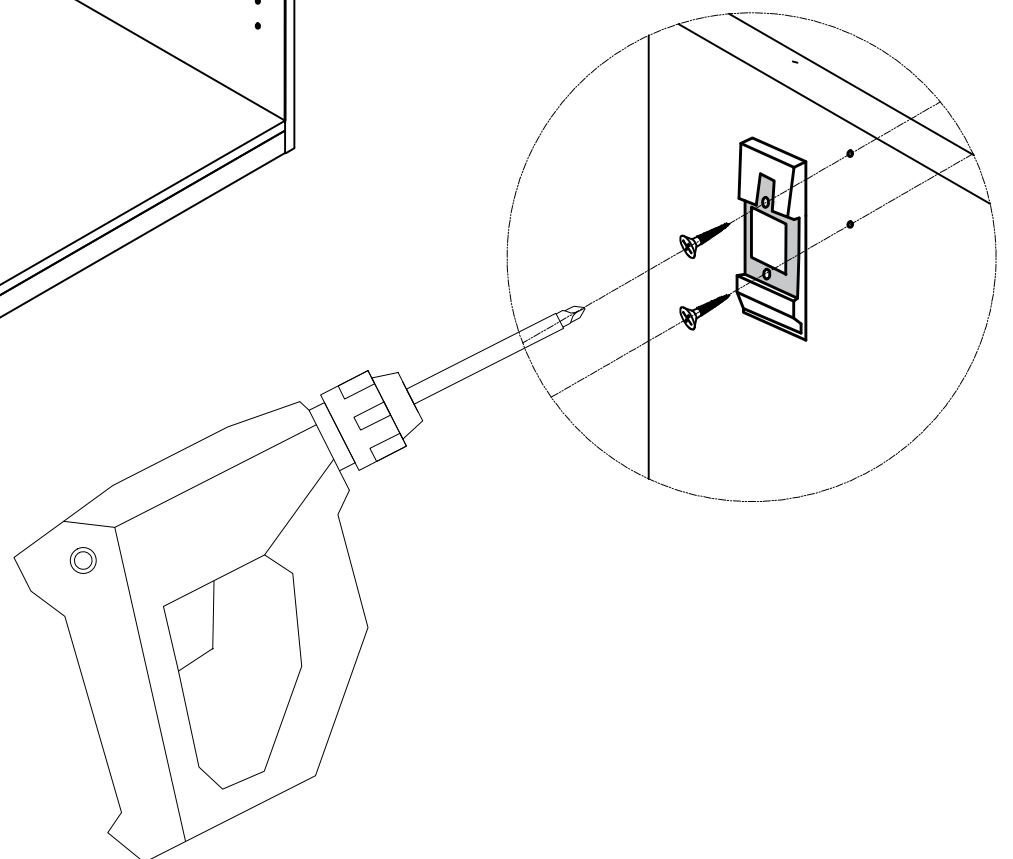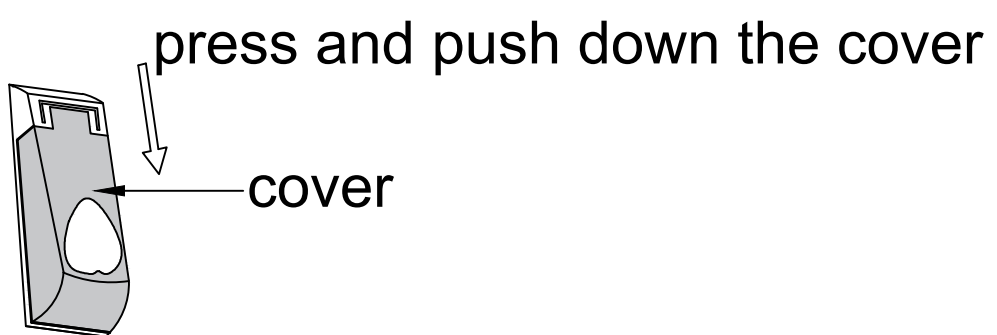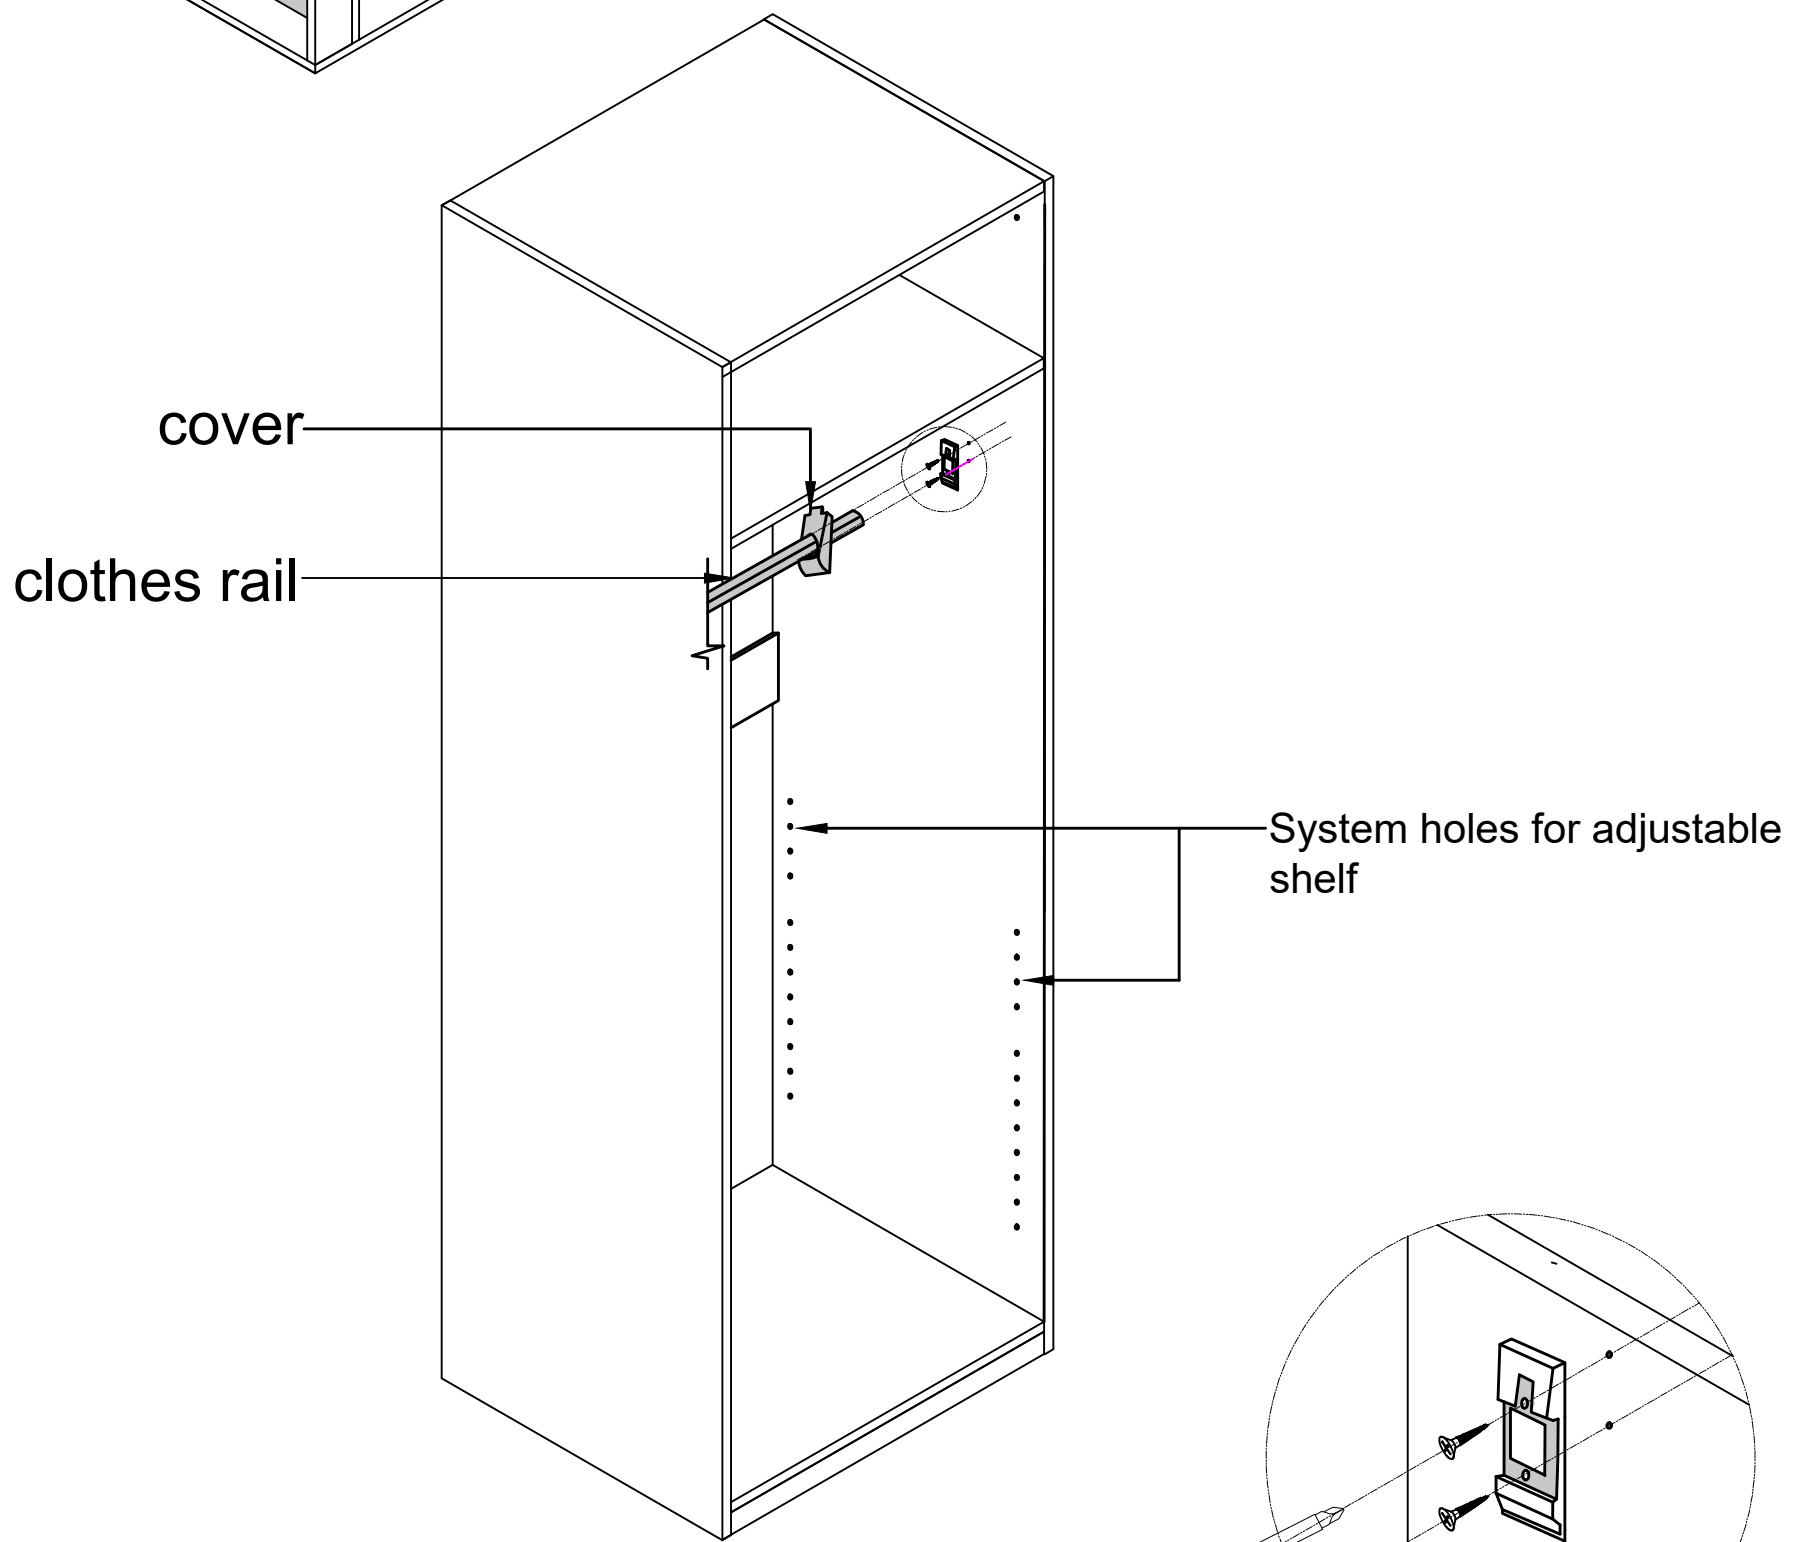
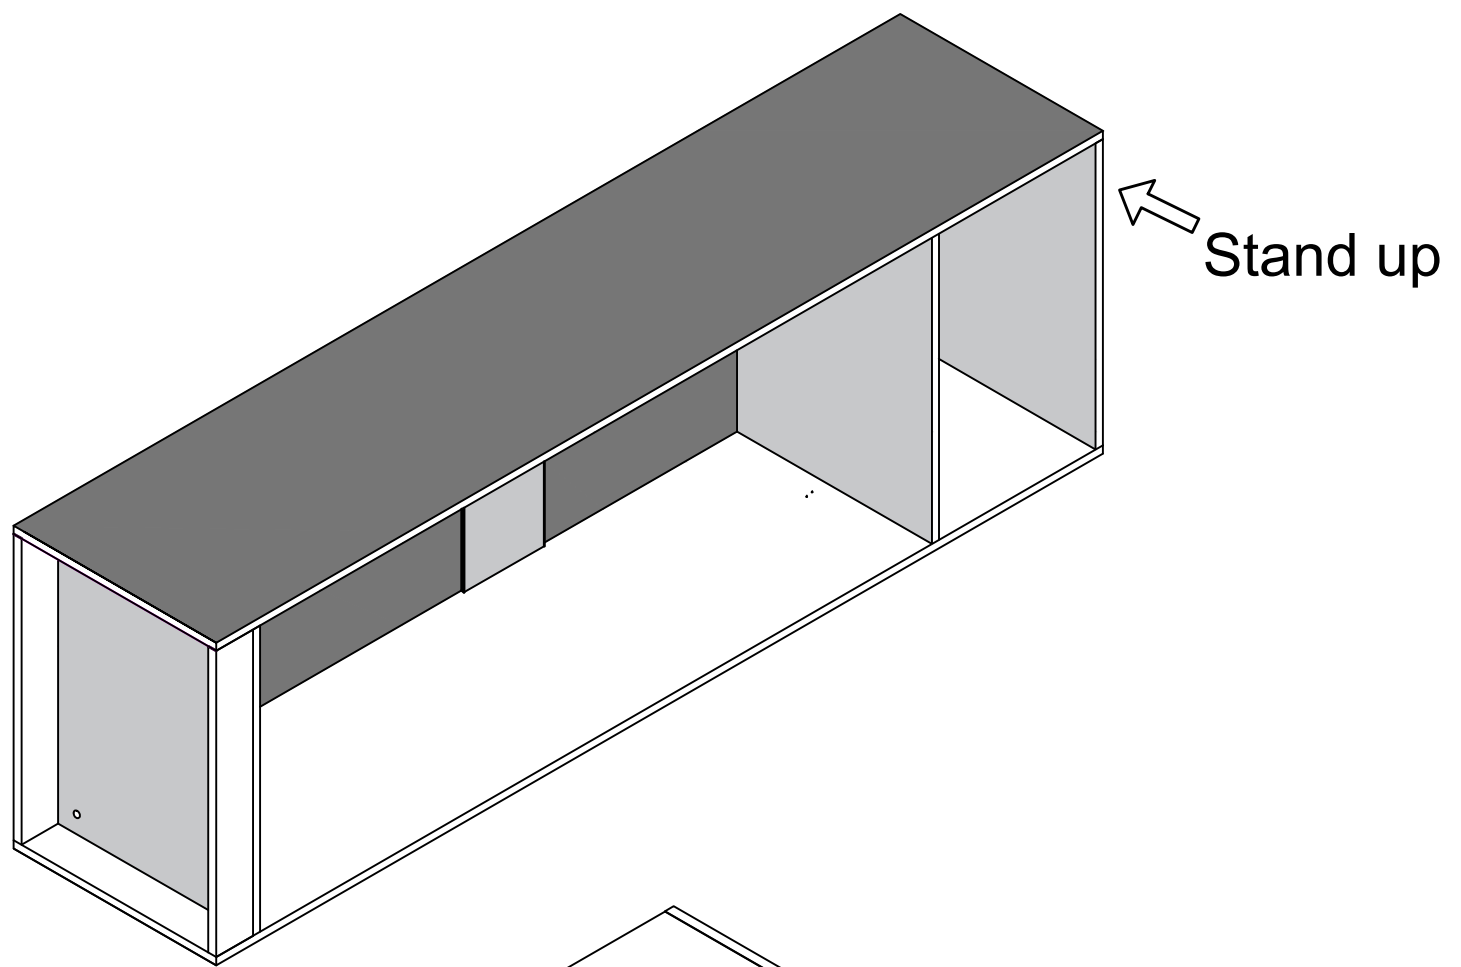


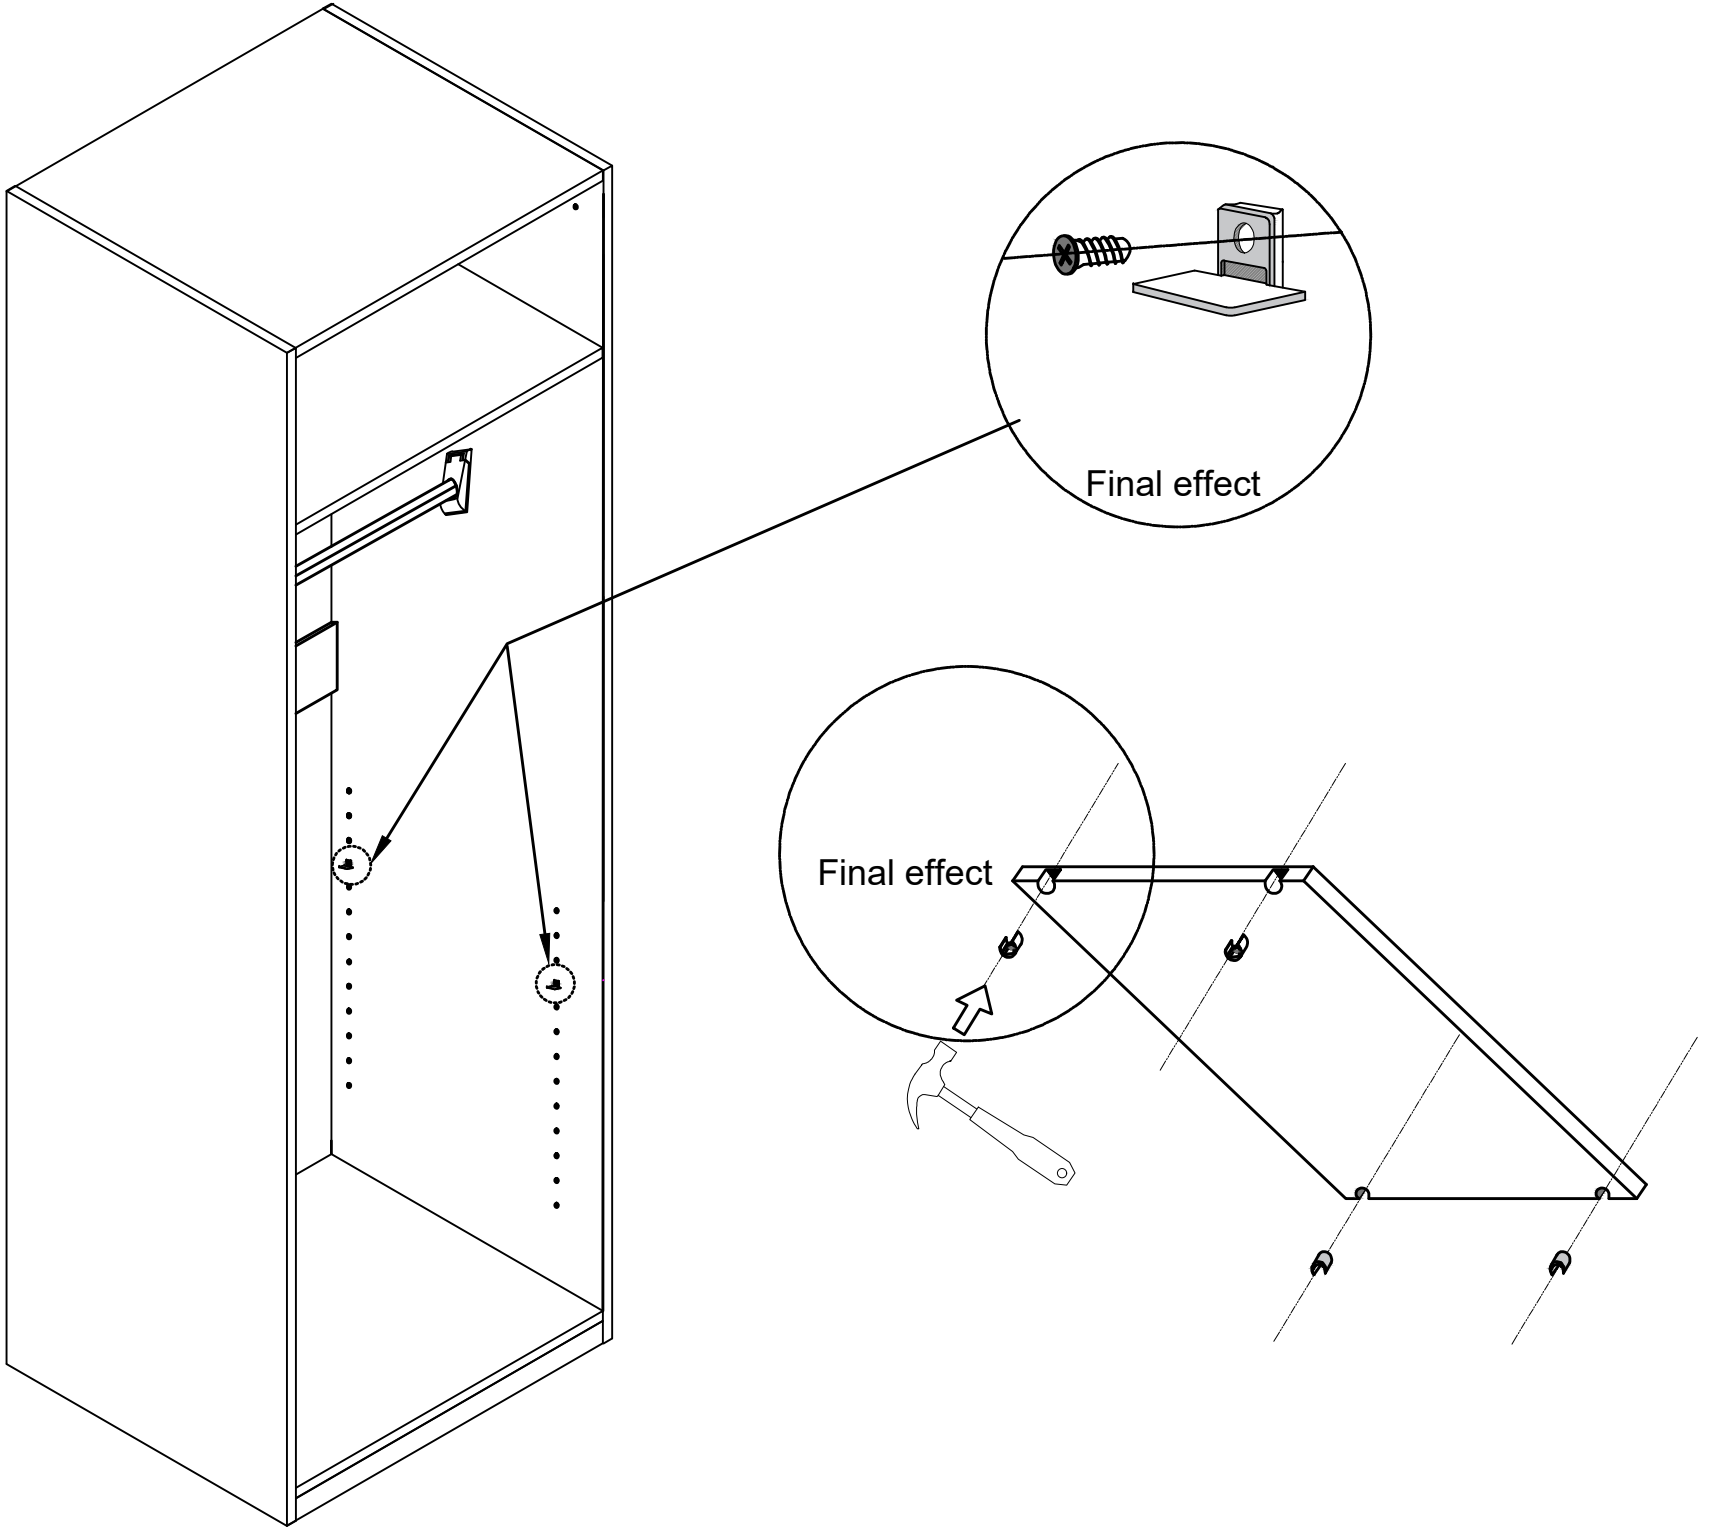

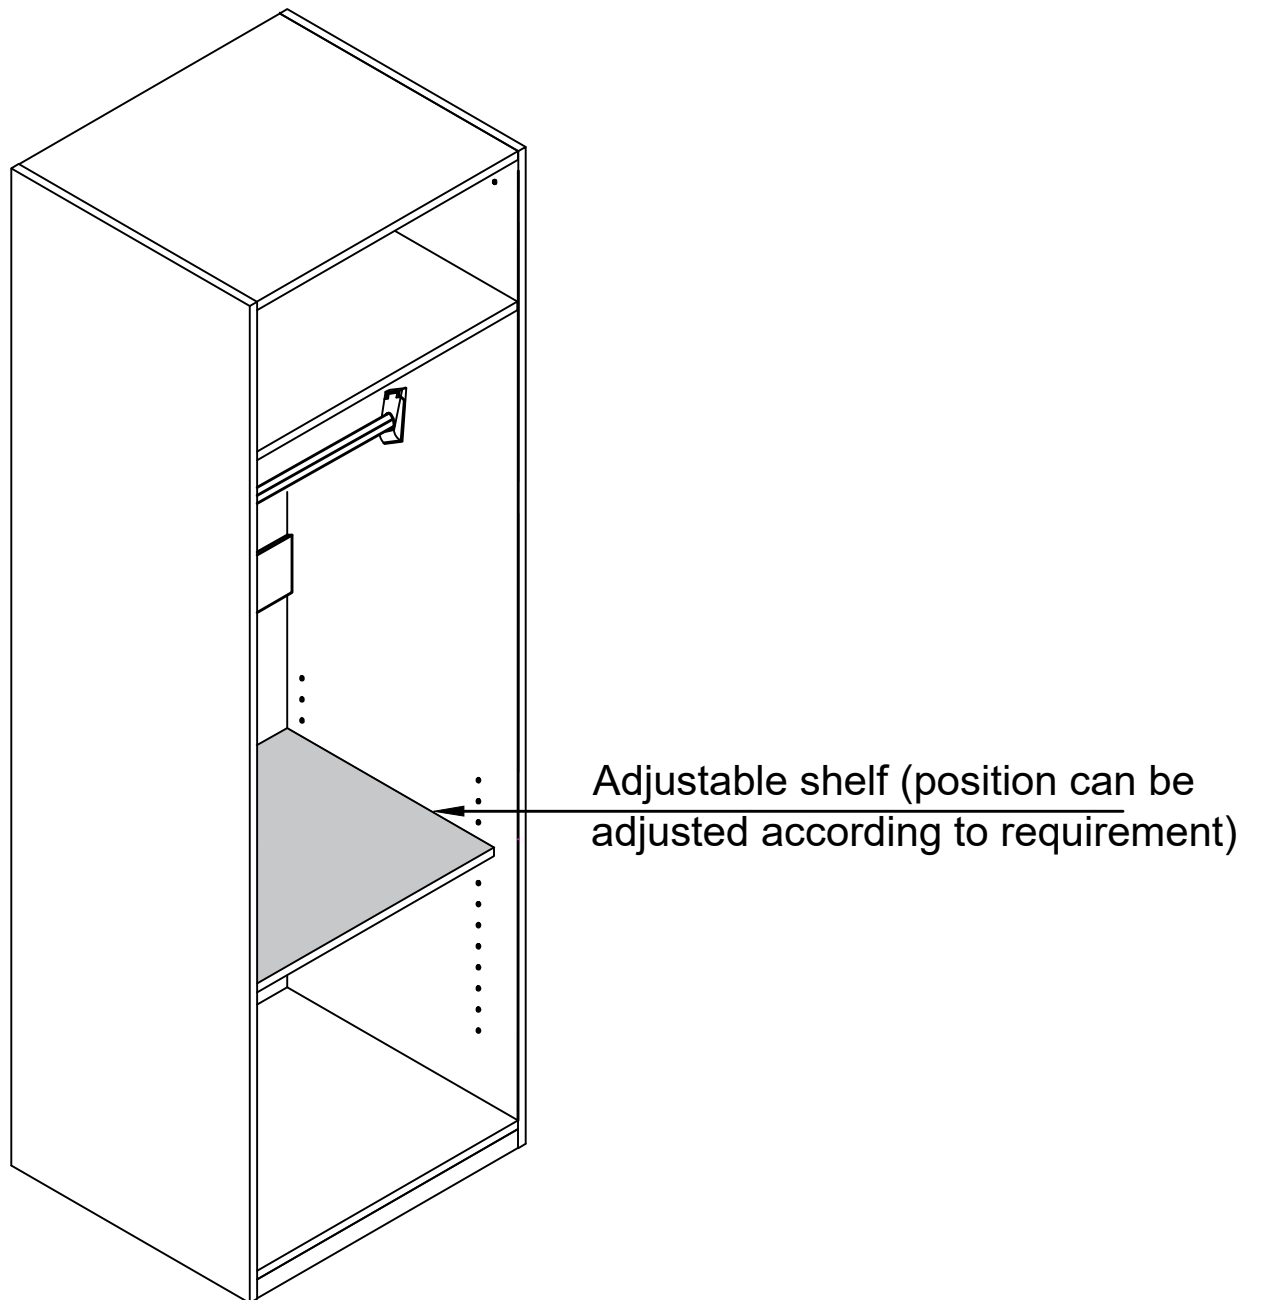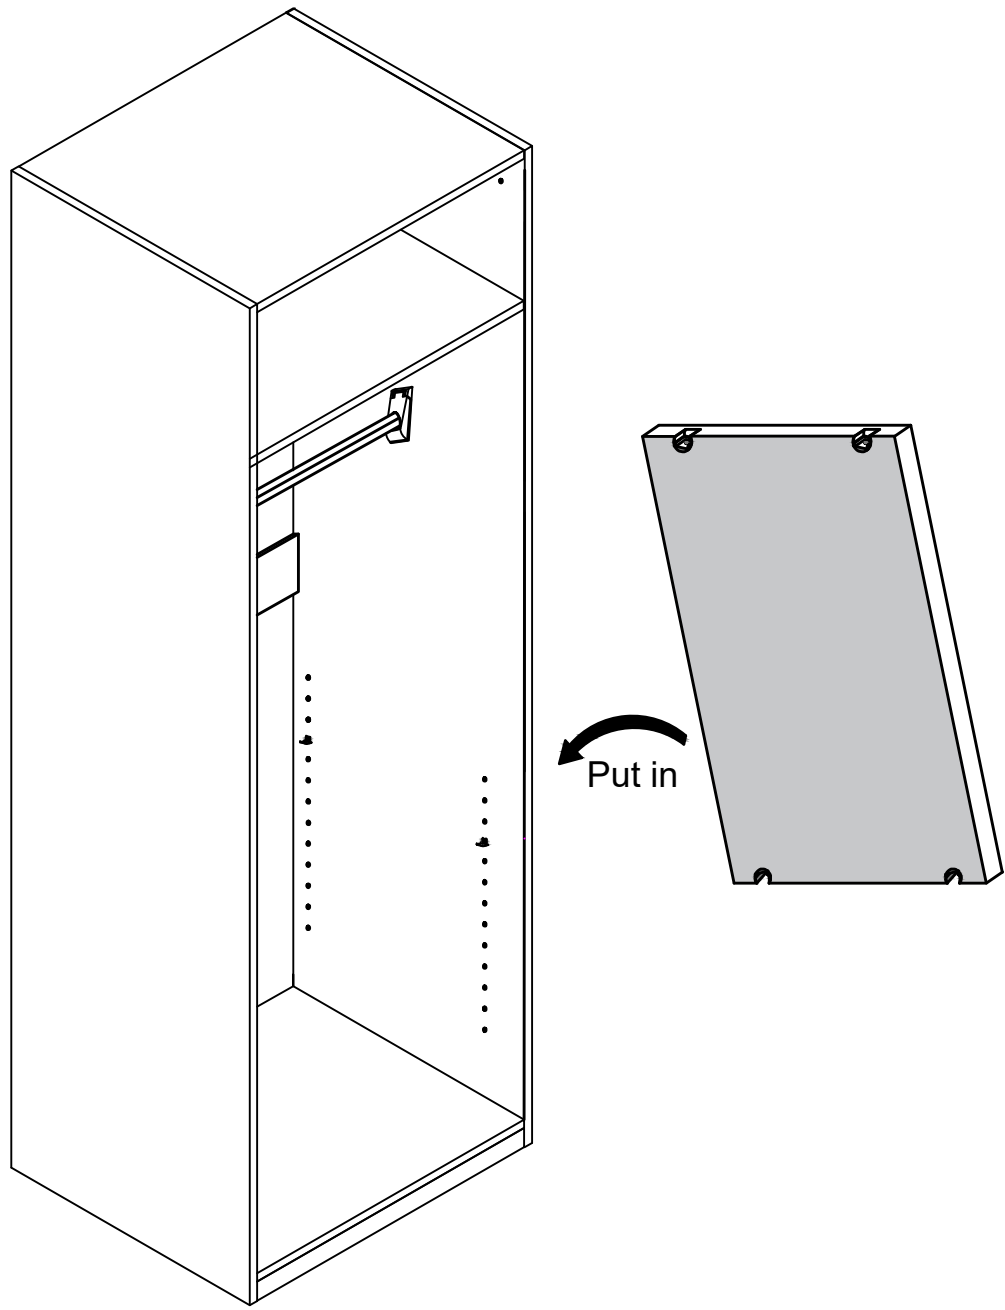

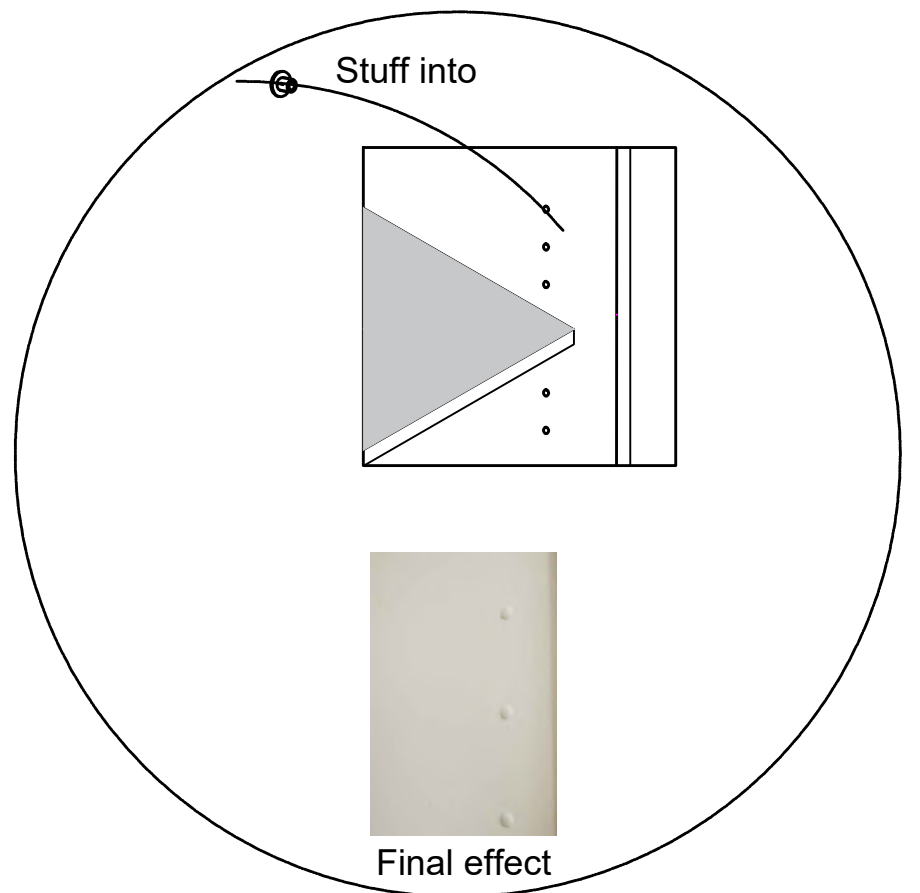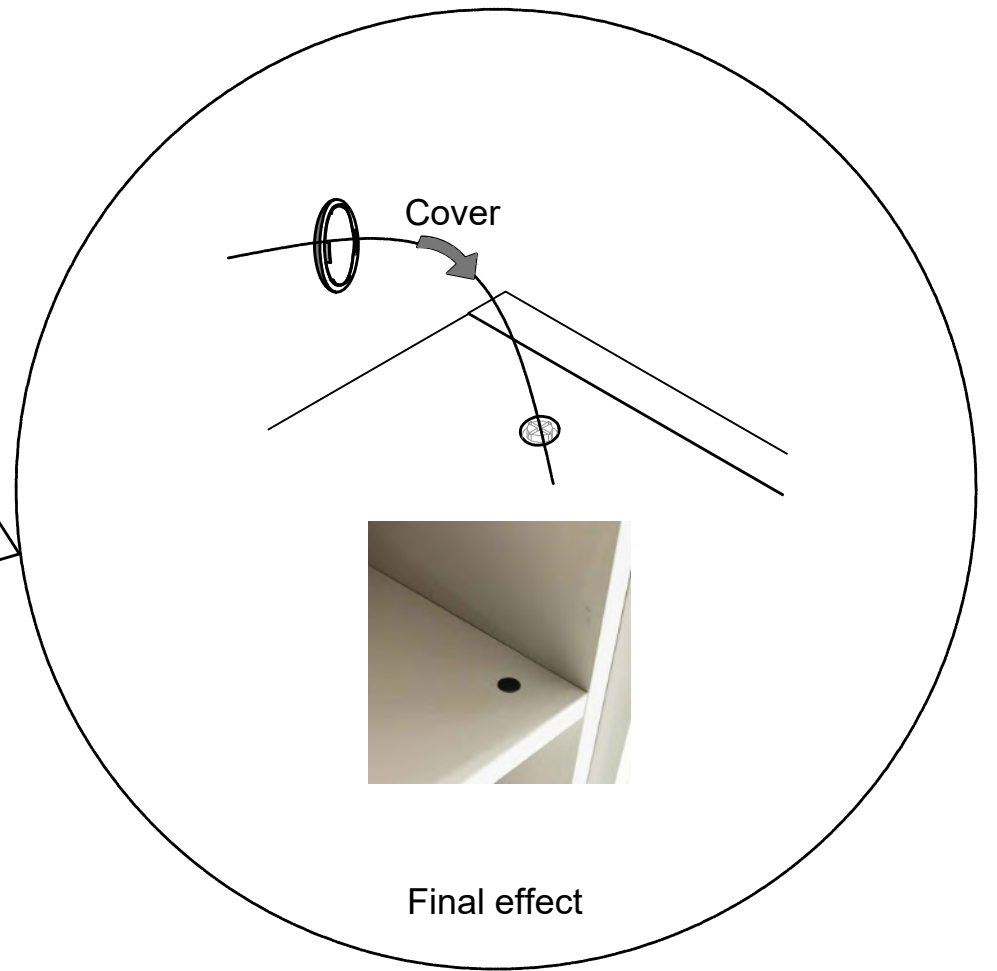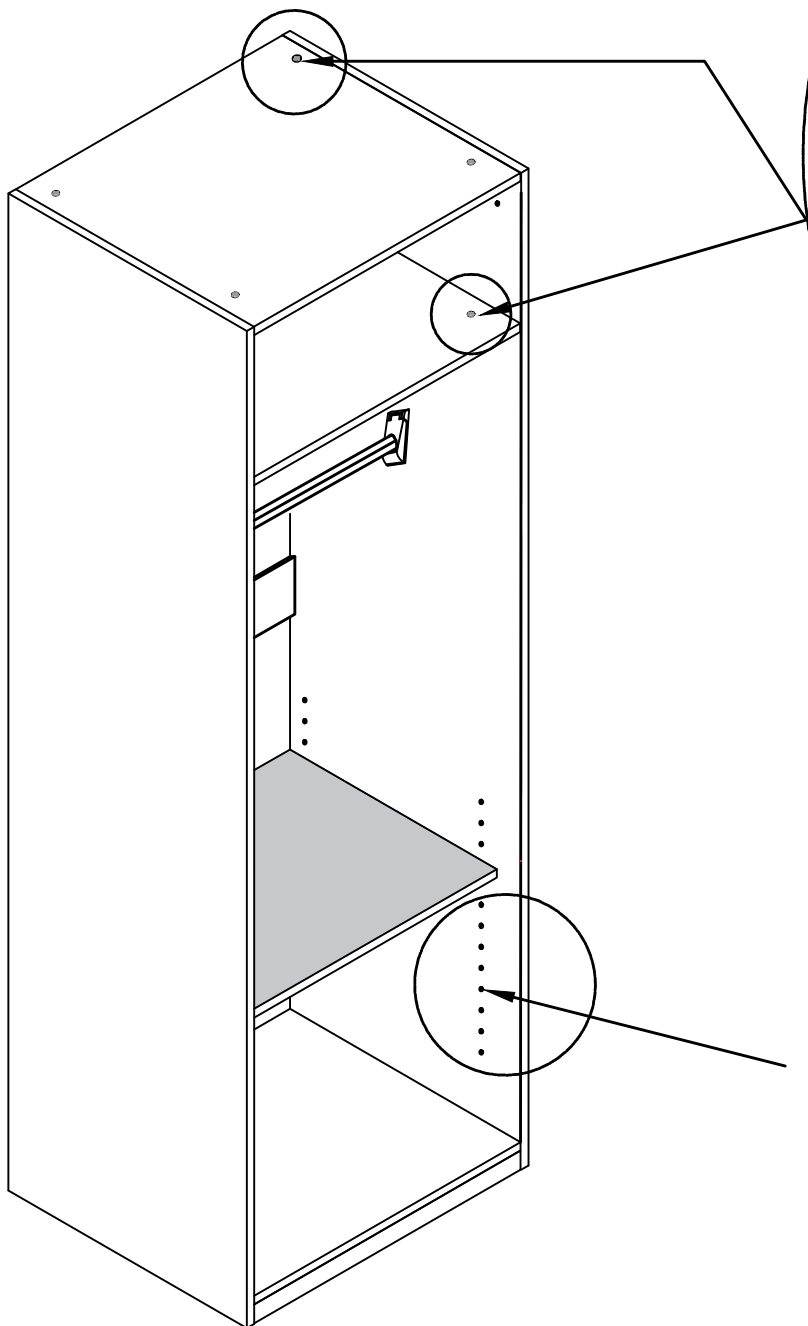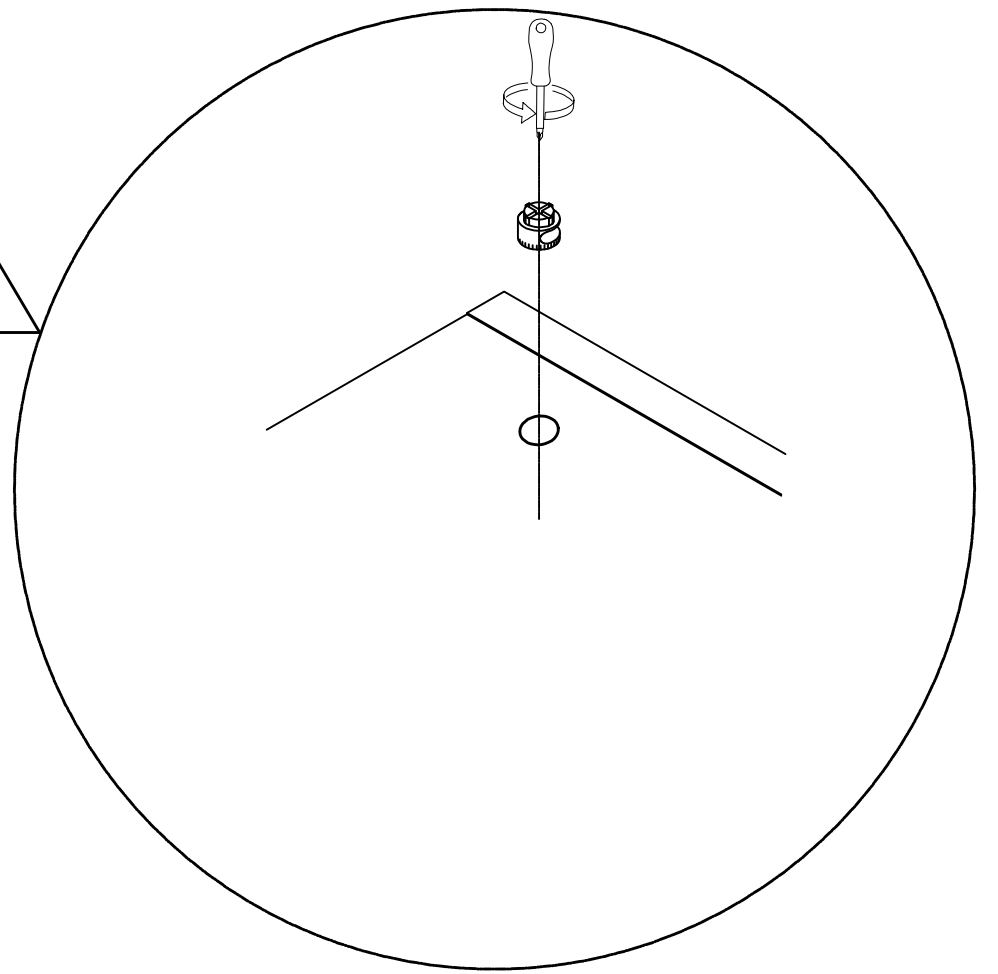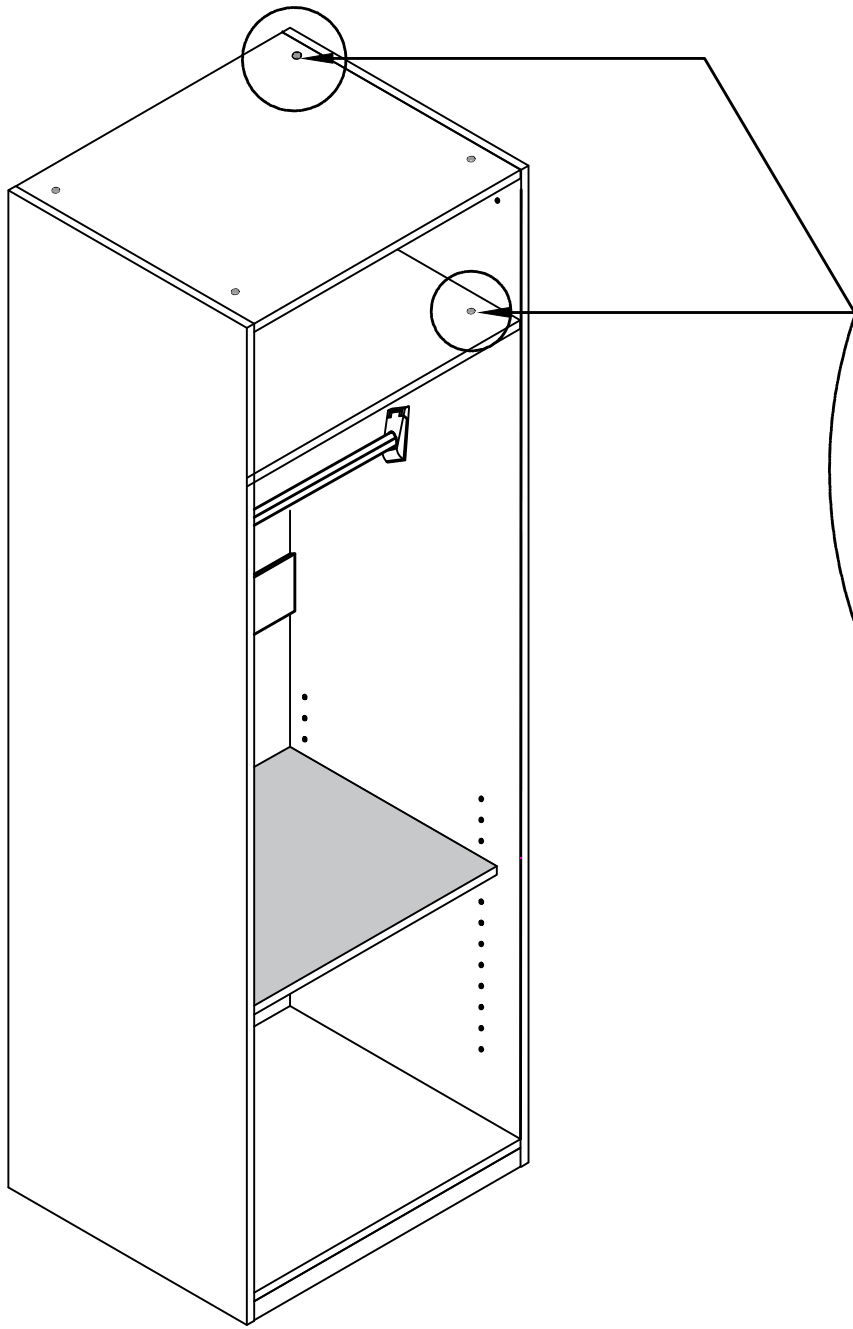

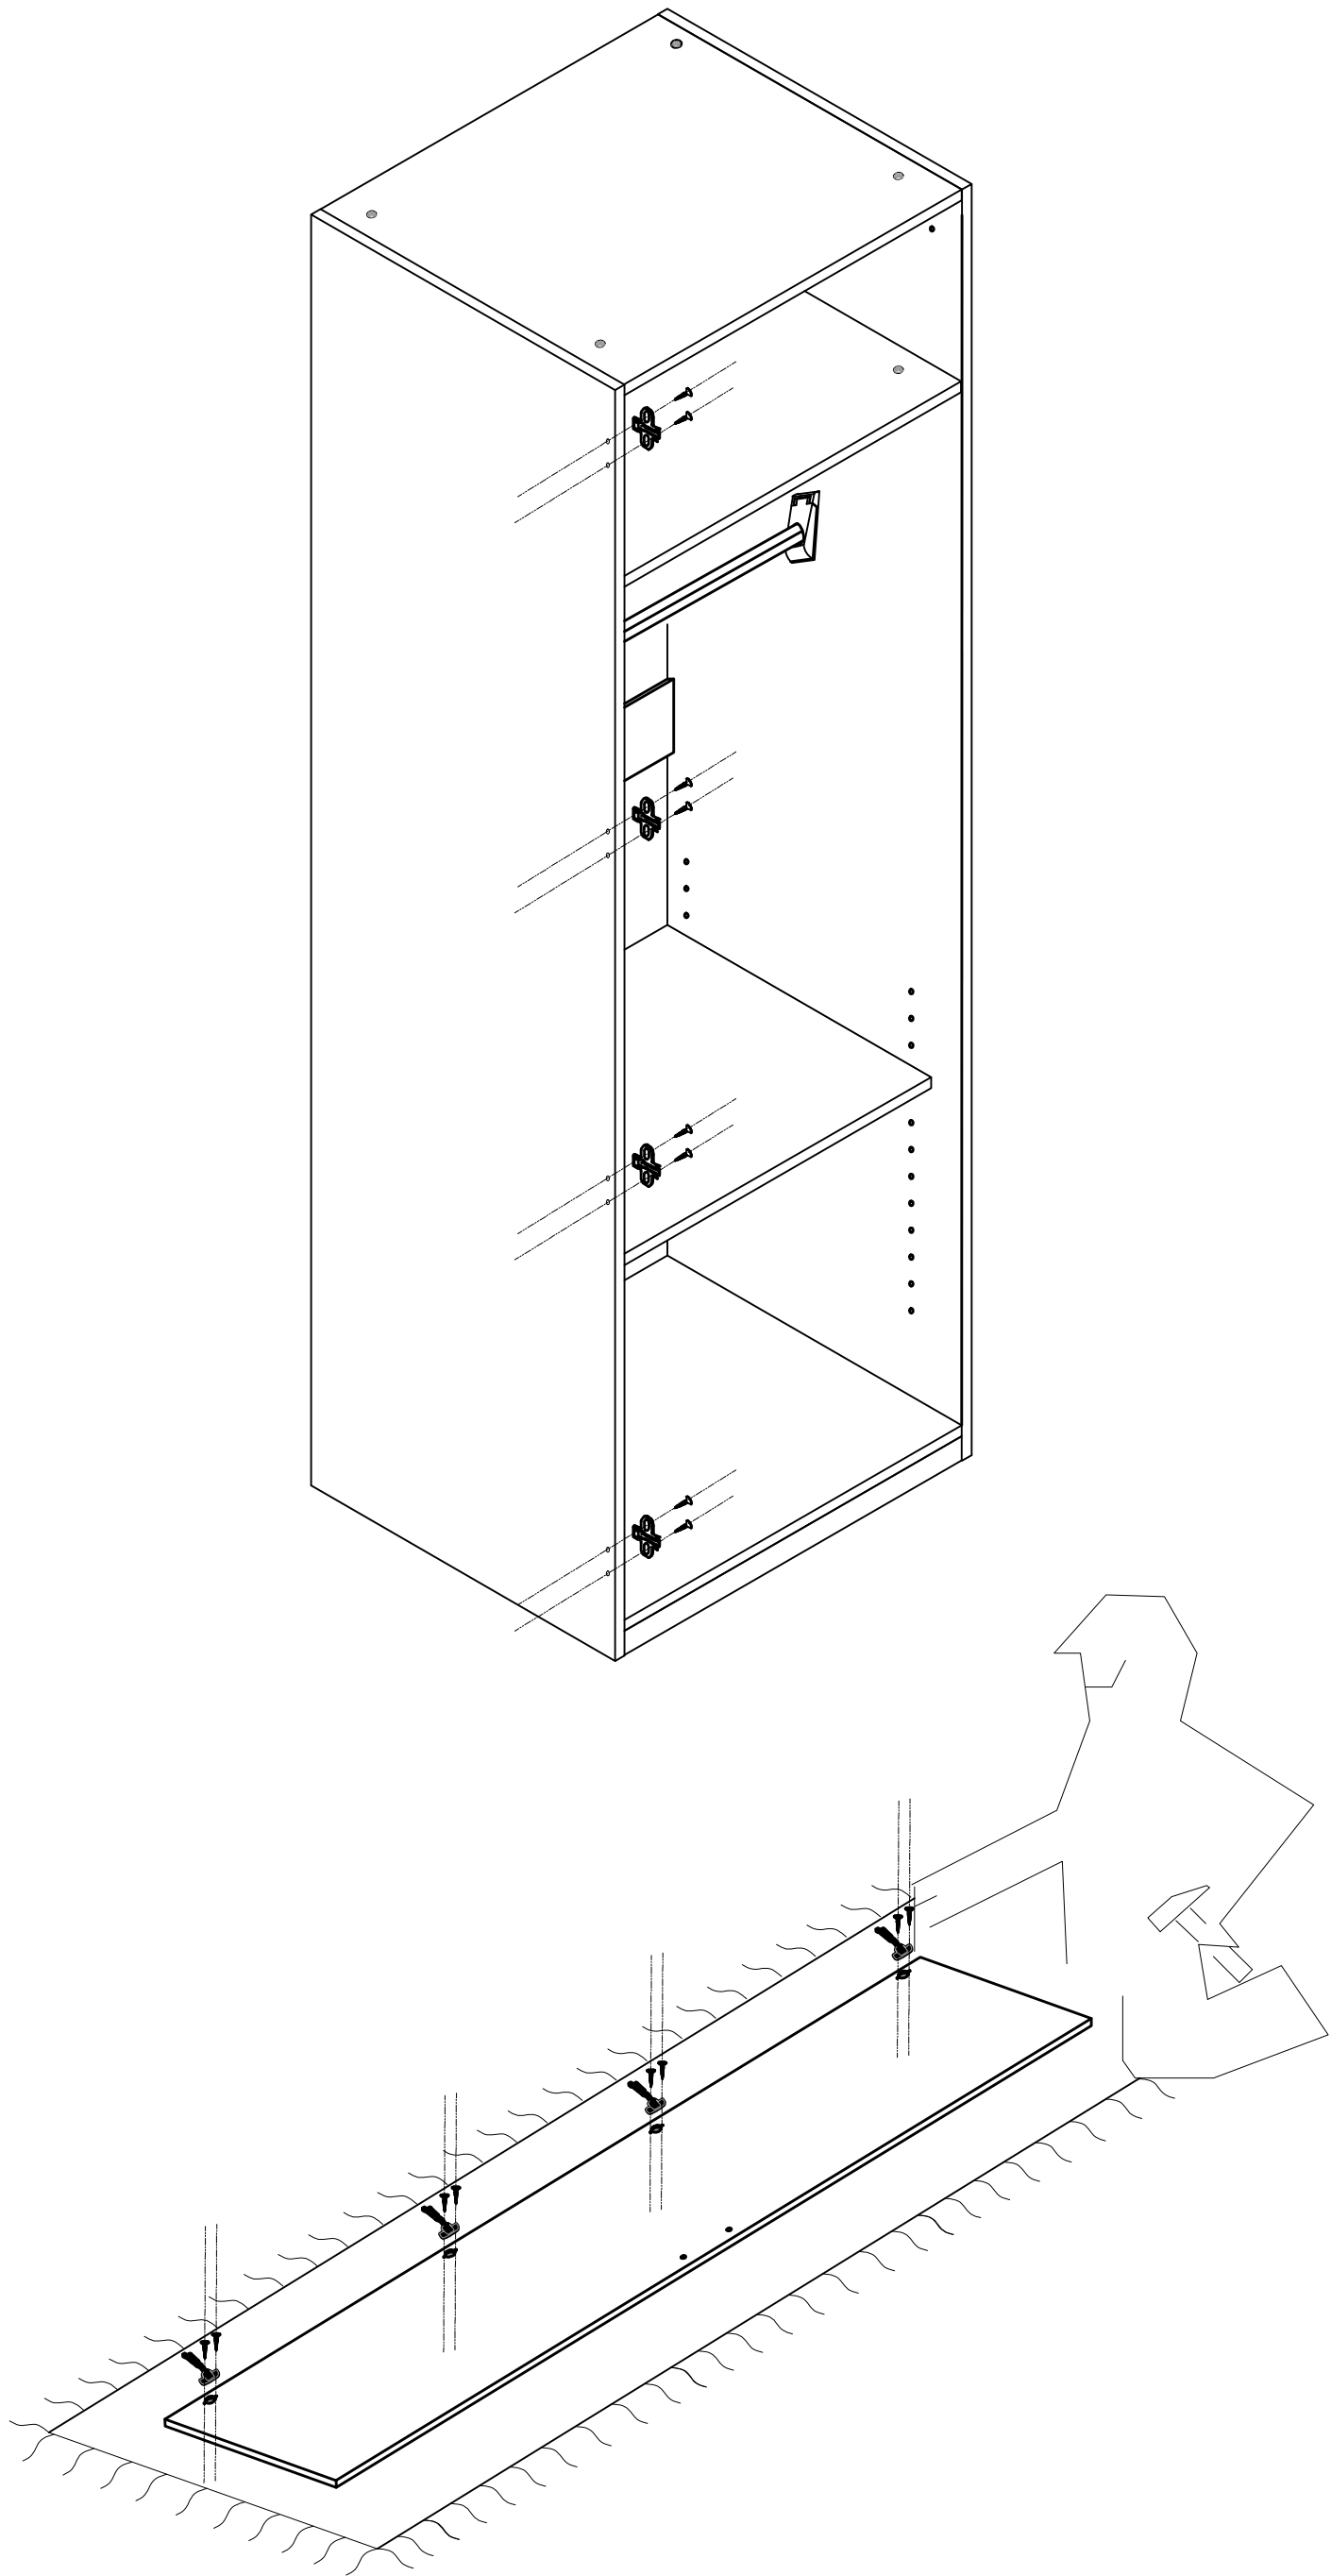

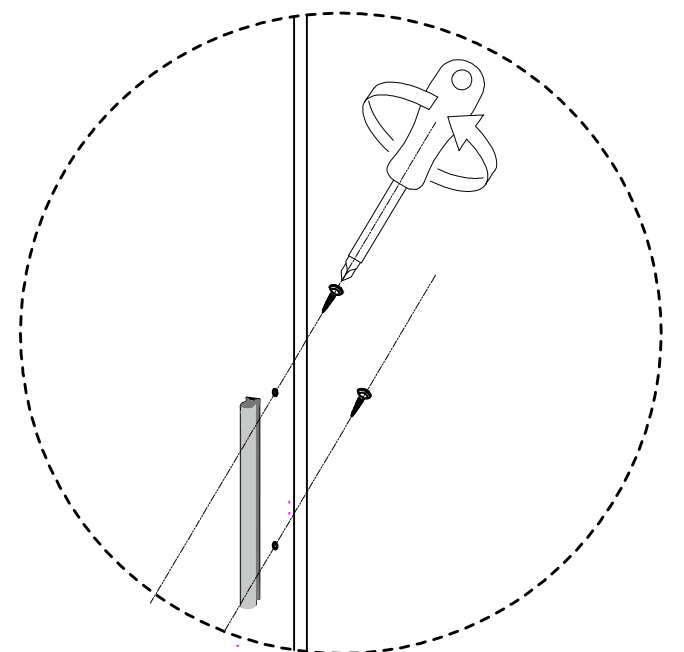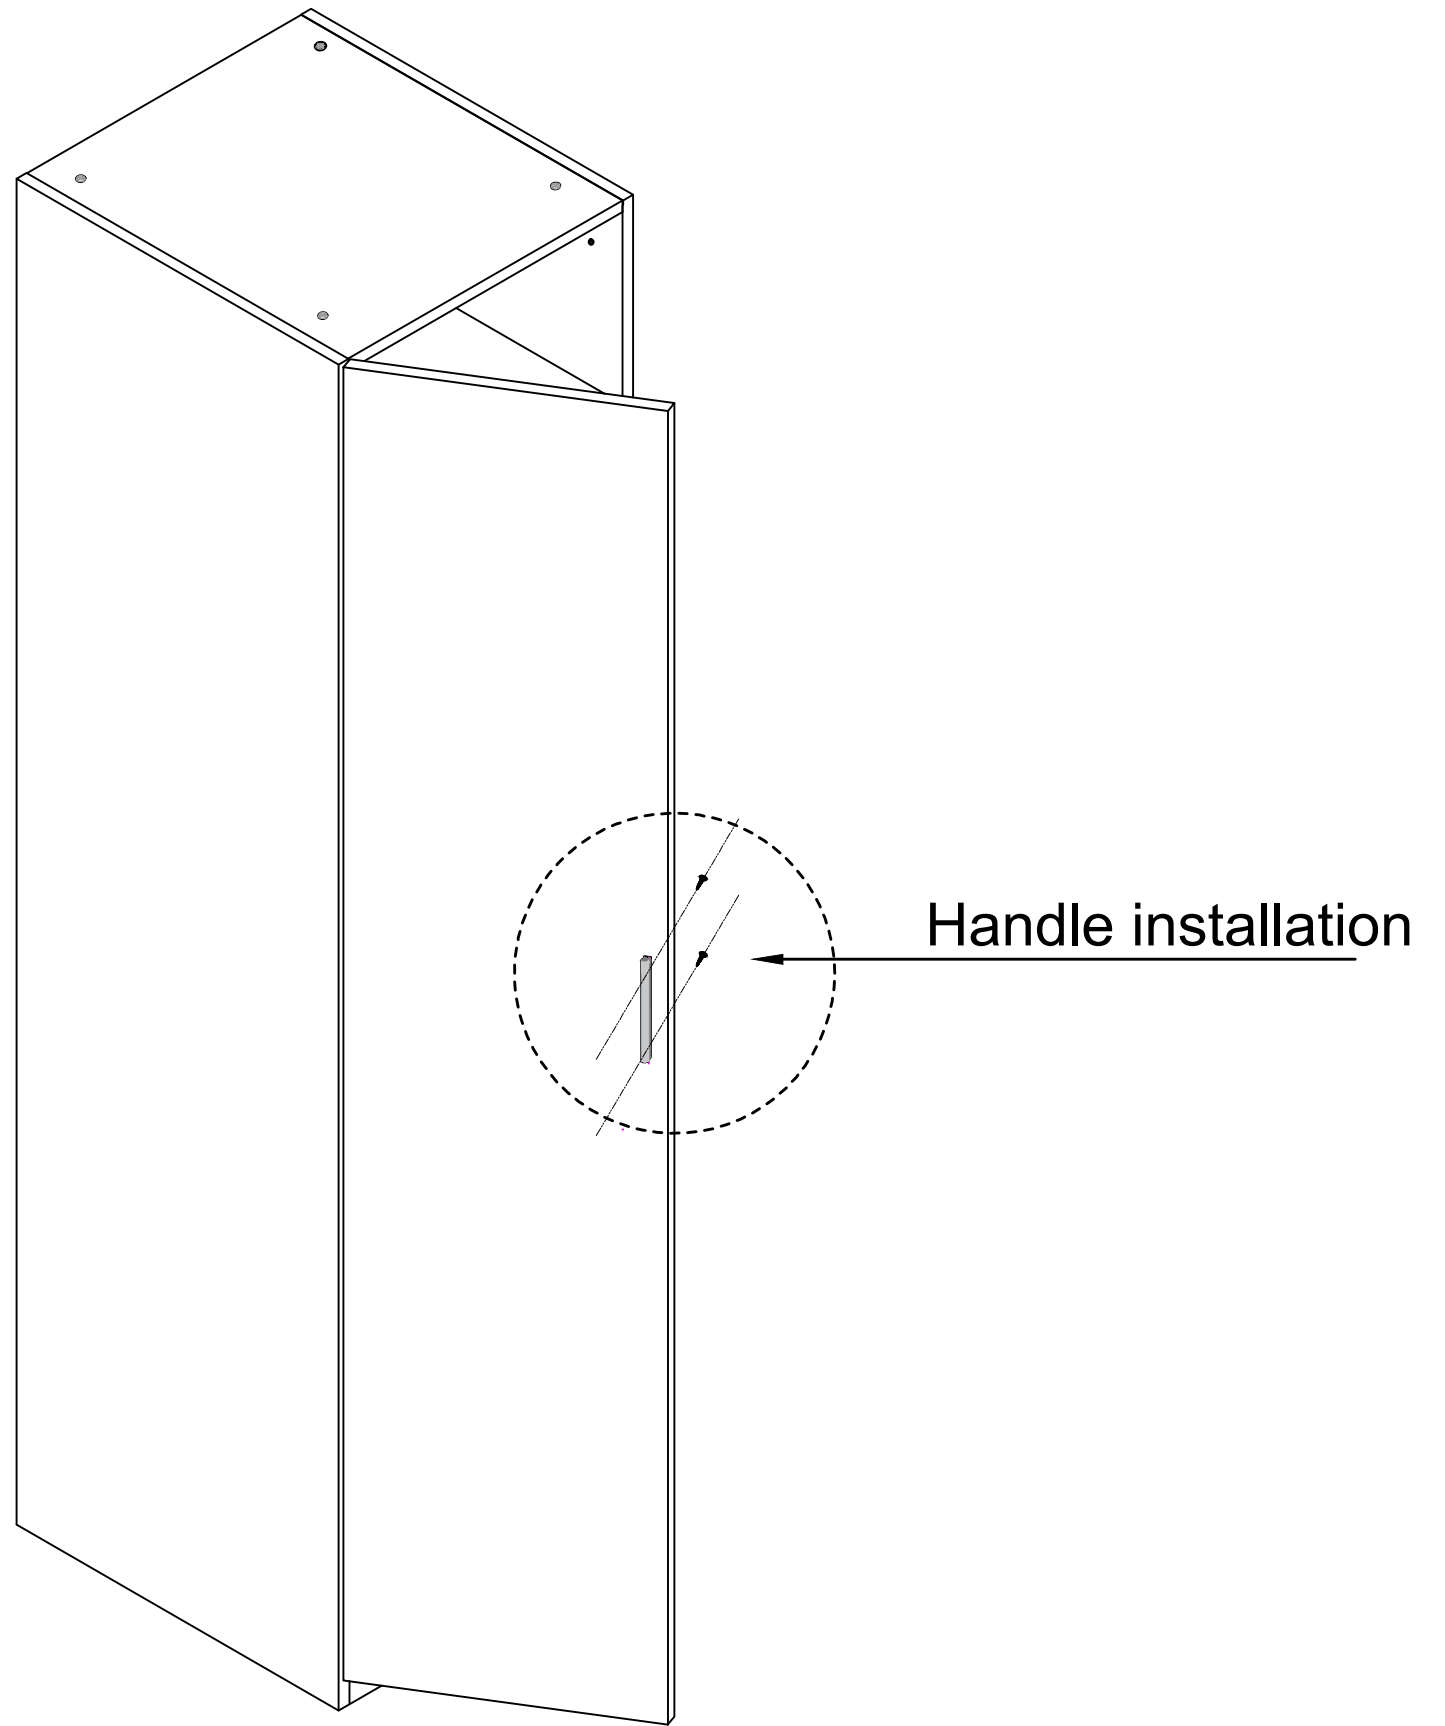

drill two holes on the wall

