

LED MEDICINE CABINET

ITEM: LMIR-MC18-2432-MCT-DF

WESTGATE

www.westgatemfg.com

Read instructions completely before installing the cabinet.


▲ WARNING:

- If the colors of the household supply wires are different than what is referred to in the instructions below, a professional electrician should determine proper wiring.
- An electrical mirror must be wired to a 20 amp GFCI (Ground Fault Circuit Interruptor) when used in a bathroom and all other locations required by the National Electrical Code.


CAUTION:

- Rated for damp locations. Not suitable for outdoor use.
- Be sure the outlet box is properly grounded or that a green or bare (ground) wire is present.
- You may need a second person to support the mirror during installation.

COMPONENTS

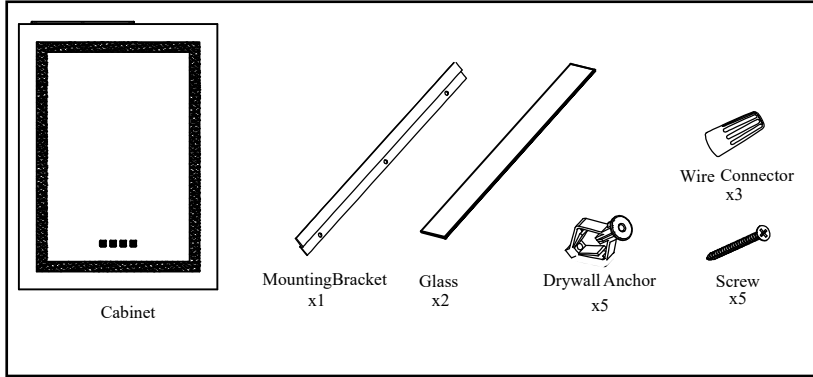

TOOLS INQUIRED

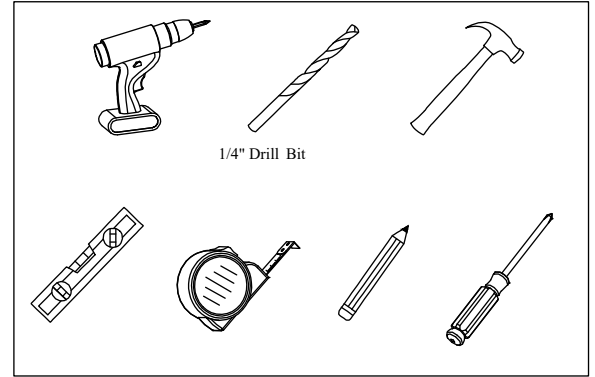

INSTRUCTIONS

1. Turn off circuit breakers and wall switch to the cabinet. **▲ DANGER:** Failure to disconnect power supply prior to installation may result in serious injury or death.

2. Use a mounting bracket and a level (not included) to mark the location of the pilot holes. Note: Use the longer mounting bracket for horizontal mount or use the shorter mounting bracket for vertical mount.

3. Use .25" diameter drill bit (not included) to drill the pilot holes for the drywall anchors.

4. Use a hammer (not included) to tap the drywall anchors into the pilot holes.

5. Secure all wire connections with wire connectors according to diagram and these steps:

- Connect the Bare wire from the fixture to the Bare/Green (ground) supply wire.
- Connect the Black wire from the fixture to the Black (hot) supply wire.
- Connect the White wire from the fixture to the White (neutral) supply wire.

Note: If household supply wires are different colors than referred to above, it is recommended a professional electrician determines the proper wiring.

6. Lift the cabinet onto the mounting bracket. Note: Ensure the bracket preassembled to the back of the mirror interlocks with the mounting bracket on the wall.

7. The hinge A could move mirror door left/right and the hinge B could move mirror door away/towards the cabinet. Set the tempered glass shelves and tighten the screws.

8. We recommend you to use level ruler to measure the cabinet again after installation, ensuring the cabinet is in level.

9. Turn on power supply at the breaker box and wall switch to the cabinet.

OPERATION INSTRUCTION TOUCH OF SWITCHES



Function description:

- K1 key: Turn the light on and off;
- K2 Key: 1. Short press to dim by steps, 2. Long press to dim steplessly
- K3 Key: 1. Short press to change the light color by steps (Cold white - Warm white - Nature white)
- 2. Long press to change the light colors steplessly.

K4 key: control the demister.

- Note: The touch switch has power-off memory. (When the power is on, it will light up at the same level of color and brightness as the one before power-off)
- Demister has no power-off memory.
- Demist Pad working voltage: 12/24V, max. current 3A.
- Demister with Auto cut-off of 1 hour.