

WESTGATE
www.westgatemfg.com

LED Troffer Retrofit Kit

INSTRUCTION MANUAL


PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.
! Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician

Warning


- * LED Troffer Retrofit Kit are not suitable for using in wet loations.
- * LED Troffer Retrofit Kit are not suitable for covering with thermally insulating material.
- * Please keep the LED Troffer Retrofit Kit way from any corrosive substance, and please use dry cloth when you clean it.
- * LED Troffer Retrofit Kit can only be installed by a qualified electrician.
- * Before installation or maintenance, please disconnect the power to prevent electric shock.

Installation Guide


1. Disconnect power to the existing fixture.

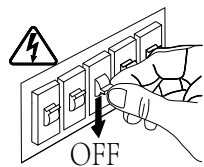


2. Please remove the existing fixture's cover, fluorescent lamps, lamp-holders and ballast etc. from the frame.




3. Slide in both side-mounting brackets between the existing frame and "T" grid.

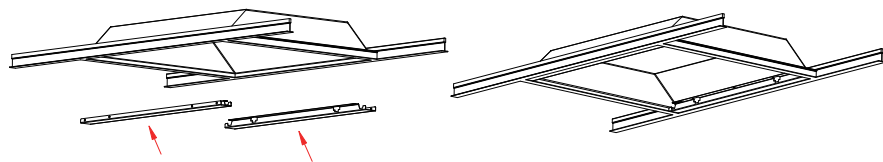


4. Hook the retrofit kit troffer body to the existing frame through the clasps in body to the side-mounting bracket.

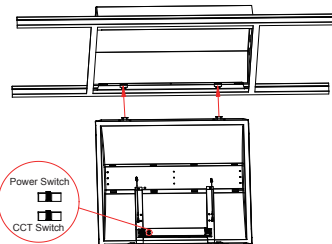


5. As shown in the figure, the retrofit kit troffer body is suspended and hooked to side-mounting bracket, make sure it is clamped tightly.

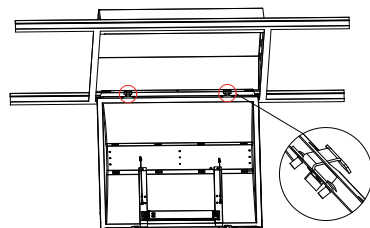


6. Hook the retrofit kit troffer safety rope to the hole of corresponding side-mounting bracket, suspend the retrofit kit troffer body.

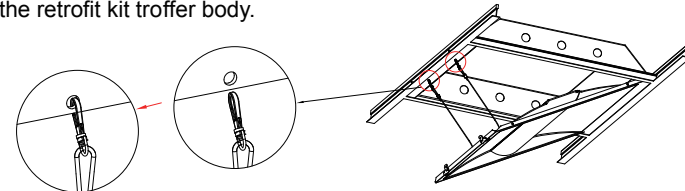


7. Install the power disconnected to line (black) and neutral(white) coming into fixture, ground wires, connect dimming wires (purple & pink), and screw with wire nuts in a suitable place where no loosening.

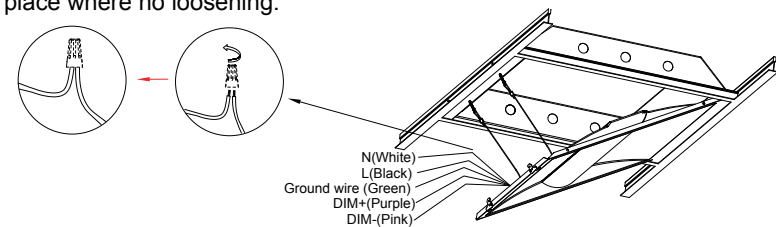


8. Rotate the retrofit kit troffer body upward, push it to the surface of side-mounting bracket.

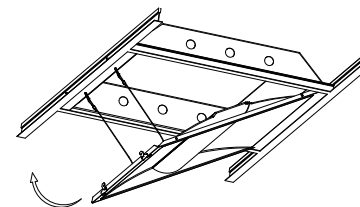

9. Push the retrofit kit troffer body to secure latches, until hearing a "click" sound to ensure it fastened tightly.

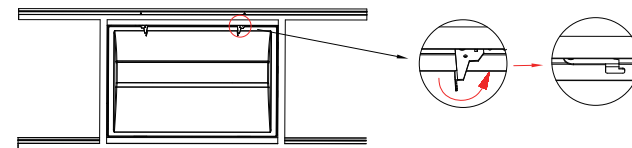

10. Installed view picture shown as below.

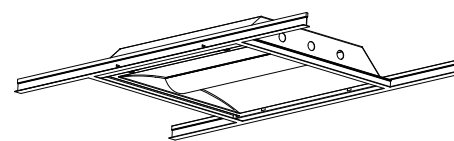

11. Reconnect the power to light on.

