

SMAI Plyo Box – Assembly Instructions


The SMAI Plyo box is designed with functionality, durability, and ease of assembly in mind.

If the parts are assembled in such a way that all the corresponding reference numbers are aligned, it is not possible to assemble the product incorrectly.


This assembly instruction document has been prepared to make the assembly as easy as possible.

Internal Support Pre-Assembly:

1. Assemble the two longest internal support pieces. These parts should simply slot together.

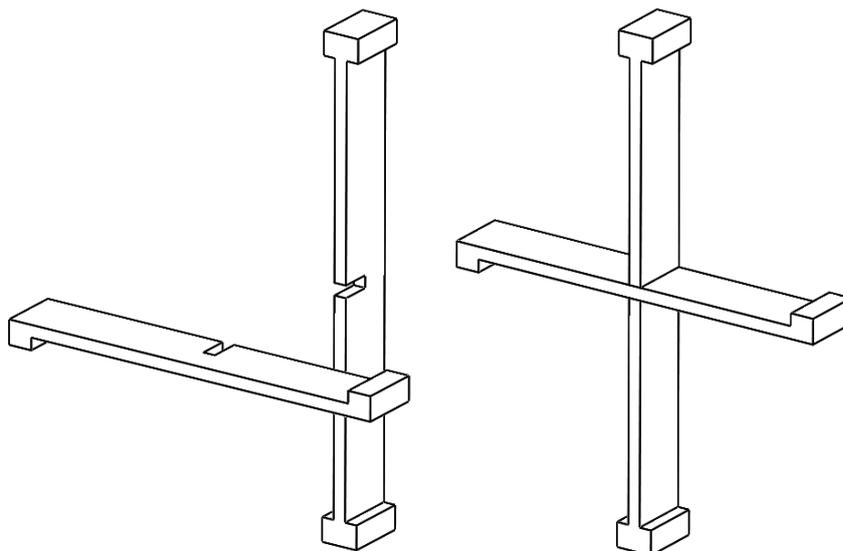


2. Locate the shortest internal support piece and place it on the assembly. Install the short screw through the hole in the short piece. It does not matter which other piece this part is screwed into.

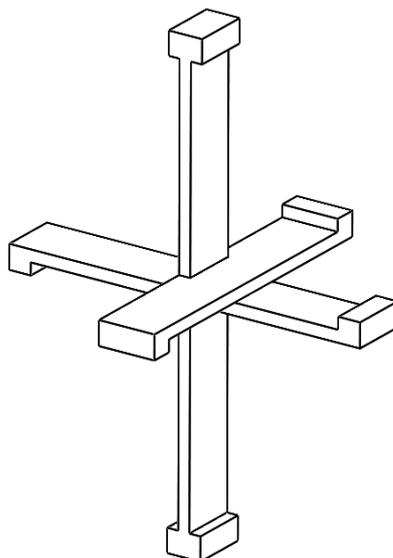


3. The internal support should now be assembled ready to install in the box in a later assembly step.

Box Assembly:


1. Locate the 24 inch panel WITHOUT the central screw hole. Place this panel face down on the floor, so that the red printed reference numbers are facing upwards.

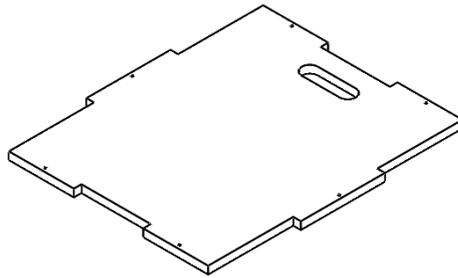

2. Locate one of the 20 inch panels with corresponding reference numbers. Install this panel into the slots of the 24 inch panel.
3. Locate one of the 24 inch panels with corresponding reference numbers. Install this panel into the assembly.

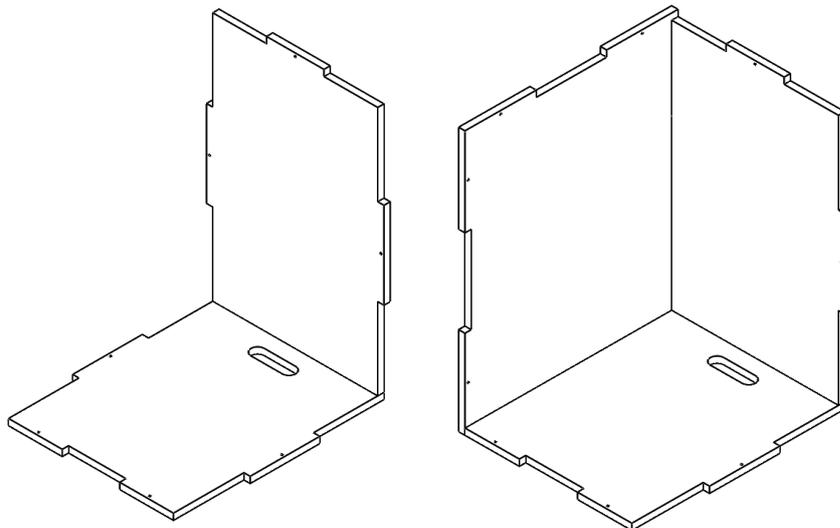


4. Continue around the 24 inch panel until there are for complete 'walls'.

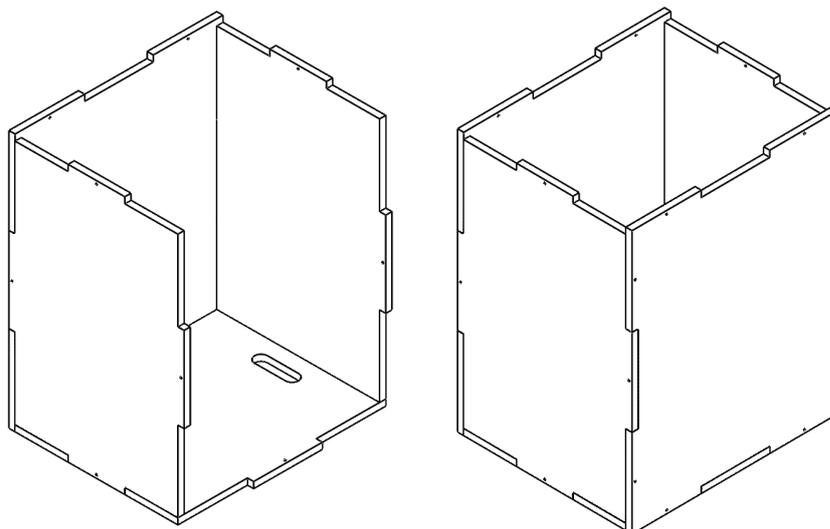


TIPS & TRICKS: It helps to leave the panels slightly loose to assist assembly. Once they are all together, a gentle tap will snug the panels together. The assembly should hold itself together before any screws are inserted.

5. Ensure a snug fit between all panels, and insert the long screws into the holes so that the 20 and 34 inch panels are secured together. The screws in the bottom 24 inch panel will be installed later.
6. Install the pre-assembled internal support assembly. There is only one correct orientation for the support. There is no issue if the support is slightly loose at this stage.

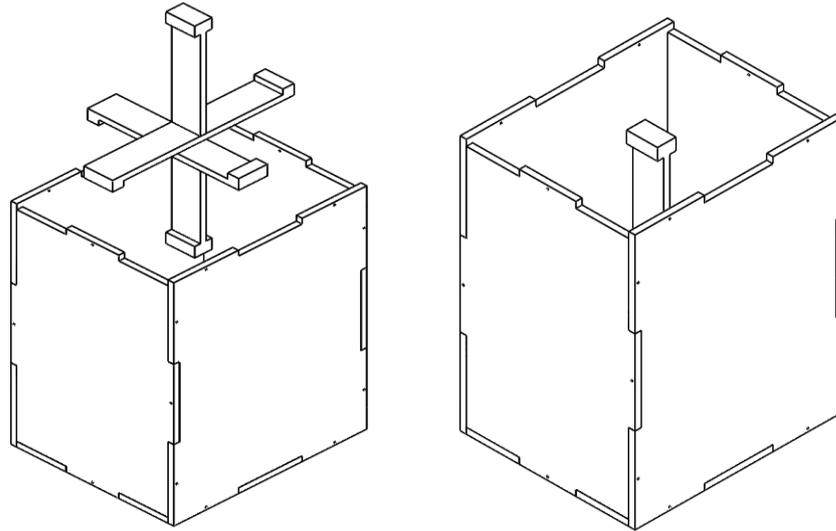

7. Locate the other 24 inch panel WITH the central screw hole. Slot this panel into the top of the assembly. Ensure a snug fit with gentle taps.

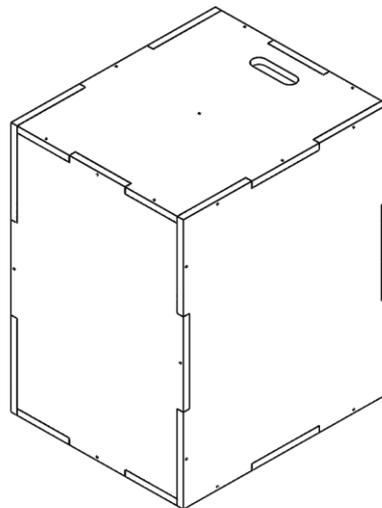

8. Insert all of the screws around the edges to secure the 24 inch panel.
9. Insert the centre screw to secure the internal support assembly.
10. Flip over the assembly, and install the remaining screws to secure the other 24 inch panel.
11. Inspect the completed assembly to check all screws are installed, and screwed down correctly.
12. Assembly complete!