



BOOST AUTO PARTS

**All Lights Mod
For 2015+ Colorado & Canyon**





INTRODUCTION

This document will be covering the installation of our [2007-2021 GM All Lights Mod](#) on 2015 and newer Chevy Colorado and GMC Canyon trucks. Once installed, the factory fog lights will turn on and stay on when the high beams are activated. This installation requires no additional tools and will take only 5 minutes to complete.

This procedure is for 2015+ GM Colorado and Canyon trucks. For exact fitment reference the product page.

Boost Auto Parts offers a variety of other items and accessories for your GM Trucks. To purchase additional parts and accessories [Click Here](#).

TABLE OF CONTENTS

Overview:	Pg. 3
Locating & Removing BCM Connector:	Pg. 4
Installing T-taps:	Pg. 5
Installing Module:	Pg. 6

How to Install GM All Lights Mod for 2015 and Newer Colorado & Canyon Trucks


For 2015+ Colorados and Canyons

Difficulty: Easy

Tools Needed: None

Parts Needed: [2007-2021 GM All Lights Mod](#)

Video Tutorial: [Fog Lights on With High Beams \(All Lights Mod\) 2015-2021 Colorado and Canyon](#)

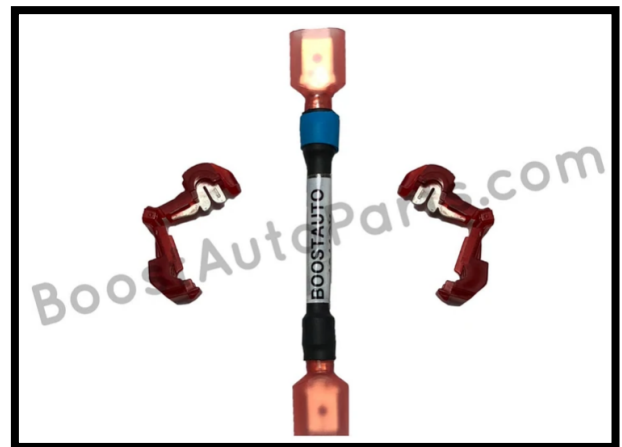

Caution:


Your vehicle must **REMAIN OFF** while any BCM connectors are removed.

Step 1A:

First, locate the BCM under the drivers side dash. Here we show the driver side kick panel removed to give you an idea of the location but removing this is not necessary.


**Step 1B:**

Once you locate the BCM, you will need to unlatch and remove the brown connector. The wires needed for this install will be found in this brown BCM connector. Remove this connector by pushing the tab inwards and pulling it outwards.

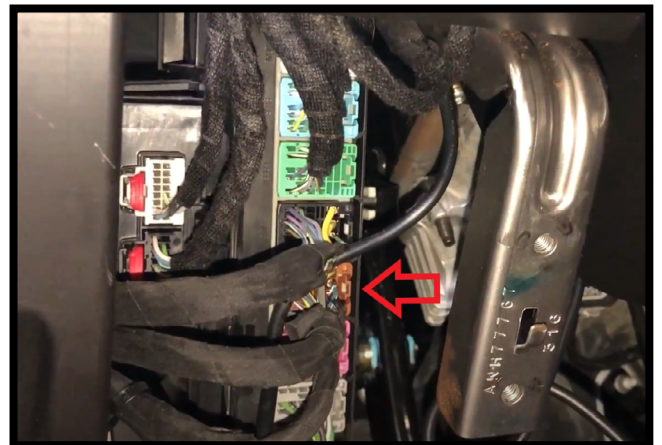**Step 2:**

Identify the wires in each pin location on the brown connector. Pin 13, shown here in red, is located in the third row up and the second column from the right.


Pin 18, shown here in green, is in the second row up and the third column over from the right. Wire color may vary between vehicles, therefore, pin location should be your primary reference.

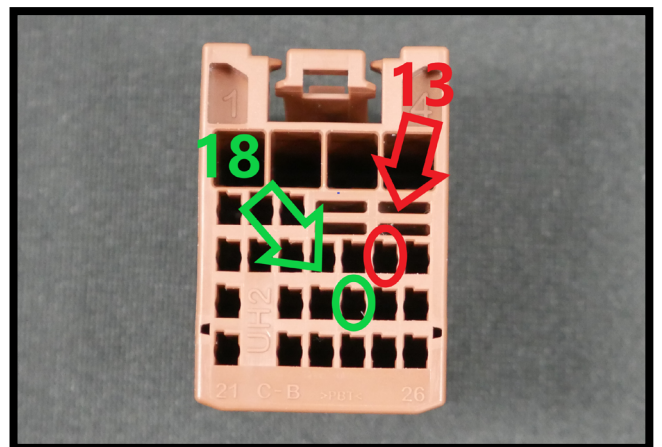

Step 3:

Utilizing the T-taps provided, attach one to the corresponding wire found in slot 13. Make sure to completely close the T-taps for a proper connection.

If your unfamiliar with T-taps, [Click Here](#) for additional instructions.

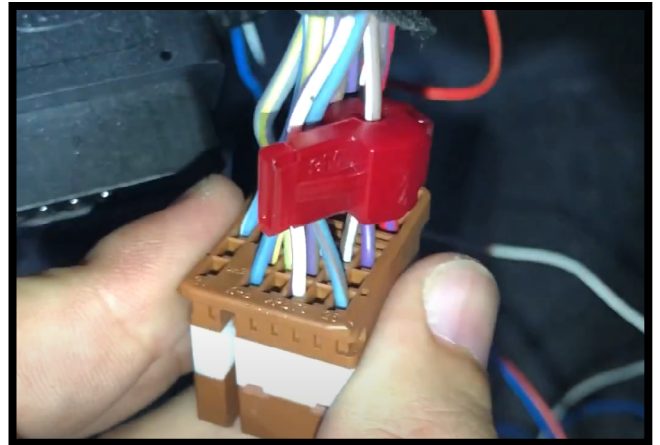

Step 4

Utilizing the T-taps provided, attach one to the corresponding wire found in slot 18. For additional leverage, pliers can be used to close T-taps.


If your unfamiliar with T-taps, [Click Here](#) for additional instructions.



Step 5:

Once both T-taps are installed, find the blue marked end on the module. The marked end needs to be plugged into the T-Tap on the wire in pin 13.

Proceed to bend the Flexible module to connect the other T-tap. If your unfamiliar with quick disconnects, [Click Here](#) for additional instructions.

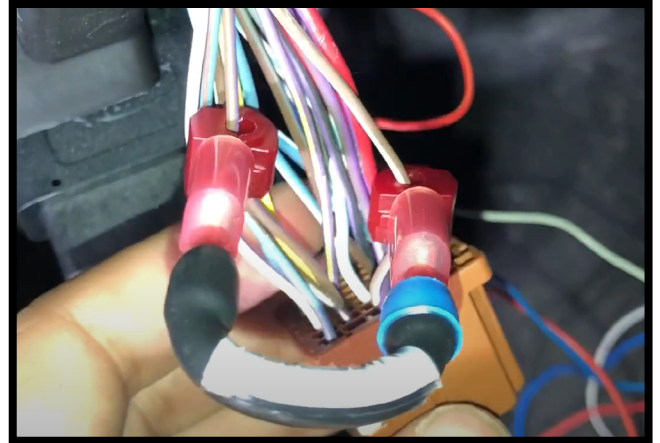


Disclaimer:

Make sure that the **BLUE** marked side connects to the wire tapped into pin 13.

Step 6:

Lastly, reinstall the connector into the BCM. A click sound will be heard confirming the connector has been fully inserted.

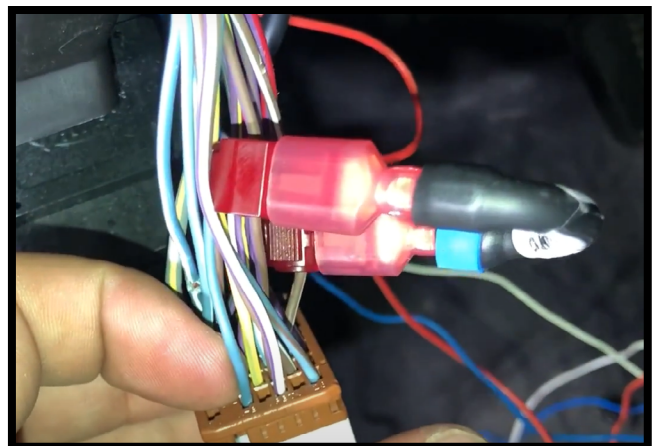

Your GM All Lights Mod Install is Complete!



If you experience any difficulties or complications during your install, feel free to reach out to our Technical Support Team.

**Support@boostautoparts.com
765-831-2830**