


Doorbell Vinyl Siding Mount User Manual Compatible with Wyze Video Doorbell Pro, Google Nest Doorbell (Battery), and Blink Video Doorbell WASSERSTEIN

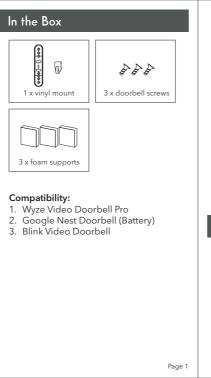


Note: 2. Screw the backplate to the metal hook. Before you install the mount, unscrew making sure the hook is mounted and separate the metal hook from the backplate. How to Install 1. Insert the metal hook to your vinyl siding. Page 2

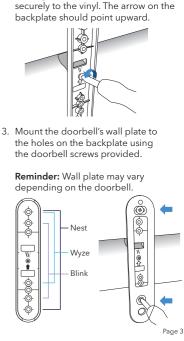

4. Secure your doorbell to the wall plate by following the original installation quide.

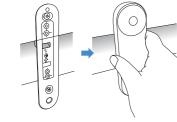



5. If you have a wired setup, connect the wires before securing the doorbell.

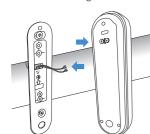

Page 4

6. To use an angle wedge, install the doorbell wall plate and angle wedge together onto the backplate. Then mount your doorbell.

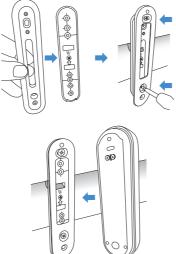


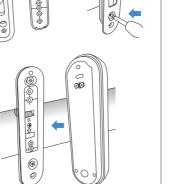


Page 5

the view from the App and adjust the position accordingly.

7. Once the doorbell is secured, check

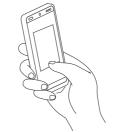

8. Insert the foam support(s) to the back of the mount as needed



Product dimensions: 0.98 x 4.92 x 0.90 in

Specifications

Get More Support

Scan the OR code below or email us at: contact@wasserstein-home.com



CONTACT US

Doorbell is not included. Google Nest Doorbell (Battery) is a trademark Google LLC. Wyze Video Doorbell Pro is a trademark of Wyze Labs, Inc. Blink Video Doorbell is a trademark of Immedia Semiconductor Inc. Wasserstein is not affiliated with Google LLC. Wasserstein is not affiliated with Wyze Labs, Inc. Wasserstein is not affiliated with Immedia Semiconductor Inc. Wasserstein is a trademark of Dropcases Ltd.



www.wasserstein-home.com

Made in China

Page 6