

Raingler

NETS & GRIPS

2003 - 2009 Toyota 4Runner 4th Gen (N210) Ceiling Attic Net Installation

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: approximately 60 minutes


Paw Level:



Tools:

1. Ratchet or Wrench
2. 10MM socket/wrench
3. 14MM socket/wrench
4. Small flat blade and/or panel removal tool for removing access covers and releasing plastic snap divots.

*EZ install Ceiling Nets will not need any tools to install and typically take about 10 minutes simply installing on OEM handles or the C102 mounts explained in **Step 2** below. →

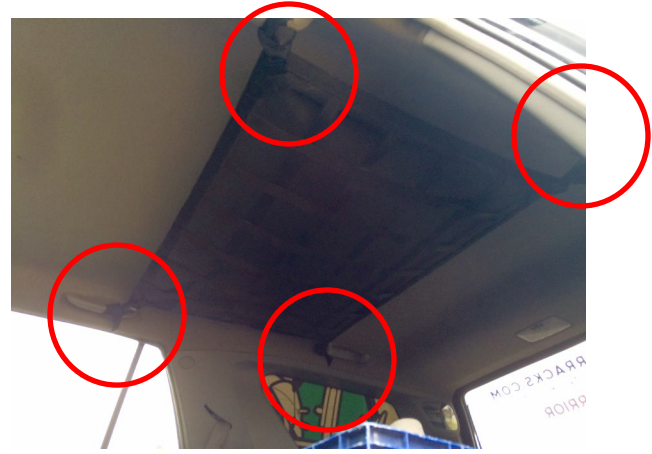

* Your particular model may vary slightly from these shown. Please contact us for assistance if questions before proceeding.


*Note included process for 2 and 3 row equipped models.

Step 1

D pillar mounting.

3rd row equipped models remove the plastic upper seat belt bolt to access the 14mm black bolt and remove.

2nd row equipped models may have mirrors on the trim panels that can easily pop out.

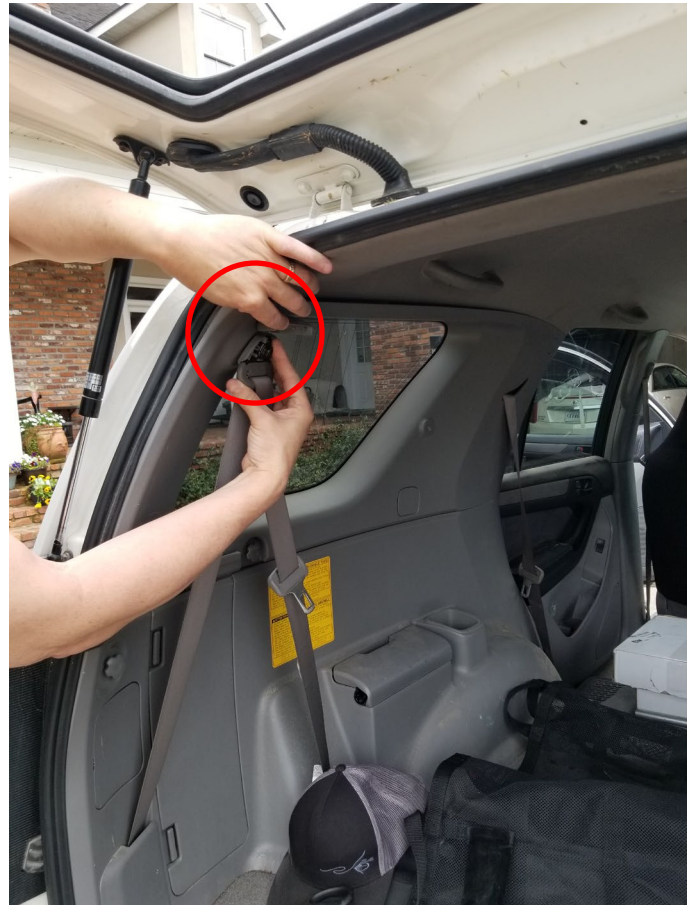

Raingler
NETS & GRIPS


Loosely pop back just the top of the upper D pillar trim piece just enough to slide the C100XL behind the trim and align the mounting hole to the seat belt bolt.



2nd row version



3rd row version

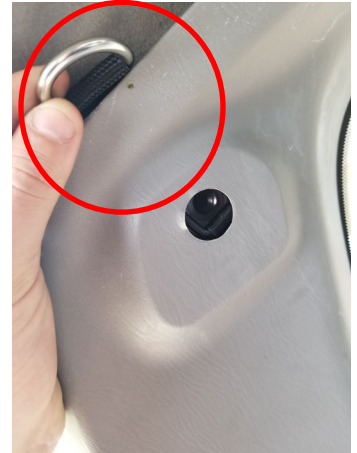

Reinstall with the D ring tether protruding over the top of the D pillar trim and reassemble. 3rd row version shown here.



Raingler
NETS & GRIPS

Step 2

Above the ¼ window mounting and optional B pillar forward mounting.

Your model may have handles here, plastic hooks, or nothing at all.

If you have plastic hooks or handles, remove the side pop out cap and remove the Phillips or 10mm bolts and reassemble with the [C102 hardware](#) as shown.



If you have nothing here, you will need to install the [C100M hardware set](#)


See video here for details. <https://vimeo.com/316655122>

Line up this location last, once the net has been put into location for the most exact alignment.



Step 3

Line up the ceiling net to the factory handles and previously installed D rings. Adjust and center to tension buckles and mounting straps in desired location.

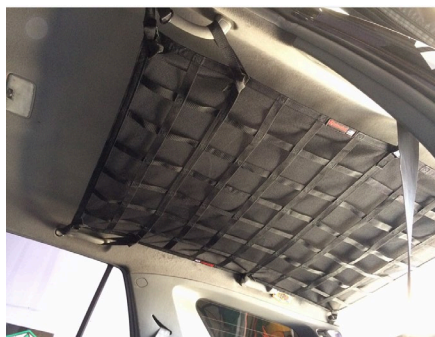

Raingler
NETS & GRIPS

Step 4

Tie up the loose ends. You can do this by feeding the end of the strap through the opening of the buckle to create a loop. Feed the strap through the loop, and the strap behind, continue until no strap is hanging.

See video here for details:
<https://vimeo.com/316588617>



Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

See all our install videos on Vimeo!
<https://vimeo.com/raingler>

Raingler
NETS & GRIPS