

# Raingler

## NETS & GRIPS

---

### 2003 - 2009 Toyota 4Runner 4th Gen (N210) Ceiling Attic Net Installation

**NOTE:** Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

**IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING**

**Time:** approximately 60 minutes

**Paw Level:**



**Tools:**

1. Ratchet or Wrench
2. 10MM socket/wrench
3. 14MM socket/wrench
4. Small flat blade and/or panel removal tool for removing access covers and releasing plastic snap divots.

\*EZ install Ceiling Nets will not need any tools to install and typically take about 10 minutes simply installing on OEM handles or the C102 mounts explained in **Step 2** below. →



\* Your particular model may vary slightly from these shown and may include additional hardware that you don't need. Please contact us for assistance if questions before proceeding.

\*Instructions show process for 2 and 3 row equipped models.

## Step 1

D pillar mounting.

3<sup>rd</sup> row equipped models remove the plastic upper seat belt bolt to access the 14mm black bolt and remove.

2<sup>nd</sup> row equipped models may have mirrors on the trim panels that can easily pop out.



**Raingler**  
NETS & GRIPS

Loosely pop back just the top of the upper D pillar trim piece just enough to slide the C100XL behind the trim and align the mounting hole to the seat belt bolt.



2<sup>nd</sup> row version



3<sup>rd</sup> row version



Reinstall with the D ring tether protruding over the top of the D pillar trim and reassemble. 3<sup>rd</sup> row version shown here.



**Raingler**  
NETS & GRIPS



## Step 2

Above the ¼ window mounting and optional B pillar forward mounting.

Your model may have handles here, plastic hooks, or nothing at all.

If you have plastic hooks or handles, remove the side pop out cap and remove the Phillips or 10mm bolts and reassemble with the [C102 hardware](#) as shown.



If you have nothing here, you will need to install the [C100M hardware set](#)


See video here for details. <https://vimeo.com/316655122>

Line up this location last, once the net has been put into location for the most exact alignment.



## Step 3

Line up the ceiling net to the factory handles and previously installed D rings. Adjust and center to tension buckles and mounting straps in desired location.

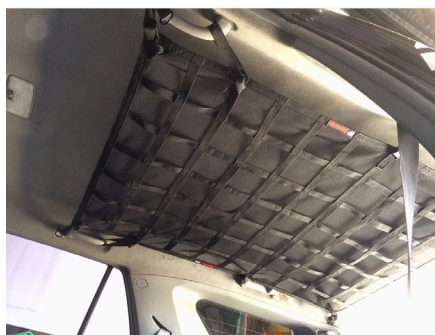

**Raingler**  
NETS & GRIPS

## Step 4

Tie up the loose ends. You can do this by feeding the end of the strap through the opening of the buckle to create a loop. Feed the strap through the loop, and the strap behind, continue until no strap is hanging.

See video here for details:  
<https://vimeo.com/316588617>



Thank you for purchasing Raingler Nets.  
If you have any questions please contact us,  
we are here to help!

See all our install videos on Vimeo!  
<https://vimeo.com/raingler>

**Raingler**  
NETS & GRIPS

866-905-7625 | Tech@RAINGLER.com | Raingler.com