

Raingler

NETS & GRIPS

2003 - 2011 Honda Element Full Ceiling Attic Net Installation

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: approximately 45 minutes



Paw Level:

Tools:

1. Torx Wrench Set
2. Ratchet

Step 1

The top plastic cover at the ceiling latch point will pop down and out by grasping the sides and carefully pulling down. A wiggle motion tends to help the snap in tab release.

(Driver's side shown with door open)



Step 2

Remove factory bolt toward rear of vehicle. Add anchor plate included with your net. Repeat steps 1 and 2 on the passenger side.

*Your kit will come with an extension tether and D ring (part C115M) attached to the anchor plate. Orient tether towards rear and center of cabin area.



Step 3

Reinstall trim and double check that the black bracket clears trim edge for the webbing strap to insert.



Step 4


Attach the middle and then the rear straps to the OEM handles and OEM hooks (slide open covers in the very back)



Step 5

Tie up the loose ends. You can do this by feeding the end of the strap through the opening of the buckle to create a loop. Feed the strap through the loop, and the strap behind, continue until no strap is hanging.

See video here for details:
<https://vimeo.com/316588617>

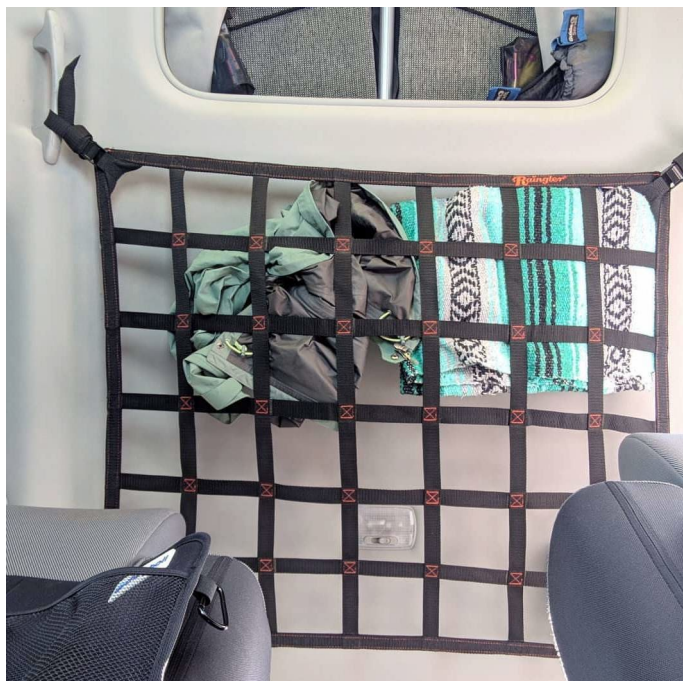

Thank you for purchasing Raingler Nets.
If you have any questions please contact us,

866-905-7625 | Tech@RAINGLER.com | Raingler.com

we are here to help!

See all our install videos on Vimeo!

<https://vimeo.com/raingler>

