

# Jeep Cherokee Ceiling Net Install

## 2014 and newer

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top

mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment

to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for

better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: About 45 minutes

**\*\*\*** 


Tools: (may vary by vehicle)

Paw Level:

1. Drill and small pilot hole drill bit


2. Panel removal tool helpful, but not required

Step 1

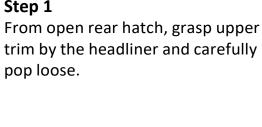



Step 2 Locate and note round hole and location of wiring harness on passenger side.

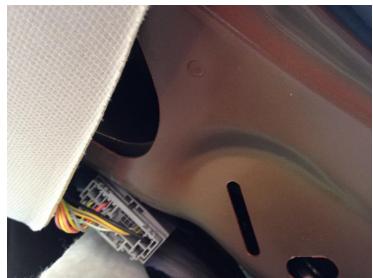

Step 3

Place d-ring strap assembly across hole so that strap will exit from behind panel when re-assembled in a liner plane as to not push down on plastic trim and does not interfere with wiring harness location. Hold and mark locations for mounting screws. (Optional Trailhawk version with red stitching shown)







**Step 4** Install screws into footman holes.



**Step 5**Re-assemble panel with D-ring extending out between panel and headliner.

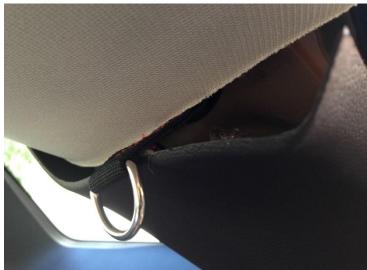

**Step 6**Carefully reassemble panels so that all OE snaps fit correctly into structure holes.

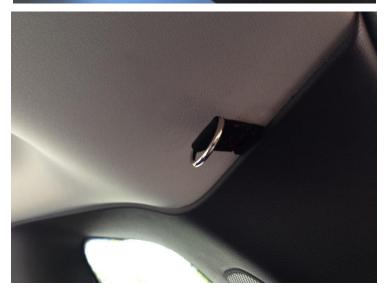



#### Step 7

Install net so that logo is correctly reading from inside the front of vehicle. Front straps wrap onto OE handles as shown and it is ready to load with your soft items overhead.



#### Step 8

There is over a foot of drop down straps, so drop as low as needed, load items carefully as to not snap headliner.



### Step 9

Pull front straps to desired position and tuck excess into buckle. Most items can be loaded from rear opening with ought adjusting front straps. To wrap and tuck excess, feed extra strap after pulling taut, through opening in buckle.





Step 10

Pull angle end of strap from backside of buckle leaving a small opening to feed strap though "loop" on front of buckle



Step 11

Tuck angle end of strap into "loop".



Step 12

Feed and pull through "loop".





#### Step 13

Continue process until all excess is wound around and through the "loop".

#### Step 14

Any small leftover strap on the angled end feed back into the "loop" by reversing direction. This will leave a small pull to quickly release excess and drop-down net. The ceiling net can be used with other Raingler products for the new Cherokee like cargo area floor nets, barriers for behind front and rear seats.





Check out the video here: https://vimeo.com/raingler



Thank you for purchasing Raingler Nets. If you have any questions please contact us, we are here to help!