

Raingler

NETS & GRIPS

2015-newer Chevrolet/GMC Double & Crew Cab Barrier Divider Net Installation

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: approximately 20-30 minutes

Paw Level:



Tools:

1. Panel Removal Tool. A small flat screwdriver can also work if very careful to not mar the plastic trim
2. 10mm and 7mm socket wrench or power drill with pressure adjustment set to low

NOTE: Move seats forward for easiest access.

Step 1


Pop out the 3 removable inserts on each B pillar. Two over handle bolts and one over top trim mounting bolt.

NOTE: This is under the piece noted “Airbag”. This is to let you know that this model is equipped with an SRS system. DO not modify, relocate, or cut any lines if you see them under the trim piece.



Step 2

Handle pop outs release easily from the rear side as shown in this detail:

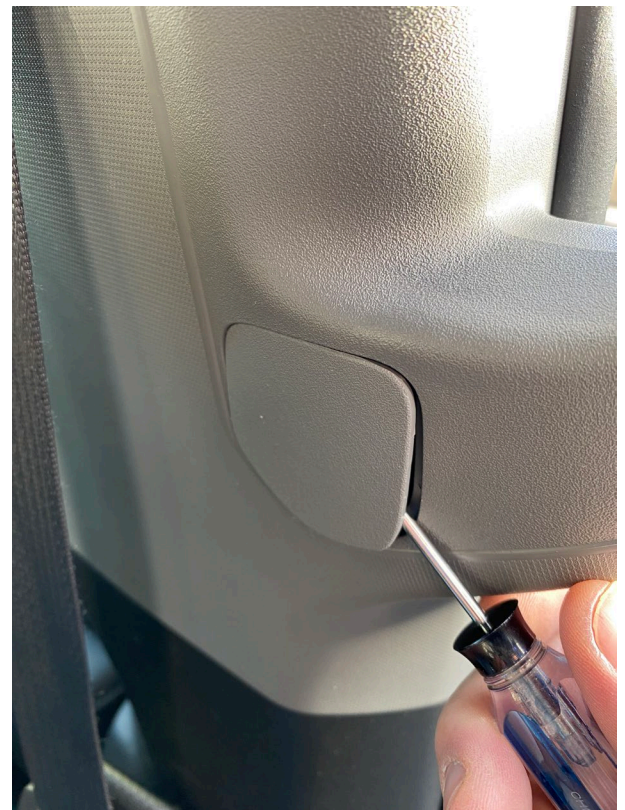

Step 3

Remove the 10mm bolts from the handle:



Step 4

Top of side panel cover removes easiest from rear of cab



Step 5

Remove 7mm bolt:



Step 6

Grasp handle and pop B pillar trim loose:

You will see the hardware fixture that the C100X top mount will install into:



If your truck does not have this factory bolt, you may need to install one in this approximate location inside the round and slotted holes.

You will have to source a similar to OEM, 7mm bolt and speed nut/Timmerman clip or toggle bolt (available at hardware stores) for the slotted hole. You can also order our C104S kit with your order.



Step 7

Slide the C100X hardware mount tab to the back side of the panel with the tether strap oriented to the top. The 7mm bolt removed in step 5 will slide into the C100X's mount tab hole



Step 8

Carefully line up all the spring clips that hold the panel in place as well as making sure the grab handle bolt holes are centered.

Tighten the 7mm bolt once assembly has been pressed into place:



Keep the tether and D ring strap pointed up.



Step 9

Reinstall the remaining bolts in position. Double check that the seat belt strap as free and clear in operation:




Step 10

Start strapping up your and centering your barrier, starting from top to bottom. Do not worry about fully tensioning straps until seats have been returned to driving position.



Step 11

At the lower seat belt rods, make a double wrap around the rod on the lower section:

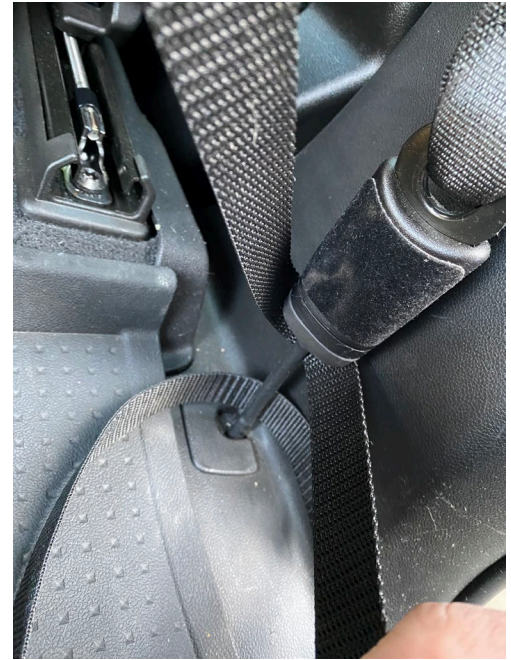

After second wrap:



Step 12

Returns seats to desired locations and do a full tensioning again, from top to floor. Lower straps should remain tight around rod and not shift up:



Step 13

Wrap and tuck up excess strap length. A quick video showing how to do this: <https://vimeo.com/316588617>





Step 14

All done. Your net should look like this

Thank you for purchasing Raingler Nets.

If you have any questions please contact us,
we are here to help!



See all our install videos on Vimeo!

<https://vimeo.com/raingler>

Raingler
NETS & GRIPS

866-905-7625 | Tech@RAINGLER.com | Raingler.com