

2015 - 2019 Subaru Outback Behind 2nd Row Seats Full Barrier Net Install

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: USE THESE INSTRUCTIONS AS A SUPPLEMENT TO OUR INSTRUCTIONAL VIDEO HERE: https://vimeo.com/316912876

Time: About 30-45 minutes



Paw Level:

Tools: (may vary by vehicle)

- Panel Removal Tool
 Drill Bit & Drill
- 3. Phillips head

Step 1Uninstall the C pillar as shown.

*In many instances, it only requires loosening the trim for access. Your model may have slight variations.



Step 2Mark drill holes for the footman mount. Drill and install hardware.





Step 3Reinstall the C pillar.

*Helpful note: put a zip tie on the D ring part of the hardware to easily hold it out as you reinstall the C pillar panel.

Step 4

With rear seat laying down, use the seat catch for the middle strap (Shown from passenger side looking toward the rear of the vehicle).



Step 5

Use the cargo hold ring in the floorboard for the bottom strap. Some models can attach the lower strap to where the seat pivot is.




Step 6

Run the top strap through the D ring hardware you installed in step 2.

Step 7

Repeat for other side.

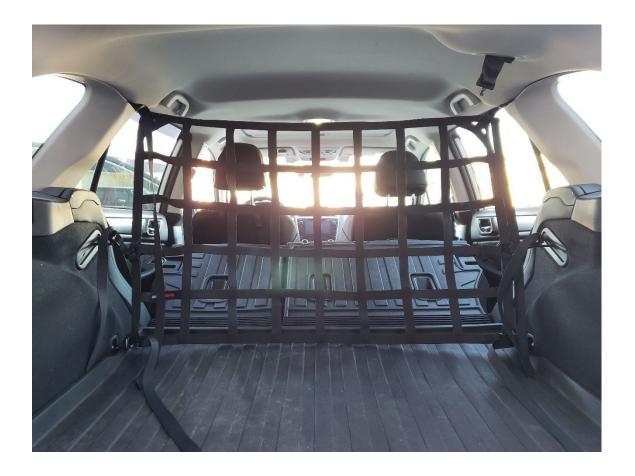

Step 8 Tie up the loose ends

You can do this by feeding the end of the strap through the opening of the buckle to create a loop. Feed the strap through the loop, and the strap behind, continue until no strap is hanging.

See video here for details: https://vimeo.com/316588617



Thank you for purchasing Raingler Nets. If you have any questions please contact us, we are here to help!

See all our install videos on Vimeo! https://vimeo.com/raingler

