

Raingler

NETS & GRIPS

2017 – Newer Ford SuperDuty SuperCab Barrier Net Install

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: *About 60 minutes*



Paw Level:

Tools: *(may vary by vehicle)*

1. Torx T-30, T-40, T-50 sockets and wrench
2. Optional tools: trim panel removal tool

Watch this video for good general idea of how the top mount will install
<https://vimeo.com/316309790>

Further details in the next 3 steps below.

Step 1

Slide front seats forward for easiest access. At top of door catch, we'll be removing the catch plastic cover piece.




Step 2

Carefully loosen and pull the weatherstripping away from the cover area. Watch that there may be some grease or dirt around the striker catch as to not get it on the headliner or interior. There are two plastic push ins that hold the cover in place. Using hand or panel removal tool, pop the cover gently down and away so that you can slide it over the striker catch hook.



Step 3

You will see and few Torx striker bolts that secure the catch. We would typically use the forward bolt in the Ford Super Duty, but you could use the rear one if you wanted your net to be more towards the rear of the cab.

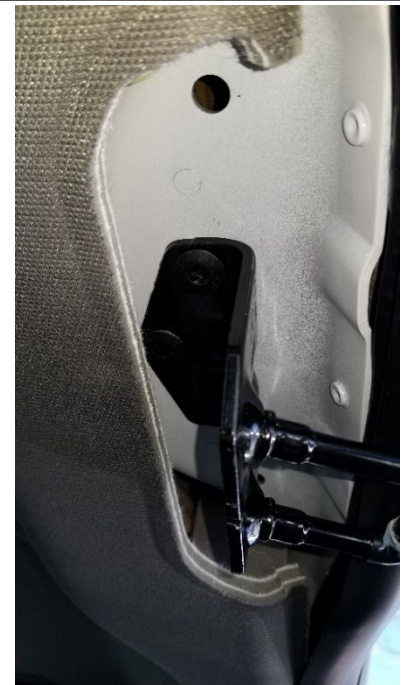

Remove the Torx bolt (stock example image)



Assemble the C115M hardware on the bolt and reinstall with bracket oriented towards the center of the cab, angled side facing down.

Step 4


Reinstall the plastic cover with the D ring clear of the edge.



And reinstall the weatherstripping.

Step 5

Install C109W hooks on lowest straps about 10 inches from corner of net.

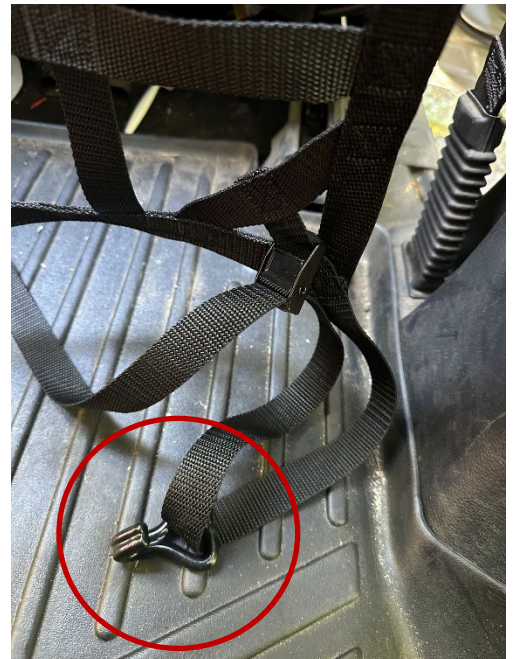

You can feel or see with creative use of your camera on a phone a hook location at lower outside edge on underside of seat.



Place the hook in this notch. Snug up the strap just enough to keep the hook in place.



Step 6

Starting at top, center and tighten net straps. Second tighten the lowest straps firm but not overly tight as to allow seat travel. Last, tension middle straps to draw slack out of middle of the net.

Double check that the seats have desired range of motion before fully tightening all straps, again in previously noted order.



Be sure to check that seatbelts are free of restrictions and operate smoothly.



Step 7
Wrap and tuck up excess end straps as shown in [this short video](#).



Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

