

Raingler

NETS & GRIPS

2017 – Newer Ford SuperDuty SuperCab Ceiling Net Install

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: *About 60 minutes*



Paw Level:

Tools: *(may vary by vehicle)*

1. Torx T-30, T-40, T-50 and 13mm socket and wrench
2. Optional tools: trim panel removal tool

Watch this video for good general idea of how the top mount will install
<https://vimeo.com/316309790>

Further details in the next 3 steps below.

Step 1

Slide front seats forward for easiest access. At top of door catch, we'll be removing the catch plastic cover piece.




Step 2

Carefully loosen and pull the weatherstripping away from the cover area. Watch that there may be some grease or dirt around the striker catch as to not get it on the headliner or interior. There are two plastic push ins that hold the cover in place. Using hand or panel removal tool, pop the cover gently down and away so that you can slide it over the striker catch hook.



Step 3

You will see and few Torx striker bolts that secure the catch. We would typically use the forward bolt in the Ford Super Duty, but you could use the rear one if you wanted your net to be more towards the rear of the cab.

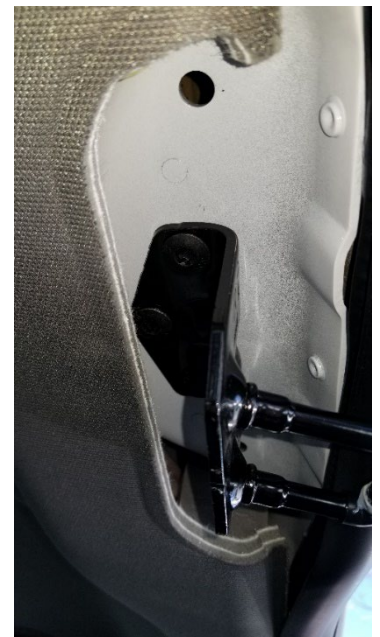

Remove the Torx bolt (stock example image)



Assemble the C115M hardware on the bolt and reinstall with bracket oriented towards the center of the cab, angled side facing down.

Step 4

Reinstall the plastic cover with the D ring clear of the edge.




And reinstall the weatherstripping.

Step 5



At rear of cab, grasp top of trim cover and work back to pop top and side loose. This panel does not need to be fully removed.



It may be easier to start at front edge by weatherstripping.

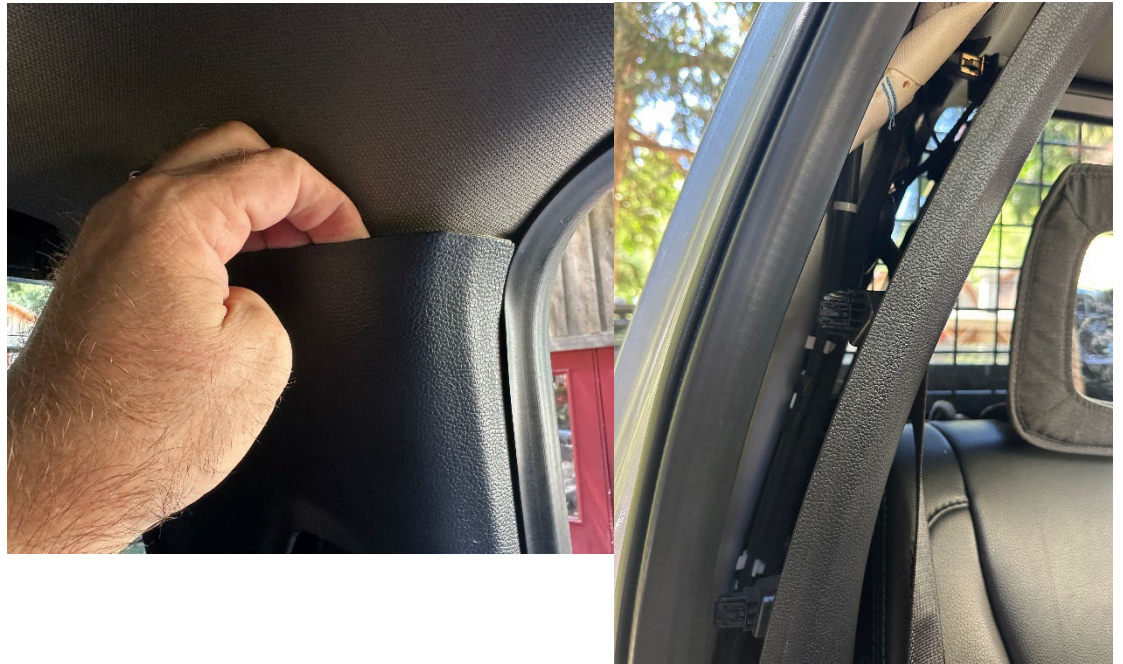

***NOTE:** Be careful not to lose the clips, and also make sure the anodized clips stay aligned correctly before reinstalling.

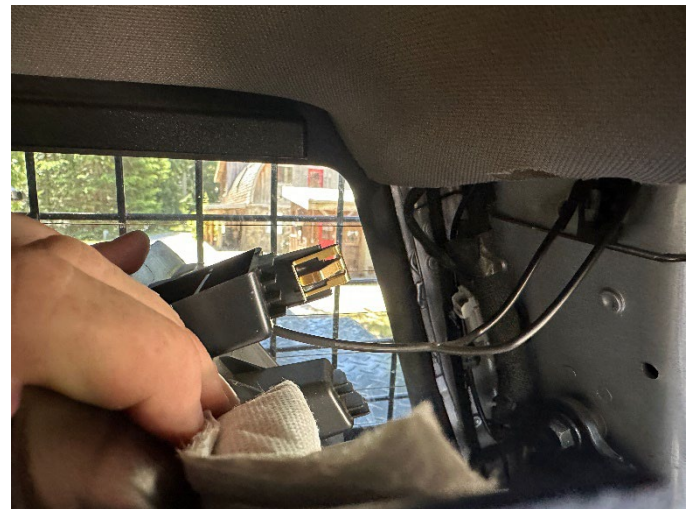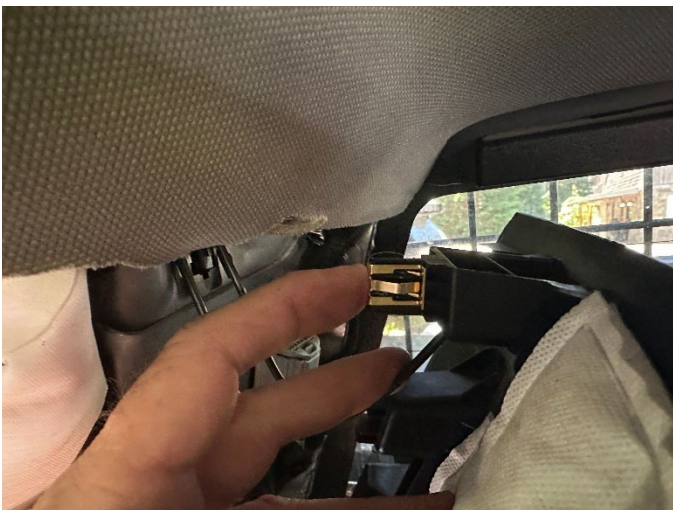

NOTE: If you see any lines, or wires when working, do not alter, move or cut them during installation or reassembly:



Step 6

Remove 13mm bolt, taking care not to drop any parts of assembly.



Step 7

Reinstall with C115XL hardware oriented up and with anchor plate to mount next to upper C pillar structure.




The webbing tether should route towards front of cab and clear of the anodized clip.



Be sure to keep D-ring above trim panel before fully reinstalling cover.



Make sure all clips line up to holes before attempting to push panel into place.

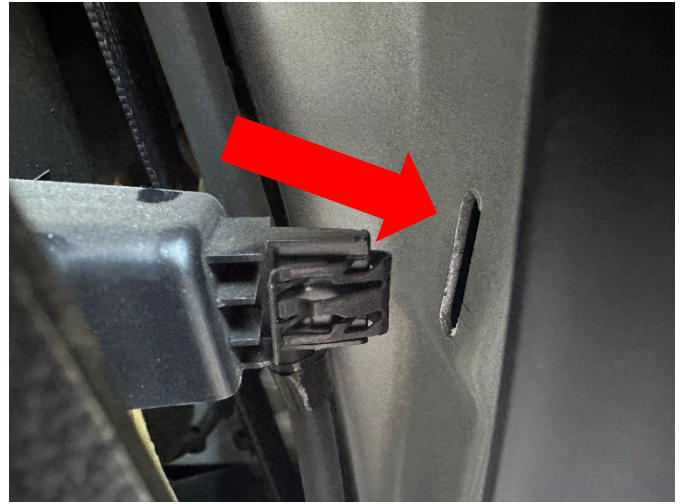

Panel fully seated and flush with no gaps.



Step 8

Start by loosely installing the six straps of the ceiling net, buckle side facing down.



Step 9

Center net up aligned with handle straps and then tighten and then tighten front and rear straps. Example image shown.



Step 10

Wrap and tuck up excess end straps as shown in [this short video](#).



Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

Raingler
NETS & GRIPS

866-905-7625 | Tech@RAINGLER.com | Raingler.com