

Raingler

NETS & GRIPS

2021-Newer Ford Bronco 2 & 4 door Side Window Nets Installation

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: approximately 30 minutes

Paw Level:



Tools:

1. Torx T-50 and T-30 socket and wrench *Ford may have supplied these with your Bronco in the Factory Toolkit.

OPTIONAL: Clear or rubber strips or washers to fit under the powder-coated mounting anchors.

IMPORTANT Shown on hardtop models. If you have the soft top model you will have the folding mechanism that may make access more difficult and you may need to source 4 of the Torx bolts for the OEM holes as in this example:

Here is also a nice alternative.

<https://www.rockworkx.com/collections/bronco-6g-hard-top-removal-bolts>



Step 1

Start by loosening the Torx T-50 bolt at the front lower edge of the side window.



Install the C1015 anchor plate included with your nets. We have angled them inwards for this but they can also be rotated towards the outside if you are running these with the top removed.



Repeat process for the rear bolt.

4 door:



2 door (shown with aftermarket hardware in place of OEM Torx bolts)



Step 2

There are two ways to mount the top straps. Hold the net up to see where the straps line up on the Bronco. You will simply run the tapered end of the strap around the bar or through the hardware's opening and back to the buckle on the nets edge. Push in the tab on the buckle to expose the teeth that will hold the webbing tight. You can now just pull the strap and it will stay locked in place.

Step 3

Some owners like to just run the straps around the roll bar (and in between speaker pod in back) or you can also install the supplied C102 black PVC coated anchors and stainless washers.



Stainless side of washer is next to the bolt's head. It's helpful to start installing the net from the top first but don't full tighten any straps yet. It's not critical which bolt is used on the back and top of speaker pod mounting bracket. We've used the one closest to the outside of the Bronco here.




This is going to the top rearmost strap. (Shown on 2 door)

Step 4


Loosely connect the front top strap.



Repeat for the front lower strap.

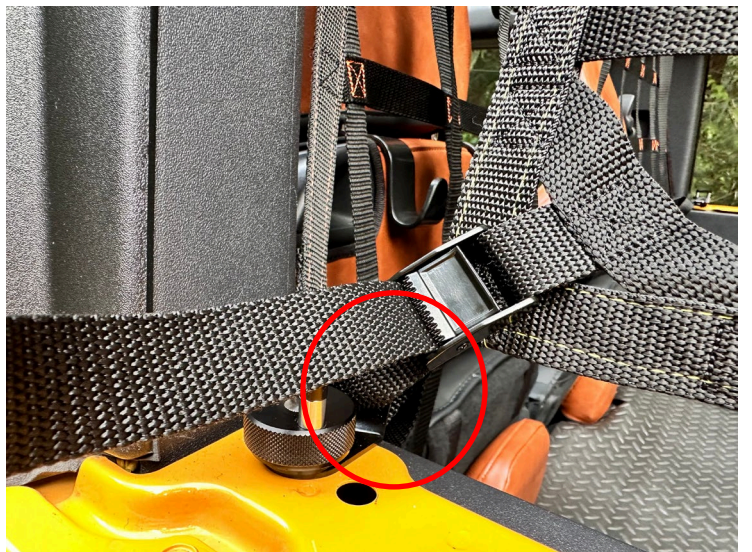

And rear straps.

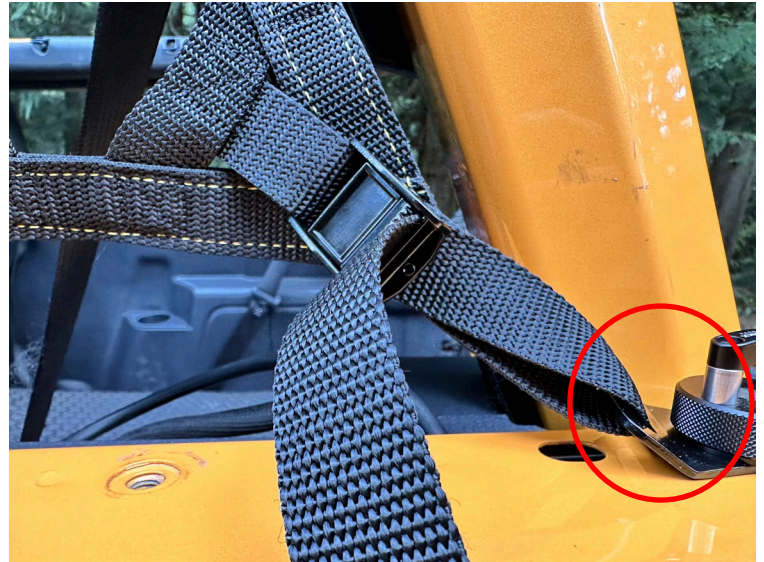

Step 5

Your net should look similar to this now. Adjust and center to make the net flat and even. First two images shown on 2 door.



Step 6

Once all the straps are tight and the net looks even, feed the ends of the straps through the opening under the tab previously pushed for the webbing to insert.

Wrap up the excess ends as detailing in [this video and enjoy!](#)

See video here for details:
<https://vimeo.com/316588617>

4 door:



2 door:



Thank you for purchasing Raingler Nets.
If you have any questions please contact us,
we are here to help!

See all our install videos on Vimeo!
<https://vimeo.com/raingler>

Raingler
NETS & GRIPS