

# Raingler

## NETS & GRIPS

---

### 2021-Newer Ford Bronco 2 door Behind Front Seats Barrier Divider Net Installation

**NOTE:** Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

**IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING**

*Time:* 30-45 minutes

*Paw Level:*



*Tools:*

1. 8 mm socket  
Torx T-50  
Ratchet wrench or Power Drill with Socket. \*Adjustable torque setting highly recommended

## Step 1


Slide the front seats forward. While it is not necessary to drop or remove the top, it may be a little easier to access the top 8mm bolt near the top of the B pillar trim.



## Step 2

Remove the bolt to install the C102 (black square ring w/ mount tab).

Install with the square towards the top

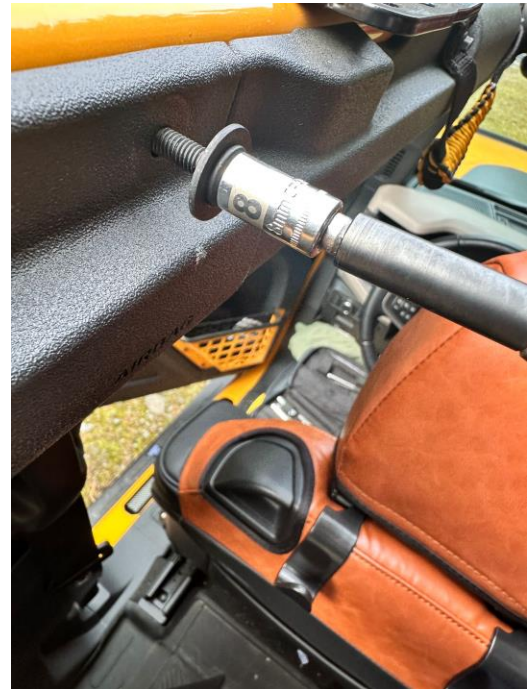

### Step 3

Remove T-50 bolt just behind the B pillar.

Install your hardware with the open side facing to center of vehicle. (Your hardware may be different than shown)



### Step 4

Ready to strap up the net! Start with logo facing towards the back and feed the top straps up through the square hole as shown.



Loosely feed end of strap into buckle by squeezing the cam and sliding strap from underside of buckle and through the teeth.

Do not fully tighten any straps yet.



## Step 5

Install side middle straps in similar fashion.



## Step 6

At bottom of seat track (seats should be forward to see) Bend the tapered end of the lower strap so that it forms a little bend.



Slide the strap in so that it pops up and out towards the rear of the vehicle.



## Step 7

Center and tighten the net. You can adjust this to suit your driving position. Start in the middle normally to center of the net for the most tightness in the center line.



Lower straps (drivers side shown).



Top straps.



Double check that your seats have the range of motion that you desire while you adjust tension. You can also adjust the height of the entire net a few inches to get the best fit for you.



## Step 8


Wrap up the end straps! We leave them long for full adjustment and if you ever need a cargo net to secure your load in back or on a rack, you have a suitable one in a pinch!. See VIDEO HERE for details:

<https://vimeo.com/316588617>




Check out your new Raingler Barrier Net! If you ordered the dog door it will fold down between the seats over the console lid.

Please share any feedback or tag us on your adventure!

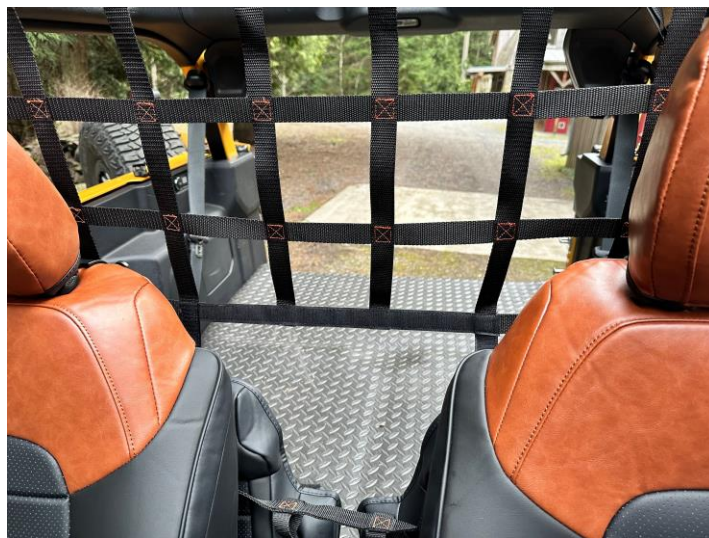

\*You can see we had so much fun with Zeff begging for a ride that we've already started installing our Raingler windows!

Thank you for purchasing Raingler Nets.  
If you have any questions please contact us,  
we are here to help!

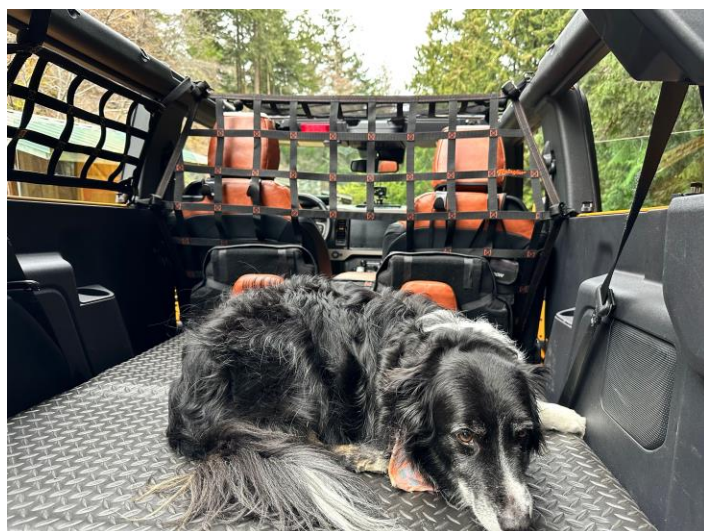

See all our install videos on Vimeo!  
<https://vimeo.com/raingler>

**Raingler**  
NETS & GRIPS