

# 2021-Newer Ford Bronco 4 door Behind 2<sup>nd</sup> Row Seats Rear Barrier Divider Net Installation

NOTE: Many newer models have B-pillar handles and even overhead on the ceiling that can be used for some of the top mounting locations. Check to see if you prefer to use these factory locations as the nets typically have enough adjustment to allow for this option. If your vehicle does not have handles in desired locations or you prefer to install mounting points for better fitment, please follow the below steps.

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

**Time:** approximately 20 minutes **Paw Level:** 



Tools:

1. None

#### Step 1

NOTE: It's often easier to do the installation with the rear seats folded down.

Start at the top and simply wrap the strap over, and around the roll bar and back into the cam buckle on the top corner of the net.

Do not fully tighten the straps until the last step.



### Step 2

The middle strap can attach to the OEM soft top brackets or using the Torx T-50 socket and installing our C1015 chassis anchor plates at the side just behind the C pillar at the front edge of the hardtop:







## Step 3


Attach the lower straps to the D rings on the floor:





## Step 4

Tension straps and center net from top to bottom. Raise the seat up and adjust as needed and then lastly the middle to draw out the net flat. You should be able to access the seat release handles when properly centered.

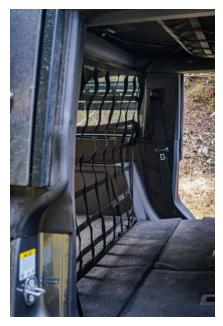





#### Step 5

Tie up the loose ends. You can do this by feeding the end of the strap through the opening of the buckle to create a loop. Feed the strap through the loop, and the strap behind, continue

until no strap is hanging.



See video here for details: https://vimeo.com/316588617

Thank you for purchasing Raingler Nets. If you have any questions please contact us, we are here to help!

See all our install videos on Vimeo! https://vimeo.com/raingler

