

# 2021-Newer Ford Bronco 4 door Full and Rear Overhead Ceiling Net Installation

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

*Time: 15-45* minutes *Paw Level:* 



- Tools:
  - 1. 8 mm Socket
  - 2. Torx T-30
  - 3. Ratchet wrench or power drill with socket. \* Adjustable torque setting highly recommended.

### Step 1

\*Optional: You may find it easier to access and see the OEM bolts along the overhead side bars by folding or lifting the top. Line up your ceiling net to the factory sides to see which bolts you will be attaching to. If you are not sure, it may be helpful to look at the product page of the ceiling net that you are installing. Shown here are the two bolt locations on each side for the over front seat 4 door Bronco ceiling net:



#### Step 2

Remove each 8mm bolt and install the C102 black PVC coated square anchor so that the square is on top when lifted open:





866-905-7625 | Tech@RAINGLER.com | Raingler.com

## Step 3

Once all your mount points are installed, start with your net facing the floor and thread each strap through the square ring's opening from topside to underside and the back into each cam buckle built on to the net. Only loosely tighten straps right now.



## Step 4

Adjust your net so that it lays as flat as possible and is centered in position for the best fit. Generally, it's best to work from the middle of the net towards the front and rear and centering driver and passenger sides to make it even.






# Step 5

Wrap and tuck up the excess ends and shown HERE

Enjoy your newly added overhead storage! There is extra strap should you need to stuff something bulky up off the floors. Never store anything that could be dangerous above heads and always secure with carabineers any objects that could fly forward in a sudden stop!

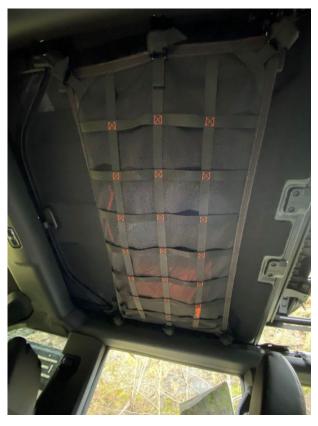

Thank you for purchasing Raingler Nets. If you have any questions please contact us, we are here to help!

See all our install videos on Vimeo! https://vimeo.com/raingler

